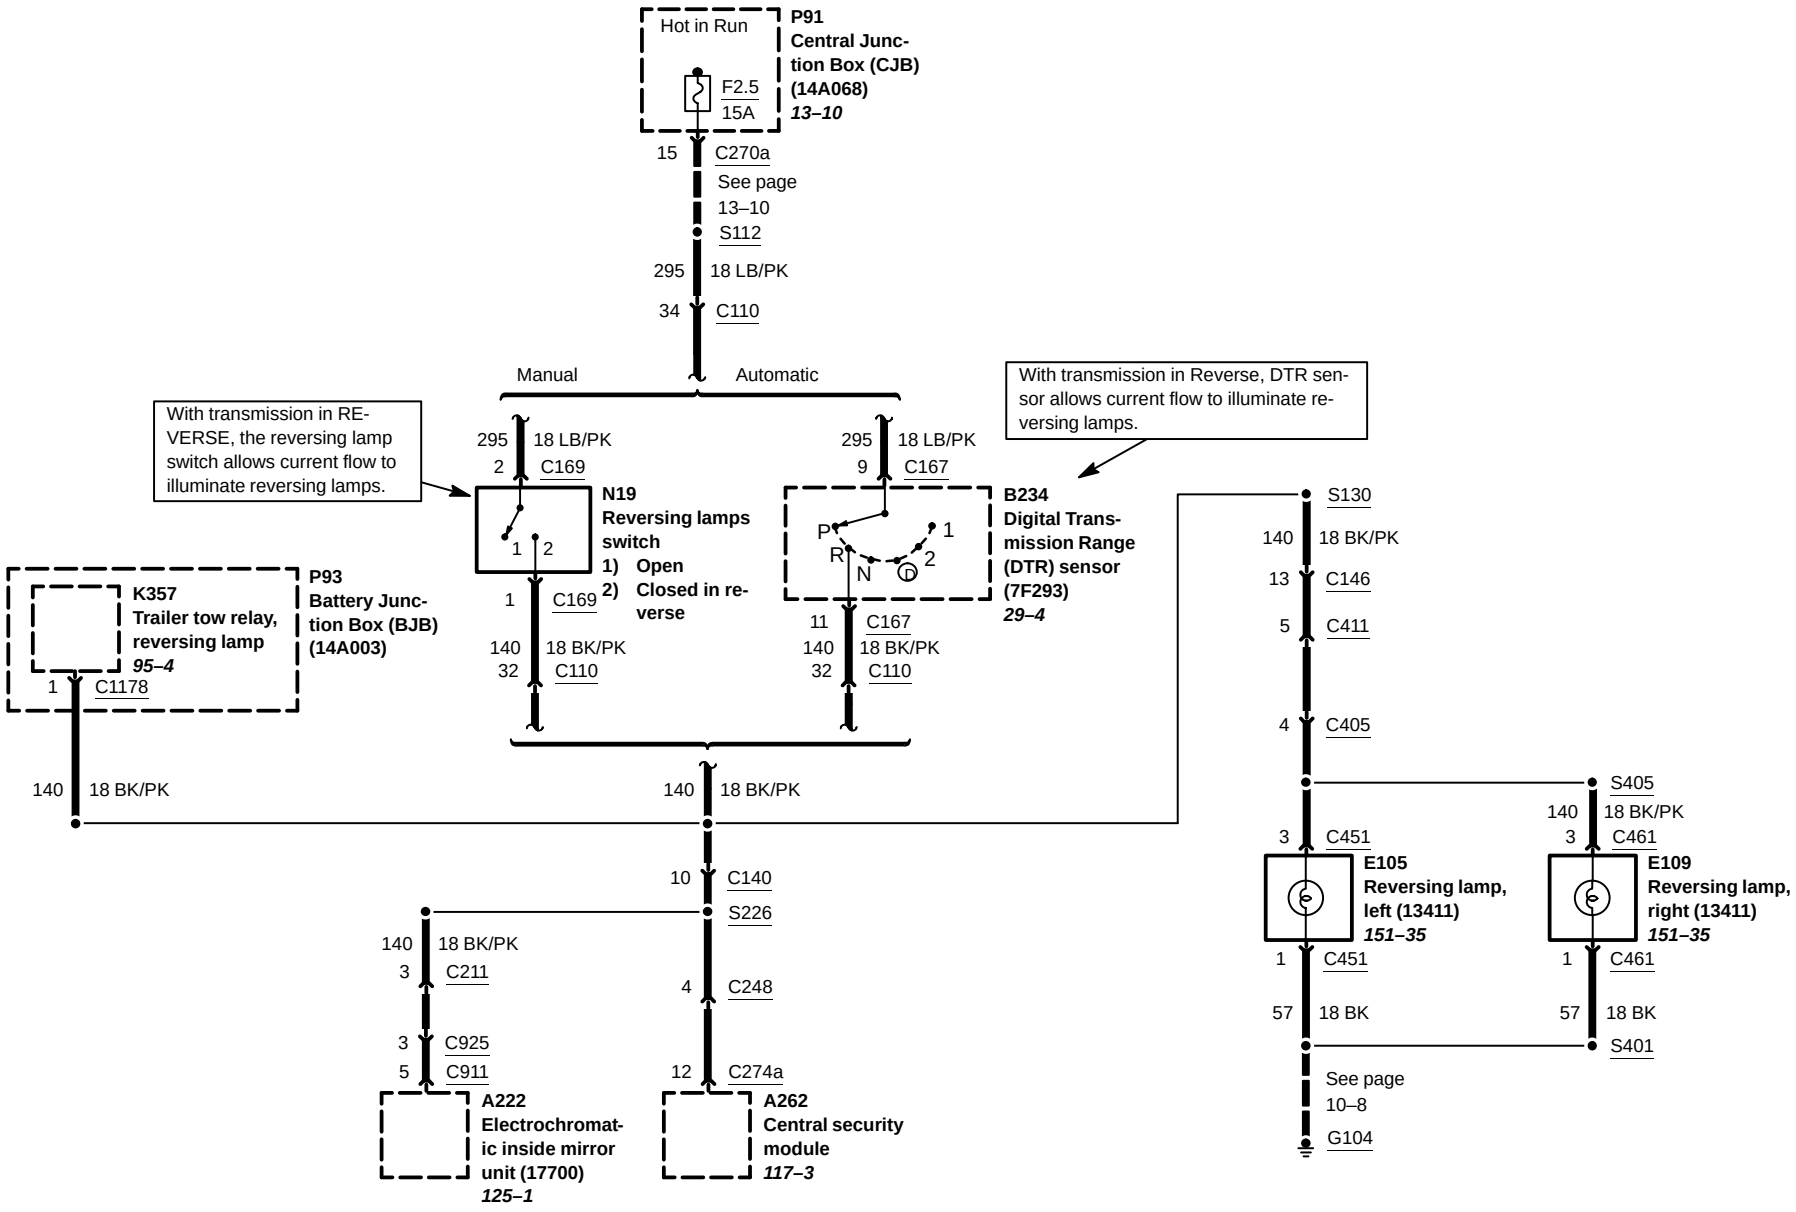
Hot in Run
P91
Central Junction Box (CJB)
(14A068)
13–10
F2.5
15A
15
C270a
See page 13–10
S112
295
18 LB/PK
34
C110
Manual
Automatic
With transmission in REVERSE, the reversing lamp switch allows current flow to illuminate reversing lamps.
With transmission in Reverse, DTR sensor allows current flow to illuminate reversing lamps.
295
18 LB/PK
2
C169
N19
Reversing lamps switch
1) Open
2) Closed in reverse
1
2
1
C169
140
18 BK/PK
32
C110
295
18 LB/PK
9
C167
B234
Digital Transmission Range (DTR) sensor
(7F293)
29–4
P
R
N
D
1
2
11
C167
140
18 BK/PK
32
C110
K357
Trailer tow relay, reversing lamp
95–4
P93
Battery Junction Box (BJB)
(14A003)
1
C1178
140
18 BK/PK
140
18 BK/PK
S130
140
18 BK/PK
13
C146
5
C411
4
C405
3
C451
E105
Reversing lamp, left (13411)
151–35
1
C451
57
18 BK
S405
140
18 BK/PK
3
C461
E109
Reversing lamp, right (13411)
151–35
1
C461
57
18 BK
S401
See page 10–8
G104
10
C140
S226
140
18 BK/PK
3
C211
3
C925
5
C911
A222
Electrochromatic inside mirror unit (17700)
125–1
4
C248
12
C274a
A262
Central security module
117–3