C523

14631

Speaker, left front (18808)

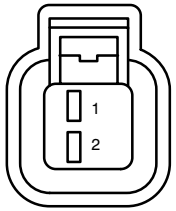

F02069

Pin	Circuit	Circuit function
1	8-MD10 (WH/BK)	Speaker, left front (18808) +
2	10-MD10 (GY/BK)	Speaker, left front (18808) –

C524

14631

Power window motor, driver side front (23395)

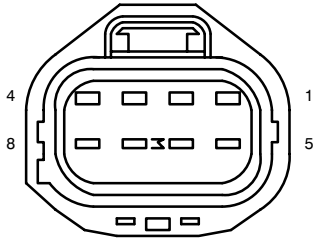

F08054

Pin	Circuit	Circuit function
1	8-AJ42 (WH/GN)	one–touch up, one–touch down, switch sense
2	10-AJ43B (GY/VT)	Data link, bus negative
3	7S-AJ41 (YE/BK)	Up, switch sense
4	7S-AJ40 (YE/GN)	Down, switch sense
5	–	not used
6	8-AJ43B (WH/BU)	Data link, bus positive
7	30-AJ80 (RD)	Voltage supplied at all times (overload protected)
8	31-AJ80 (BK)	Ground

C525

14631

Door lock unit, driver side front (5421813)

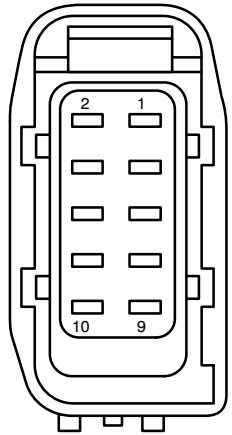

F10061

Pin	Circuit	Circuit function
1	–	not used
2	33-AA10 (YE/BK)	Door lock motor, driver side +/ –
3	–	not used
4	–	not used
5	31S-AA79 (BK/WH)	Door lock unit, driver side front (5421813) - Reset
6	31-AA58B (BK)	Ground
7	31S-AA78 (BK/BU)	Door lock unit, driver side front (5421813) - Set
8	31S-GL46 (BK/YE)	Door ajar switch, left front, switch sense
9	–	not used
10	32-AA11 (WH/VT)	Door lock motor, driver side +/ –