-60

C445
14401

F14016

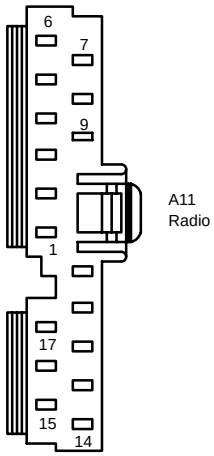

A11
Radio

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	9-MD23A (BN/YE)	Sensor signal return (reference/ground)
6	8-MD23 (WH/GN)	Sensor signal
	8-MD24 (WH/GN)	Sensor signal (X–direction, forward, upward)
7	–	not used
8	–	not used
9	–	not used
10	8-MD19 (WH/RD)	Sensor signal
11	8-MD26 (WH/BK)	Sensor signal
12	9-MD26 (BN/YE)	Sensor signal return (reference/ground)
13	1-MD23 (WH/BK)	Audio signal positive
14	2-MD23 (GY/BK)	Audio signal negative
15	15S-MD15 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
17	91S-JA14B (BK/GN)	Ground, switched

C448

14405

E9
Lamp assembly, left rear

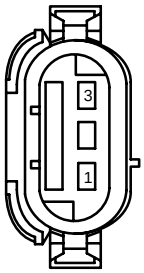

F03099

Pin	Circuit	Circuit Function
1	31-LF23 (BK)	Ground
2	29S-LF11 (OG/WH)	Voltage supplied at all times (overload protected), switched
3	15S-LG14A (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched

C449

14405

E10
Lamp assembly, right rear

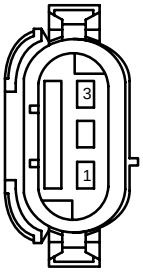

F03099

Pin	Circuit	Circuit Function
1	31-LF24 (BK)	Ground
2	29S-LF20 (OG)	Voltage supplied at all times (overload protected), switched
3	15S-LG21 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched