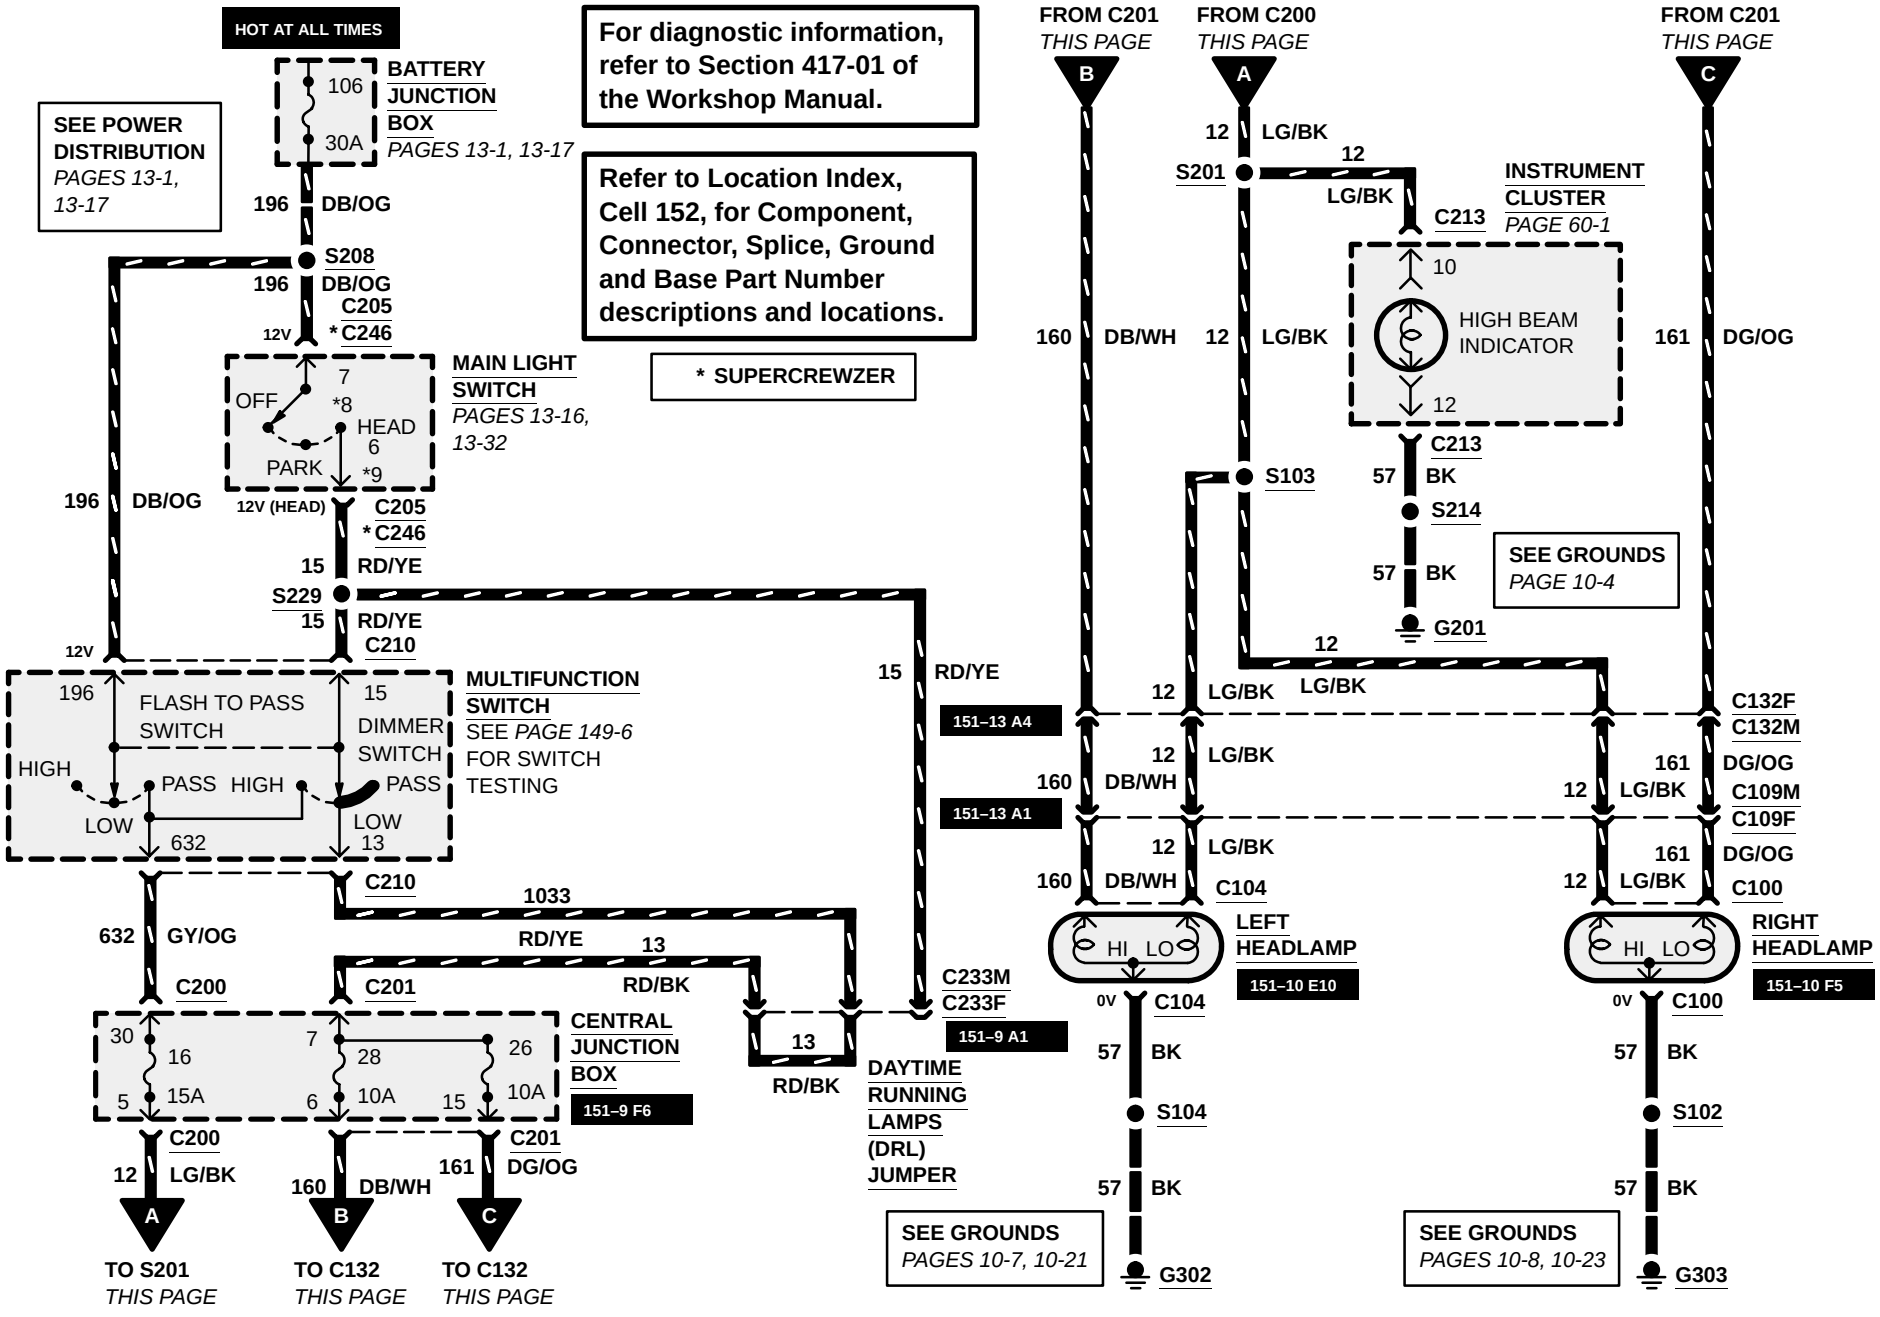
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGES 13-1, 13-17
106
30A
SEE POWER DISTRIBUTION
PAGES 13-1, 13-17
196 DB/OG
S208
196 DB/OG
C205
12V
* C246
MAIN LIGHT SWITCH
PAGES 13-16, 13-32
OFF
PARK
HEAD
7
*8
6
*9
12V (HEAD)
196 DB/OG
C205
* C246
15 RD/YE
S229
15 RD/YE
C210
12V
MULTIFUNCTION SWITCH
SEE PAGE 149-6 FOR SWITCH TESTING
196
FLASH TO PASS SWITCH
15
DIMMER SWITCH
HIGH
PASS
HIGH
PASS
LOW
632
LOW
13
C210
632 GY/OG
C200
1033
RD/YE
13
RD/BK
C201
CENTRAL JUNCTION BOX
151–9 F6
30
16
5
15A
7
28
6
10A
26
15
10A
C200
12 LG/BK
A
TO S201
THIS PAGE
C201
160 DB/WH
B
TO C132
THIS PAGE
161 DG/OG
C
TO C132
THIS PAGE
13
RD/BK
C233M
C233F
151–9 A1
DAYTIME RUNNING LAMPS (DRL) JUMPER
15 RD/YE
151–13 A4
151–13 A1
For diagnostic information, refer to Section 417-01 of the Workshop Manual.
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.
* SUPERCREWZER
FROM C201
THIS PAGE
B
FROM C200
THIS PAGE
A
FROM C201
THIS PAGE
C
12 LG/BK
S201
12
LG/BK
C213
INSTRUMENT CLUSTER
PAGE 60-1
10
HIGH BEAM INDICATOR
12
160 DB/WH
12 LG/BK
161 DG/OG
C213
S103
57 BK
S214
57 BK
G201
SEE GROUNDS
PAGE 10-4
12
LG/BK
12 LG/BK
C132F
C132M
12 LG/BK
160 DB/WH
161 DG/OG
12 LG/BK
C109M
C109F
12 LG/BK
160 DB/WH
C104
161 DG/OG
12 LG/BK
C100
HI LO
LEFT HEADLAMP
151–10 E10
HI LO
RIGHT HEADLAMP
151–10 F5
0V
C104
57 BK
S104
57 BK
G302
0V
C100
57 BK
S102
57 BK
G303
SEE GROUNDS
PAGES 10-7, 10-21
SEE GROUNDS
PAGES 10-8, 10-23