C500

CAB Harness

Door ajar switch, left front

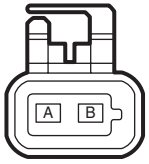

3579018C1

Pin	Circuit	Circuit Function
A	344 (BK/YE)	Door ajar switch to GEM
B	57 (BK)	Ground circuit

C501

CAB Harness

Door speaker, left front

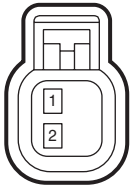

3579014C1

Pin	Circuit	Circuit Function
1	804 (OG/LG)	Speaker voice coil feed-front (left channel)
2	813 (LB/WH)	Speaker switch ground to left front speaker

C502

CAB Harness

Door power window motor, left front

3578625C1

Pin	Circuit	Circuit Function
1	992 (WH/BK)	Master window control "up" command to motor
2	996 (OG/WH)	LH window motor current sense "low" to module, GEM-input

C503

CAB Harness

Window switch #1, left (with crew cab)

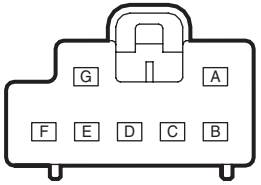

3578653C1

Pin	Circuit	Circuit Function
A	170 (RD/LB)	Window regulator switch feed
B	992 (WH/BK)	Master window control "up" command to window motor
C	991 (TN/LB)	Master window control "down" command to module, GEM-input
D	995 (GY)	LH window motor current sense "high" to module, GEM-input
E	313 (WH/YE)	LH front window regulator sw. to RH front window regulator motor
F	314 (TN/LB)	LH front window regulator sw. to RH front window regulator motor
G	57 (BK)	Ground circuit

C504

CAB Harness

Door switch #2, left front (with crew cab)

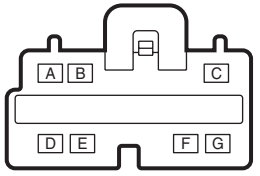

3579017C1

Pin	Circuit	Circuit Function
A	296 (WH/VT)	Illumination feed
B	57 (BK)	Ground circuit
C	193 (YE/LG)	Window regulator relay feed
D	320 (RD/BK)	LH front window regulator sw. to RH rear window regulator motor
E	319 (YE/BK)	LH front window regulator sw. to RH rear window regulator motor
F	316 (YE/LB)	LH front window regulator sw. to LH rear window regulator motor
G	317 (GY/OG)	LH front window regulator sw. to LH rear window regulator motor