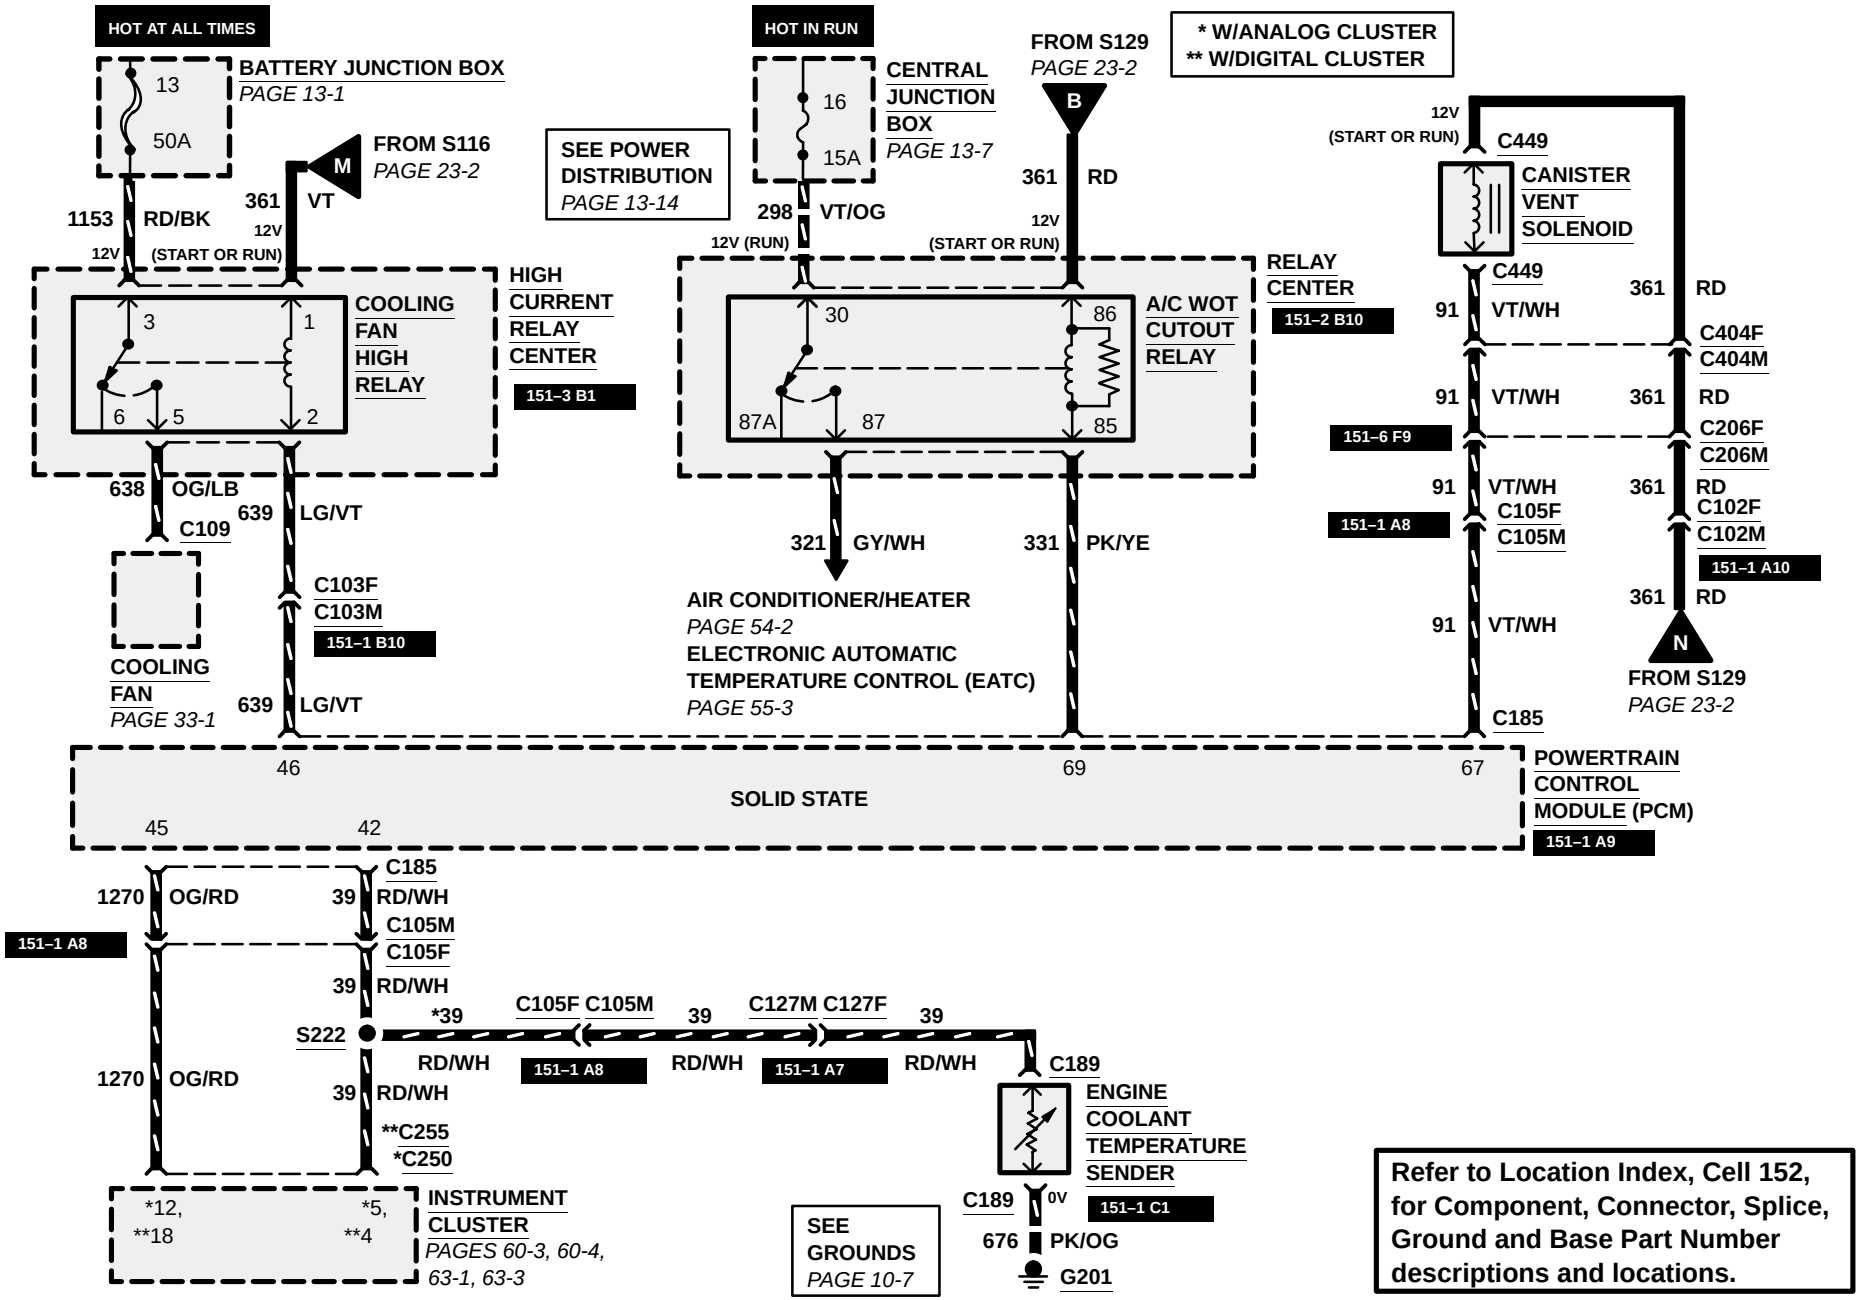
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-1
13
50A
1153 RD/BK
12V
12V (START OR RUN)
361 VT
FROM S116
PAGE 23-2
M
SEE POWER DISTRIBUTION
PAGE 13-14
HOT IN RUN
CENTRAL JUNCTION BOX
PAGE 13-7
16
15A
298 VT/OG
12V (RUN)
FROM S129
PAGE 23-2
B
361 RD
12V (START OR RUN)
* W/ANALOG CLUSTER
** W/DIGITAL CLUSTER
12V (START OR RUN)
C449
CANISTER VENT SOLENOID
HIGH CURRENT RELAY CENTER
151–3 B1
COOLING FAN HIGH RELAY
3
1
6
5
2
RELAY CENTER
151–2 B10
A/C WOT CUTOUT RELAY
30
86
87A
87
85
C449
91 VT/WH
361 RD
C404F
C404M
91 VT/WH
361 RD
151–6 F9
C206F
C206M
91 VT/WH
361 RD
151–1 A8
C105F
C105M
C102F
C102M
151–1 A10
361 RD
N
FROM S129
PAGE 23-2
638 OG/LB
C109
639 LG/VT
C103F
C103M
151–1 B10
COOLING FAN
PAGE 33-1
639 LG/VT
321 GY/WH
331 PK/YE
AIR CONDITIONER/HEATER
PAGE 54-2
ELECTRONIC AUTOMATIC TEMPERATURE CONTROL (EATC)
PAGE 55-3
91 VT/WH
C185
46
69
67
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–1 A9
45
42
1270 OG/RD
39 RD/WH
C185
C105M
C105F
151–1 A8
39 RD/WH
S222
*39
C105F C105M
39
C127M C127F
39
RD/WH
151–1 A8
RD/WH
151–1 A7
RD/WH
C189
1270 OG/RD
39 RD/WH
**C255
*C250
ENGINE COOLANT TEMPERATURE SENDER
C189
0V
151–1 C1
676 PK/OG
G201
*12,
**18
*5,
**4
INSTRUMENT CLUSTER
PAGES 60-3, 60-4, 63-1, 63-3
SEE GROUNDS
PAGE 10-7
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.