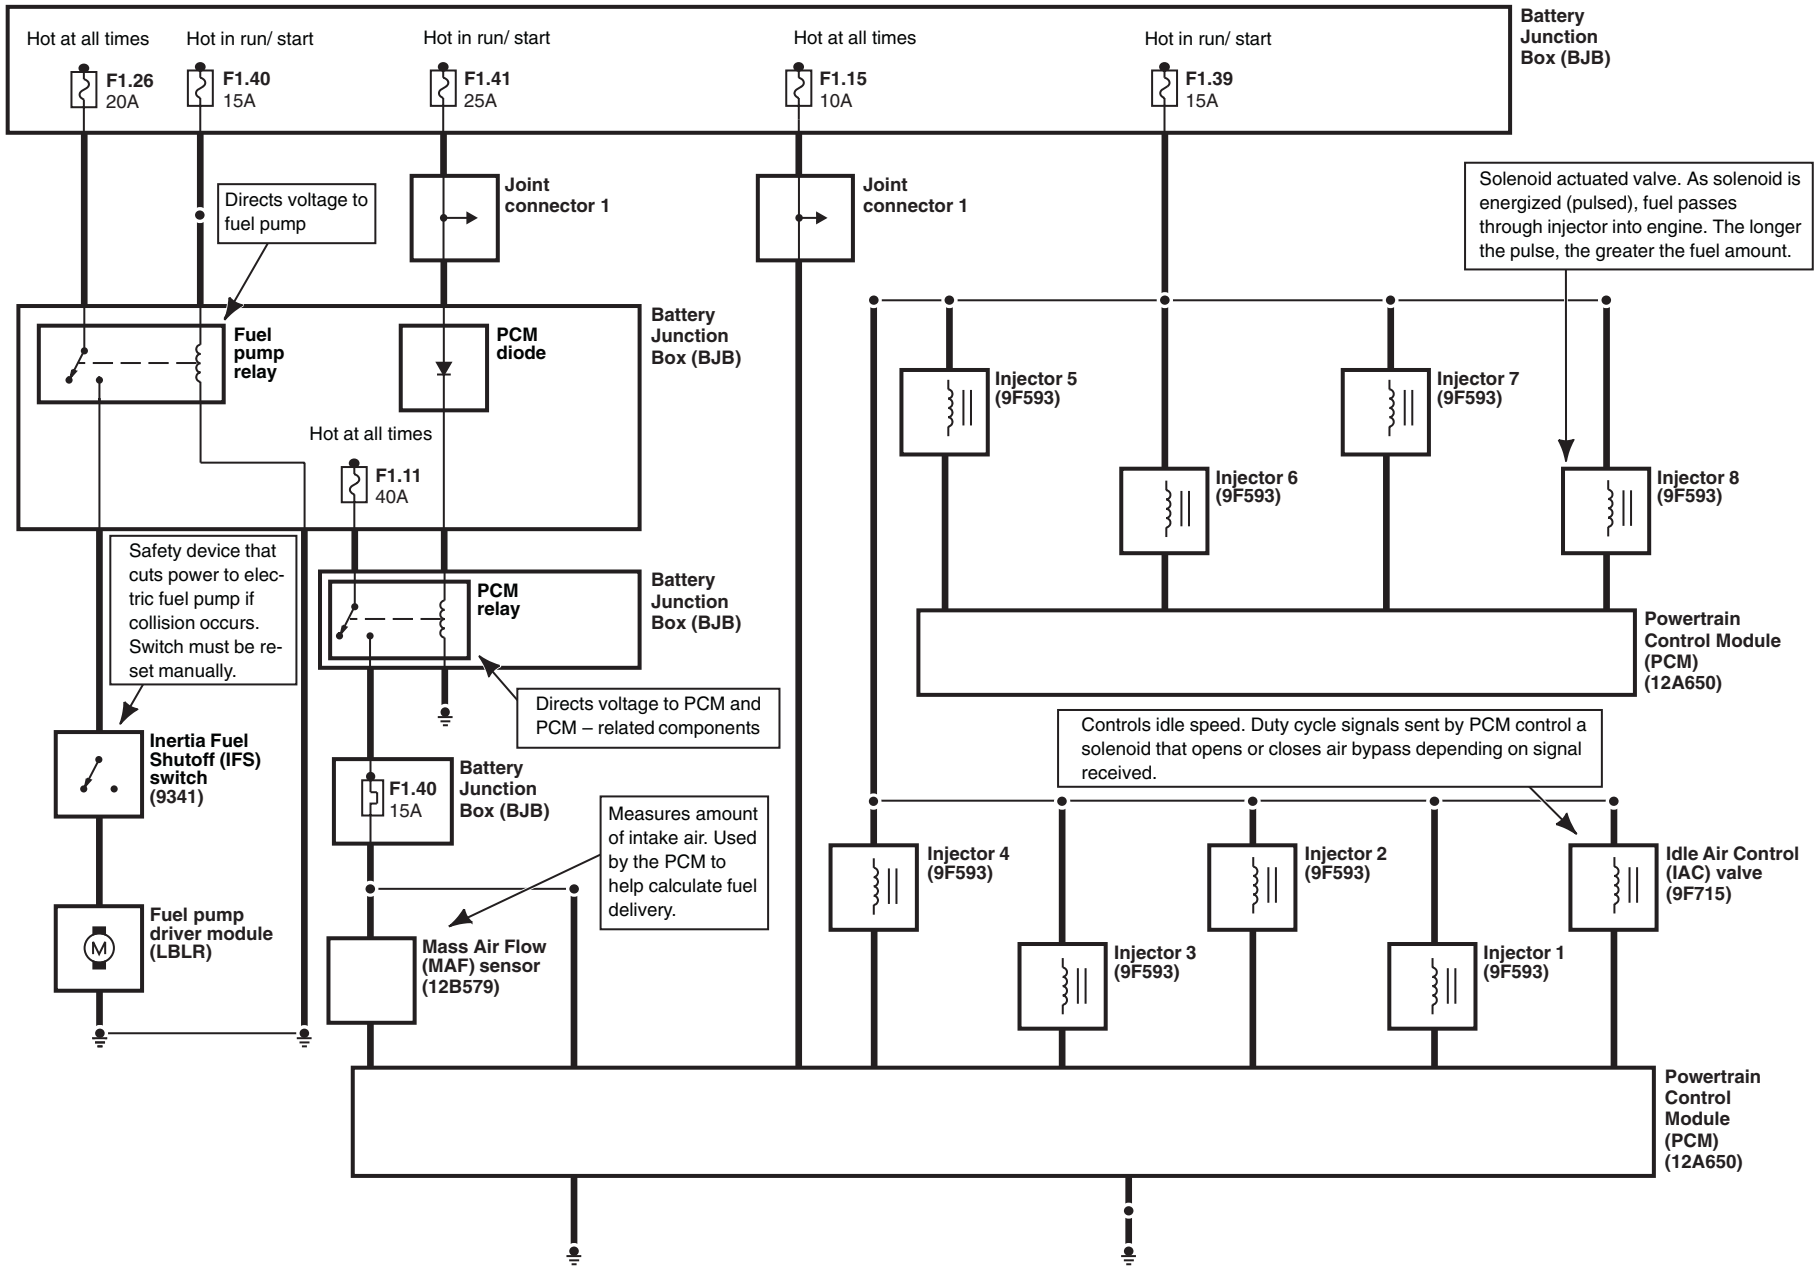
Hot at all times
Hot in run/ start
Hot in run/ start
Hot at all times
Hot in run/ start
Battery Junction Box (BJB)
F1.26 20A
F1.40 15A
F1.41 25A
F1.15 10A
F1.39 15A
Directs voltage to fuel pump
Joint connector 1
Joint connector 1
Solenoid actuated valve. As solenoid is energized (pulsed), fuel passes through injector into engine. The longer the pulse, the greater the fuel amount.
Fuel pump relay
PCM diode
Battery Junction Box (BJB)
Hot at all times
F1.11 40A
Injector 5 (9F593)
Injector 7 (9F593)
Injector 6 (9F593)
Injector 8 (9F593)
Safety device that cuts power to electric fuel pump if collision occurs. Switch must be reset manually.
PCM relay
Battery Junction Box (BJB)
Powertrain Control Module (PCM) (12A650)
Directs voltage to PCM and PCM – related components
Controls idle speed. Duty cycle signals sent by PCM control a solenoid that opens or closes air bypass depending on signal received.
Inertia Fuel Shutoff (IFS) switch (9341)
F1.40 15A
Battery Junction Box (BJB)
Measures amount of intake air. Used by the PCM to help calculate fuel delivery.
Injector 4 (9F593)
Injector 2 (9F593)
Idle Air Control (IAC) valve (9F715)
Fuel pump driver module (LBLR)
Mass Air Flow (MAF) sensor (12B579)
Injector 3 (9F593)
Injector 1 (9F593)
Powertrain Control Module (PCM) (12A650)