3.9L

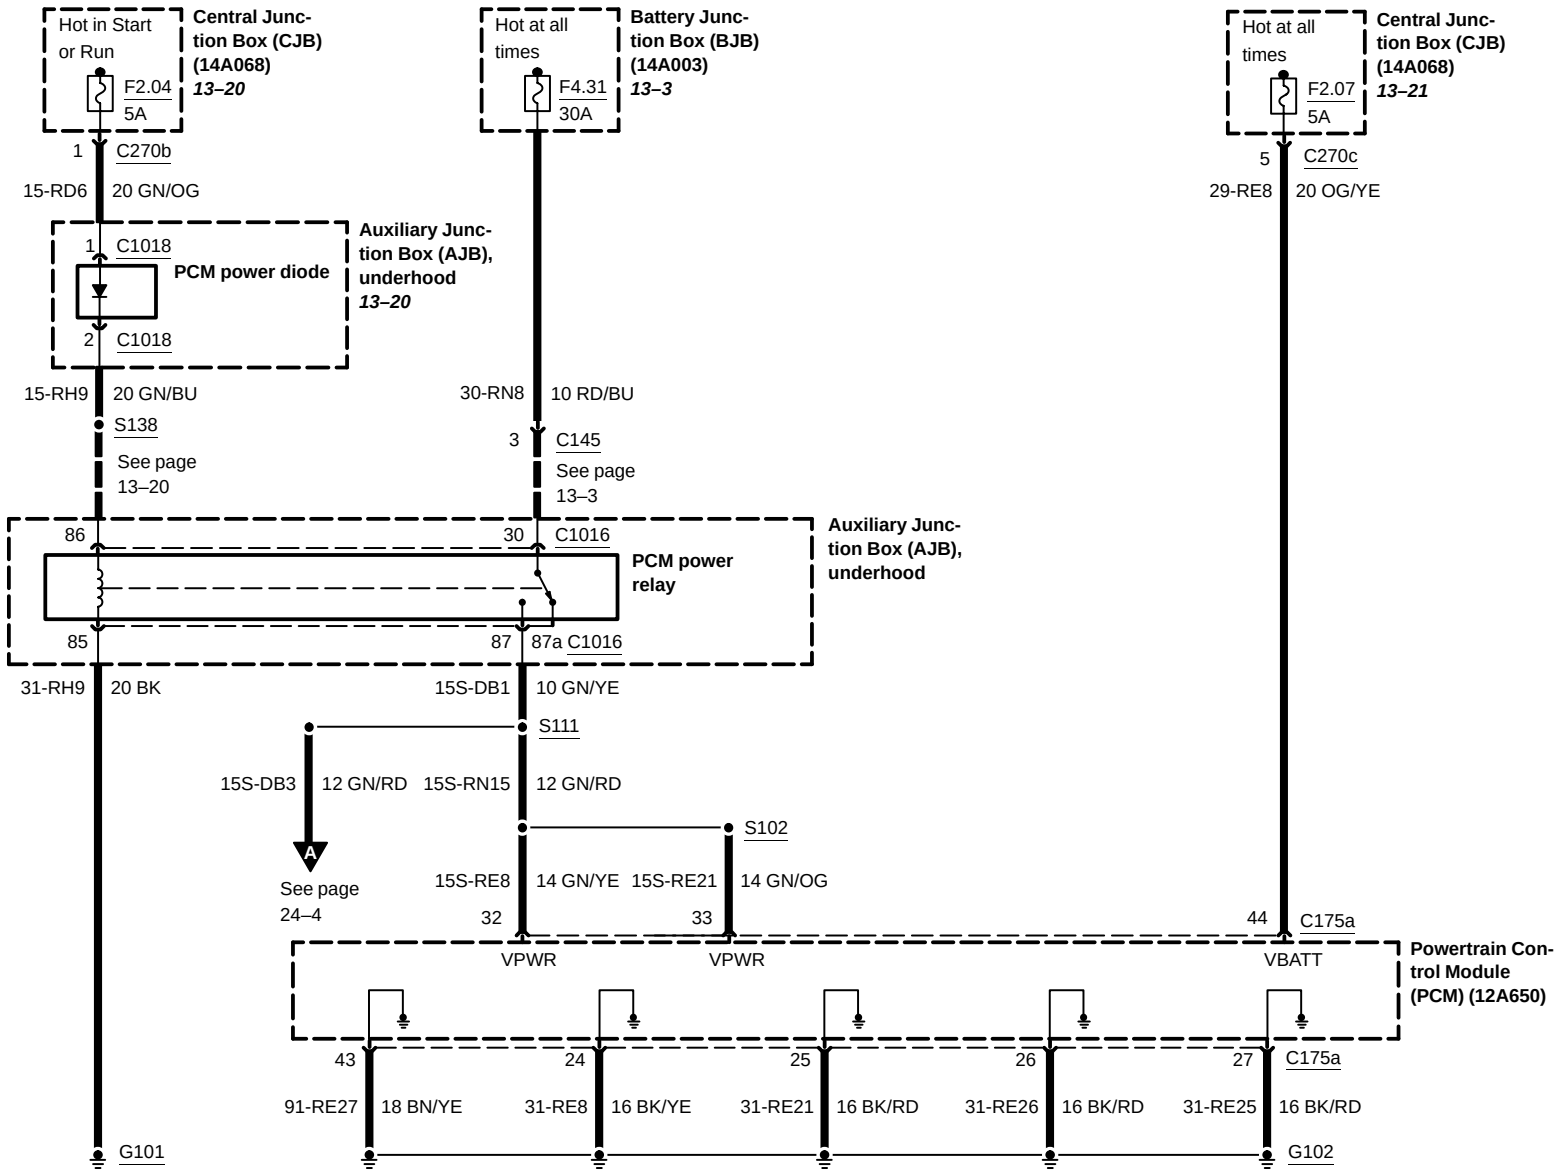
Hot in Start or Run
F2.04
5A
Central Junction Box (CJB) (14A068) 13–20
Hot at all times
F4.31
30A
Battery Junction Box (BJB) (14A003) 13–3
Hot at all times
F2.07
5A
Central Junction Box (CJB) (14A068) 13–21
1 C270b
15-RD6 20 GN/OG
5 C270c
29-RE8 20 OG/YE
1 C1018
PCM power diode
2 C1018
Auxiliary Junction Box (AJB), underhood 13–20
15-RH9 20 GN/BU
30-RN8 10 RD/BU
S138
See page 13–20
3 C145
See page 13–3
86
30 C1016
PCM power relay
85
87
87a C1016
Auxiliary Junction Box (AJB), underhood
31-RH9 20 BK
15S-DB1 10 GN/YE
S111
15S-DB3 12 GN/RD
15S-RN15 12 GN/RD
A
See page 24–4
S102
15S-RE8 14 GN/YE
15S-RE21 14 GN/OG
32
33
44 C175a
VPWR
VPWR
VBATT
Powertrain Control Module (PCM) (12A650)
43
24
25
26
27 C175a
91-RE27 18 BN/YE
31-RE8 16 BK/YE
31-RE21 16 BK/RD
31-RE26 16 BK/RD
31-RE25 16 BK/RD
G101
G102