C717 (GN)

14014

Window adjust switch, left rear (14A412)

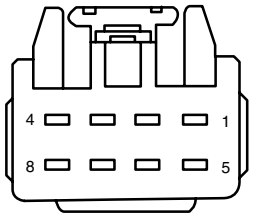

F08295

Pin	Circuit	Circuit function
1	57 (BK)	Ground, Illumination
2	319 (YE/BK)	Window switch, feed, left rear, Down
3	881 (BN)	Window motor, feed, Down
4	193 (YE/LG)	Window lockout, control
5	19 (LB/RD)	Illumination, Power
6	–	not used
7	882 (BN/YE)	Window motor, feed, Up
8	320 (RD/BK)	Window switch, feed, left rear, Up

C800 (BK)

* with rear radio control unit

14A005

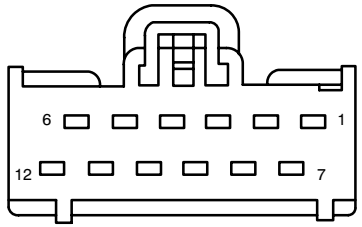

F12137

(1) 802 (OG/RD) *825 (TN/LG)
(2) 803 (BN/PK)
(3) 319 (YE/BK)
(4) 118 (PK/OG)
(5) 346 (BK/WH)
(6) 19 (LB/RD)
(7) 320 (RD/BK)
(8) 193 (YE/LG)
(9) 117 (PK/BK)
(10) 57 (BK)
(11) –
(12) –

14014

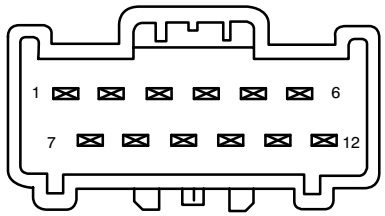

F12169

(1) 827 (TN/WH)
(2) 801 (TN/YE)
(3) 319 (YE/BK)
(4) 118 (PK/OG)
(5) 346 (BK/WH)
(6) 19 (LB/RD)
(7) 320 (RD/BK)
(8) 193 (YE/LG)
(9) 117 (PK/BK)
(10) 57 (BK)
(11) –
(12) –