C780 (BK)

12A522

Y33
Electr. Vacuum Regulator (EVR) solenoid valve

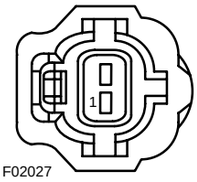

F02027

Pin	Circuit	Circuit Function
1	15-PA25 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
2	91S-PA25 (BK/GN)	Ground, switched

C782 (BK)

14A584

M122
Window regulator motor, driver side front



F02051

Pin	Circuit	Circuit Function
1	33-AJ26 (YE)	Switched between: Battery voltage, Ground or Open
2	32-AJ26 (WH)	Switched between: Battery voltage, Ground or Open

C783 (BK)

14A584

M123
Window regulator motor, passenger side front



F02051

Pin	Circuit	Circuit Function
1	33-AJ17 (YE/VT)	Switched between: Battery voltage, Ground or Open
2	32-AJ17 (WH/VT)	Switched between: Battery voltage, Ground or Open

C784a (BK)

14A584

M132
Window regulator motor, LH side rear



F02051

Pin	Circuit	Circuit Function
1	33-AJ31 (YE/RD)	Switched between: Battery voltage, Ground or Open
2	32-AJ31 (WH/RD)	Switched between: Battery voltage, Ground or Open

C784b (BK)

14A584

M133
Window regulator motor, RH side rear



F02051

Pin	Circuit	Circuit Function
1	33-AJ31 (YE/RD)	Switched between: Battery voltage, Ground or Open
2	32-AJ31 (WH/RD)	Switched between: Battery voltage, Ground or Open

C789 (GY)

14401

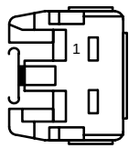

F02032

Pin	Circuit	Circuit Function
1	15-FA18 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)
2	31S-FA18 (BK/RD)	Ground, switched

C794 (BK)

14A584

N137
Door lock/unlock switch, driver

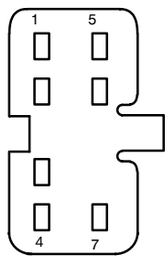

F07016

Pin	Circuit	Circuit Function
1	31S-AA39A (BK/YE)	Ground, switched
2	31-AA34 (BK)	Ground
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	31S-AA85A (BK/RD)	Ground, switched