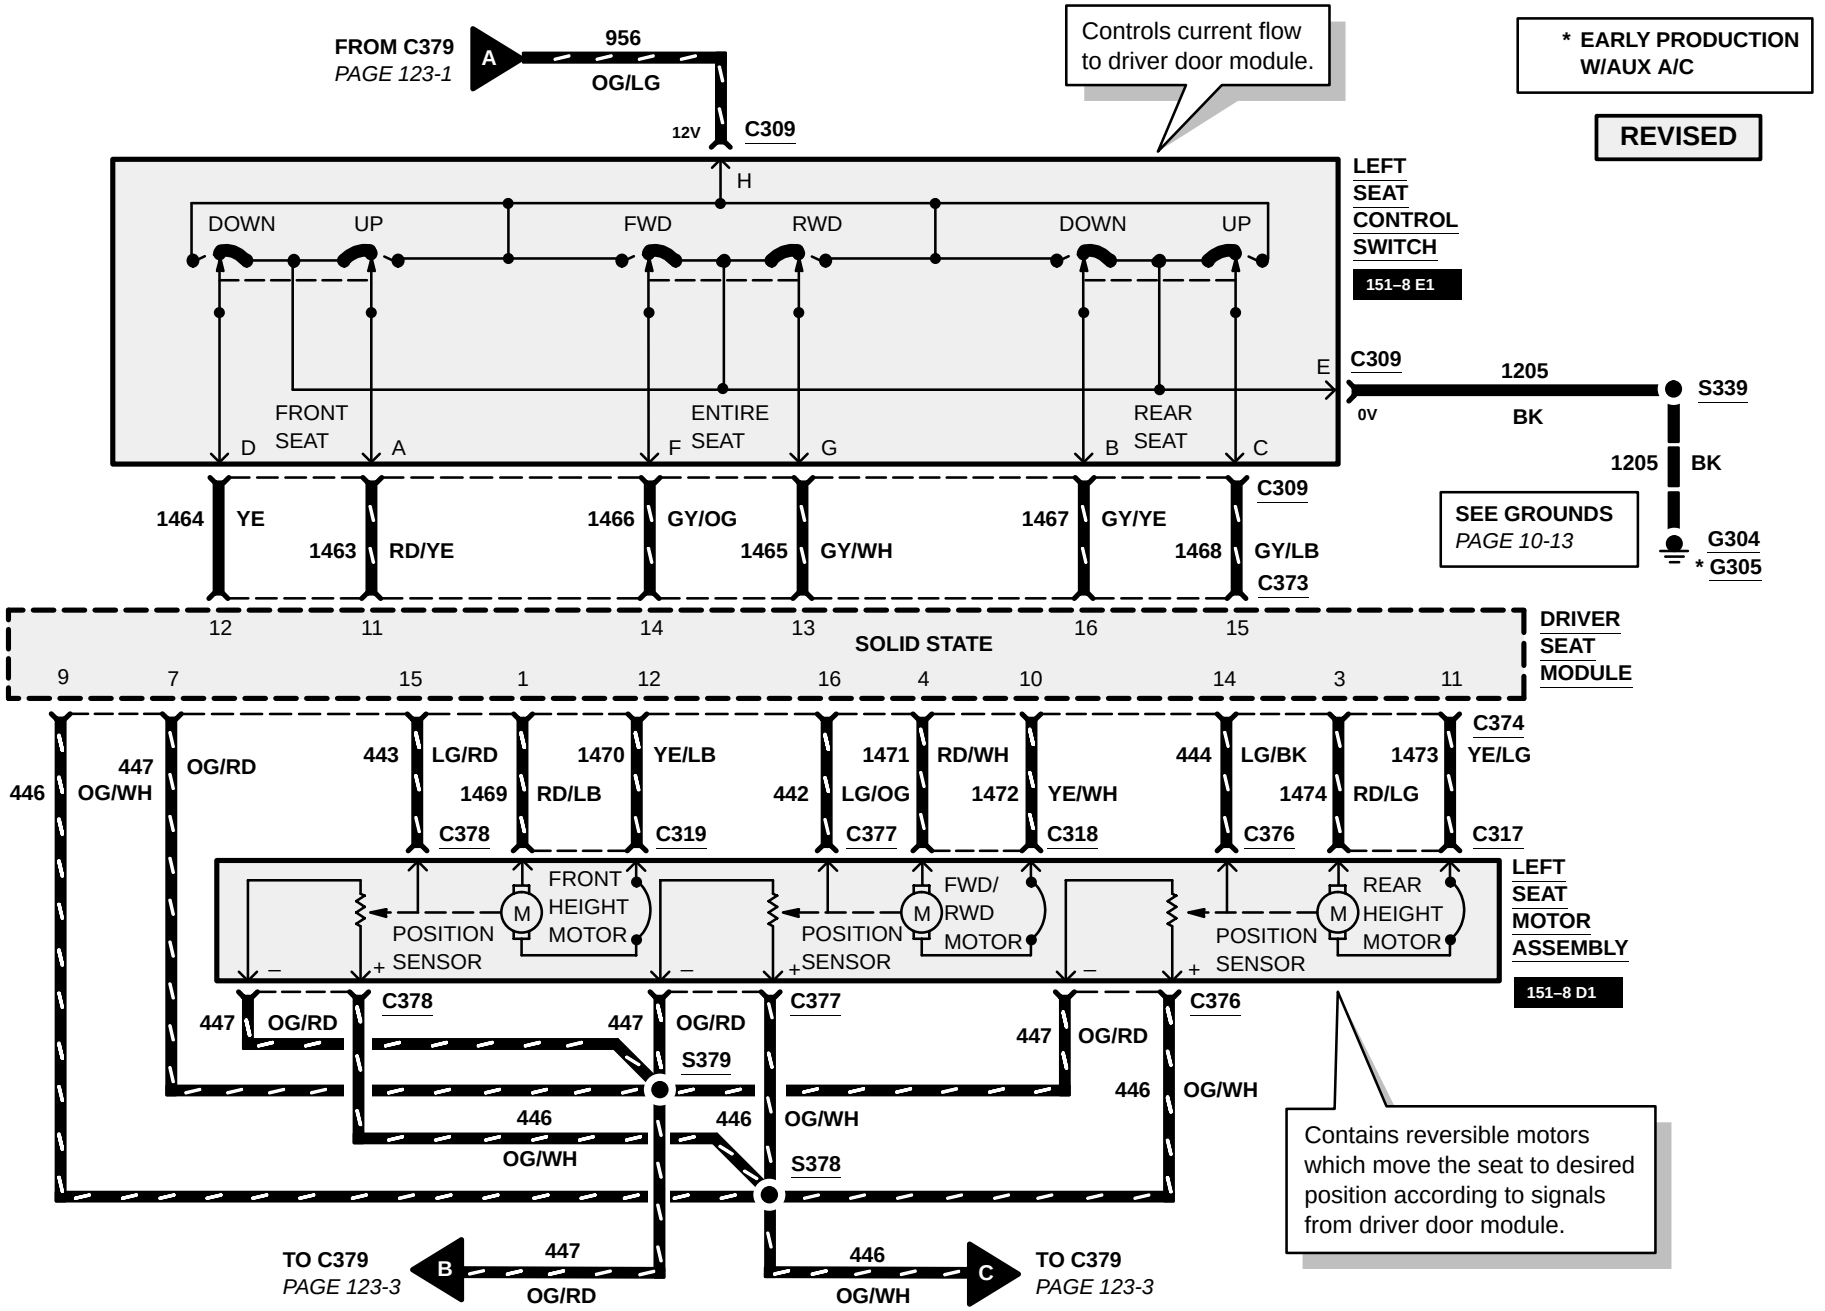
FROM C379
PAGE 123-1
A
956
OG/LG
12V
C309
Controls current flow to driver door module.
* EARLY PRODUCTION W/AUX A/C
REVISED
H
DOWN
UP
FWD
RWD
DOWN
UP
LEFT SEAT CONTROL SWITCH
151–8 E1
E
FRONT SEAT
ENTIRE SEAT
REAR SEAT
D
A
F
G
B
C
C309
1205
S339
0V
BK
1205
BK
SEE GROUNDS
PAGE 10-13
G304
* G305
1464 YE
1463 RD/YE
1466 GY/OG
1465 GY/WH
1467 GY/YE
1468 GY/LB
C309
C373
12
11
14
13
16
15
SOLID STATE
DRIVER SEAT MODULE
9
7
15
1
12
16
4
10
14
3
11
C374
YE/LG
446
447 OG/WH
OG/RD
443 LG/RD
1469 RD/LB
1470 YE/LB
442 LG/OG
1471 RD/WH
1472 YE/WH
444 LG/BK
1474 RD/LG
1473
C378
C319
C377
C318
C376
C317
FRONT HEIGHT MOTOR
FWD/ RWD MOTOR
REAR HEIGHT MOTOR
POSITION SENSOR
POSITION SENSOR
POSITION SENSOR
LEFT SEAT MOTOR ASSEMBLY
151–8 D1
C378
C377
C376
447 OG/RD
447 OG/RD
S379
447 OG/RD
446 OG/WH
446 OG/WH
446 OG/WH
S378
Contains reversible motors which move the seat to desired position according to signals from driver door module.
TO C379
PAGE 123-3
B
447
OG/RD
446
OG/WH
C
TO C379
PAGE 123-3