## C359

### 14B084

A224
Heated seat mod-
ule, driver side front

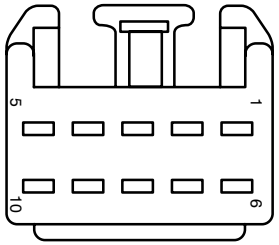


F10063

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1061 (BN/LB) | Seat cushion heater, driver side, Sensor, return |
| 2 | 1020 (DG/VT) | Climate controlled seat module |
| 3 | 1064 (YE/LB) | Seat cushion heater, driver side, heater, feed |
| 4 | 1153 (RD/BK) | Voltage supplied at all times (overload protected) |
| 5 | 1067 (VT/LB) | Seat back heater, driver side, heater, return |
| 6 | 295 (LB/PK) | Voltage in Run (overload protected) |
| 7 | 1060 (BK/LB) | Seat cushion heater, driver side, Sensor, feed |
| 8 | 57 (BK) | Ground |
| 9 | – | not used |
| 10 | 461 (OG) | Electronic Automatic Temperature Control (EATC) mod-ule (19980), to, Heated seat module, driver side front |

## C360

### 14B084

N216
Seat adjust switch,
driver side front
(14A701)

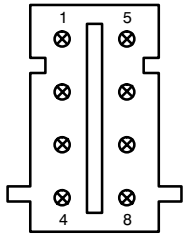


F08245

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 981 (RD/WH) | Fwd/Rwd motor, Forward |
| 3 | 566 (DG) | Voltage supplied at all times (overload protected) |
| 4 | 983 (RD/LG) | Rear height motor, Up |
| 5 | 980 (YE/WH) | Fwd/Rwd motor, Rearward |
| 6 | 979 (RD/LB) | Front height motor, Up |
| 7 | 982 (YE/LG) | Rear height motor, Down |
| 8 | 990 (YE/LB) | Front height motor, Down |