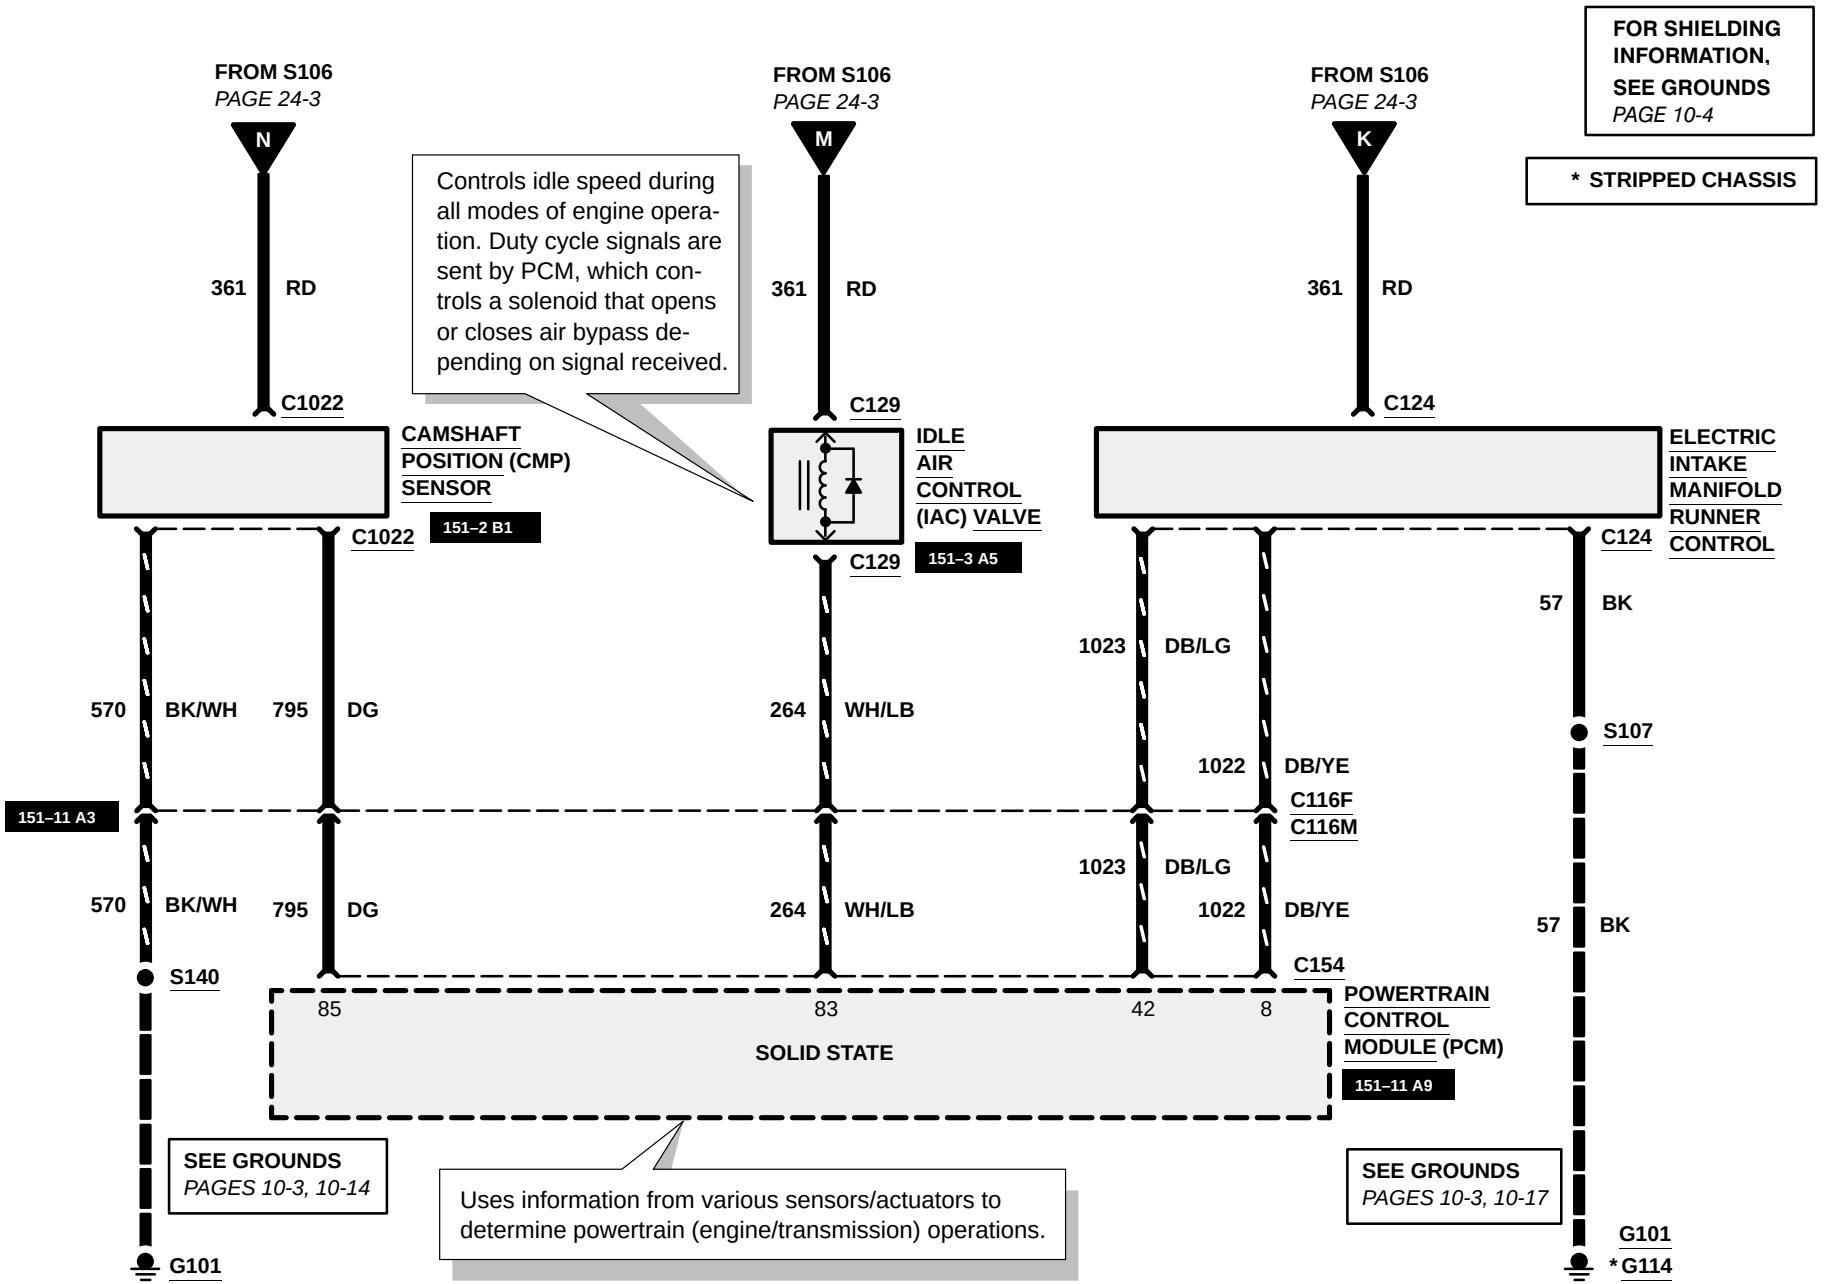
FOR SHIELDING INFORMATION, SEE GROUNDS PAGE 10-4
* STRIPPED CHASSIS
FROM S106 PAGE 24-3
N
361 RD
C1022
CAMSHAFT POSITION (CMP) SENSOR
151–2 B1
C1022
570 BK/WH
795 DG
151–11 A3
570 BK/WH
795 DG
S140
G101
SEE GROUNDS PAGES 10-3, 10-14
Controls idle speed during all modes of engine operation. Duty cycle signals are sent by PCM, which controls a solenoid that opens or closes air bypass depending on signal received.
FROM S106 PAGE 24-3
M
361 RD
C129
IDLE AIR CONTROL (IAC) VALVE
151–3 A5
C129
264 WH/LB
264 WH/LB
FROM S106 PAGE 24-3
K
361 RD
C124
ELECTRIC INTAKE MANIFOLD RUNNER CONTROL
C124
57 BK
S107
1023 DB/LG
1022 DB/YE
C116F
C116M
1023 DB/LG
1022 DB/YE
57 BK
C154
85
83
42
8
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
SEE GROUNDS PAGES 10-3, 10-17
G101
*G114
Uses information from various sensors/actuators to determine powertrain (engine/transmission) operations.