C393b

VF3862

A267
Rear Seat Entertainment (RSE) module

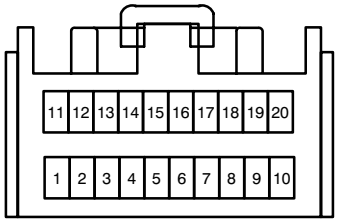

F20039

Pin	Circuit	Circuit function
1	115 (VT)	CD changer (18D806) – Left +
2	125 (LG/RD)	CD changer (18D806) – Left –
3	135 (GY)	CD changer (18D806) – Right +
4	145 (OG/BK)	CD changer (18D806) – Right –
5	48	Shield – Video display
6	205 (BK/WH)	Video cassette player – Video display +
7	225 (DB/RD)	Video cassette player – audio, Left +
8	245 (YE/RD)	Video cassette player – audio, Right +
9	95 (DG)	Video display +
10	255 (PK/DG)	Video cassette player, control
11	155 (RD)	Audio unit (18808) – Left +
12	165 (WH)	Audio unit (18808) – Left –
13	175 (OG)	Audio unit (18808) – Right +
14	185 (YE)	Audio unit (18808) – Right –
15	48	Shield – Audio unit (18808)
16	195 (OG/BK)	Video cassette player – Video display –
17	215 (PK/BK)	Video cassette player – audio, Left –
18	235 (VT/YE)	Video cassette player – audio, Right –
19	105 (DB)	Video display –
20	48	Shield – CD changer (18D806)

C395

14N104

A269
Video display



F06243

Pin	Circuit	Circuit function
1	RC02 (OG)	Voltage in Run or Accessory (overload protected)
2	–	not used
3	RCE6 (BK)	Ground
4	RC96	Shield
5	RC10 (RD)	Video display +
6	RC11 (GN)	Video display –