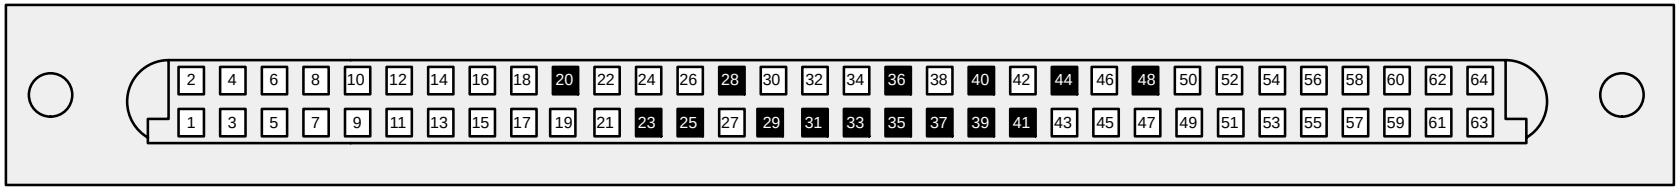

C4025

COMPUVALVE MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	G001 (WH)	Coolant Solenoid	16	G085 (WH)	Bus (–)
2	G002 (WH)	Power (Battery)	17	G017 (WH)	Injector #1
3	G003 (WH)	Lock Off Solenoid	18	G115 (WH)	DIGIN6
4	G004 (WH)	LPG Sender	19	G019 (WH)	Injector #2
5	G005 (WH)	Fuel Pump Cutoff Relay	20	–	NOT USED
6	G006 (WH)	LPG Sender	21	G021 (WH)	Signal Return
7	G007 (WH)	Cold Start Heater Relay	22	G022 (WH)	TPS Return
8	G008 (WH)	LPG Sender	23	–	NOT USED
9	G009 (WH)	B (+) Ignition	24	G024 (WH)	NOT USED
10	G010 (WH)	HO2S #21	25	–	NOT USED
11	G011 (WH)	B (+) Ignition	26	G026 (WH)	NOT USED
12	G084 (WH)	MIL	27	G027 (WH)	TACH
13	G013 (WH)	B (+) Ignition	28	–	NOT USED
14	G086 (WH)	Bus (+)	29	–	NOT USED
15	G015 (WH)	Dash Reset Relay	30	G030 (WH)	HO2S #11

PIN	CIRCUIT	CIRCUIT FUNCTION
31	–	NOT USED
32	G032 (WH)	Signal Return
33	–	NOT USED
34	G034 (WH)	NOT USED
35	–	NOT USED
36	–	NOT USED
37	–	NOT USED
38	G038 (WH)	NOT USED
39	–	NOT USED
40	–	NOT USED
41	–	NOT USED
42	G042 (WH)	Fuel Pump
43	G043 (WH)	Fuel Level Input
44	–	NOT USED
45	G045 (WH)	Injector #3
46	G046 (WH)	Indicator Light Switch Return
47	G047 (WH)	Injector #4
48	–	NOT USED
49	G049 (WH)	Injector #5
50	G050 (WH)	Indicator Light Switch Return
51	G051 (WH)	Injector #6
52	G052 (WH)	NOT USED
53	G053 (WH)	Injector #7
54	G054 (WH)	NOT USED
55	G055 (WH)	Injector #8
56	G056 (WH)	NOT USED
57	G057 (BK)	Ground
58	G058 (WH)	NOT USED
59	G059 (BK)	Ground
60	G060 (WH)	NOT USED
61	G061 (BK)	Ground
62	G062 (BK)	Ground
63	G063 (BK)	Ground
64	G064 (BK)	Ground

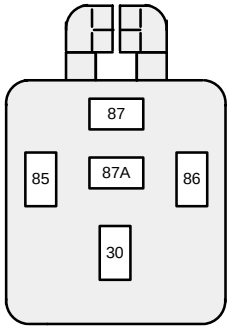

C4059

LPG SENDER RELAY #1

PIN	CIRCUIT	CIRCUIT FUNCTION
30	G006 (DG)	FSP
85	G119 (BK)	Relay Ground
86	G115 (WH)	Tank Select
87	G006-2 (LG)	FSP-2
87A	G006-1 (DG)	FSP-1