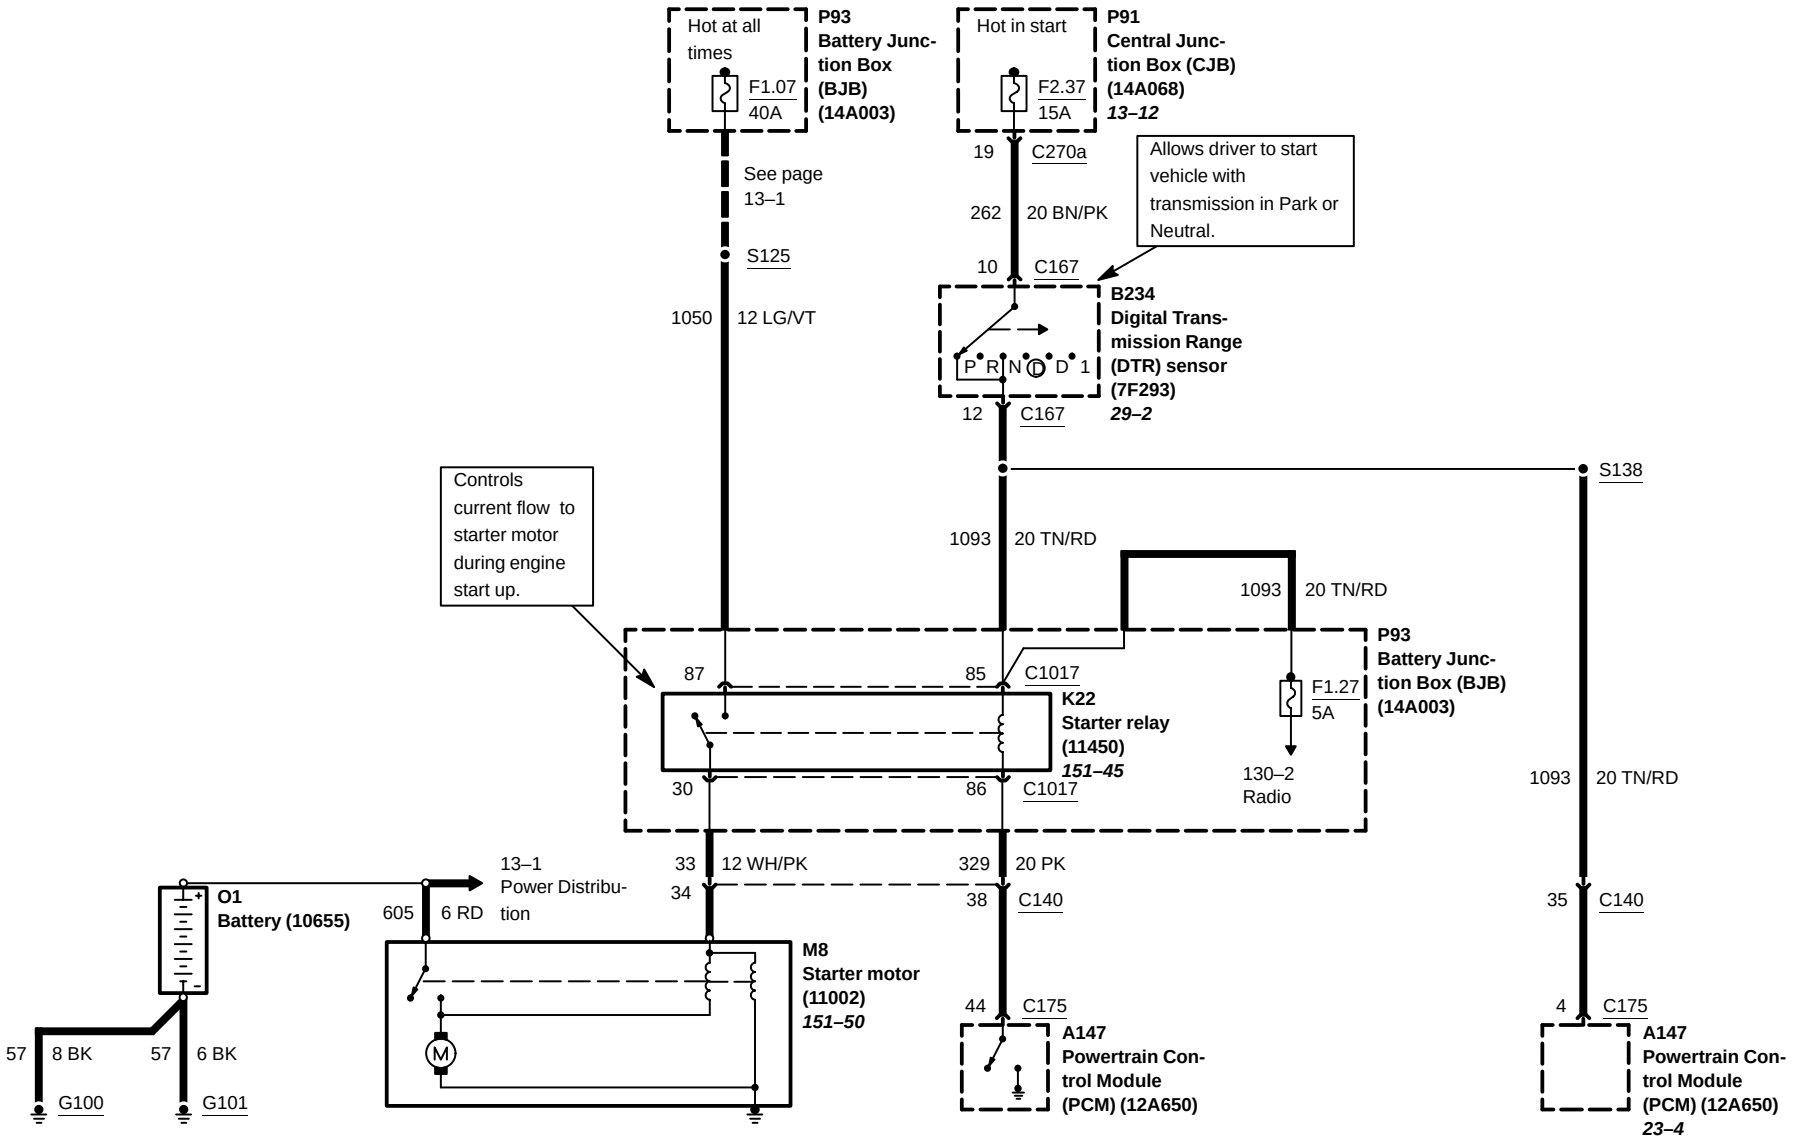
Hot at all times
P93 Battery Junction Box (BJB) (14A003)
F1.07 40A
Hot in start
P91 Central Junction Box (CJB) (14A068) 13–12
F2.37 15A
19 C270a
See page 13–1
262 20 BN/PK
Allows driver to start vehicle with transmission in Park or Neutral.
S125
10 C167
1050 12 LG/VT
B234 Digital Transmission Range (DTR) sensor (7F293) 29–2
P R N D D 1
12 C167
S138
Controls current flow to starter motor during engine start up.
1093 20 TN/RD
1093 20 TN/RD
P93 Battery Junction Box (BJB) (14A003)
87
85 C1017
K22 Starter relay (11450) 151–45
F1.27 5A
30
86 C1017
130–2 Radio
1093 20 TN/RD
13–1 Power Distribution
33 12 WH/PK
329 20 PK
34
38 C140
35 C140
O1 Battery (10655)
605 6 RD
M8 Starter motor (11002) 151–50
44 C175
A147 Powertrain Control Module (PCM) (12A650)
4 C175
A147 Powertrain Control Module (PCM) (12A650) 23–4
57 8 BK
57 6 BK
G100
G101