# Seat adjust switch, passenger side front

## Schematic

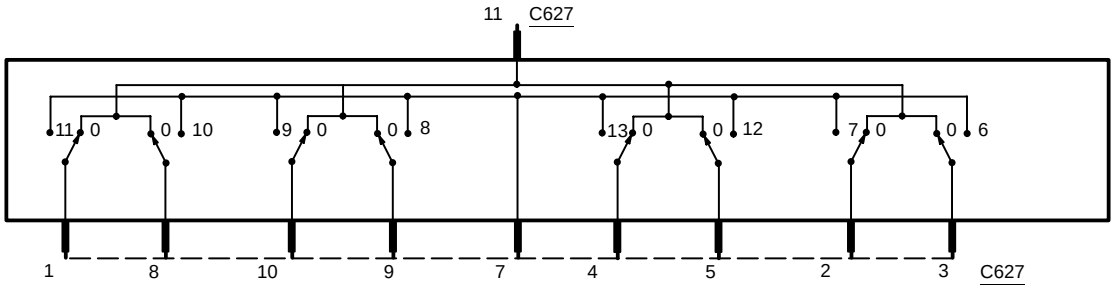


**Seat adjust switch, passenger side front**
**0) Rest**
**6) Backrest forward**
**7) Backrest rearward**
**8) Seat forward**
**9) Seat rearward**
**10) Front height up**
**11) Front height down**
**12) Rear height up**
**13) Rear height down**

## Component testing procedure

| Circuit to test | Connect self–powered test light or ohmmeter to terminals | Move switch to these positions | A good switch will indicate |
|---|---|---|---|
| **Power and Ground Checks Before Any Other Tests** | 11 and 1, 2, 3, 4, 5, 8, 9, 10 | Rest | Closed circuit |
| | 7 and 1, 2, 3, 4, 5, 8, 9, 10 | Rest | Open circuit |
| **Front height circuit** | 11 and 1<br>7 and 8 | Up | Closed circuit |
| | | Down | Open circuit |
| | 11 and 8<br>7 and 1 | Up | Open circuit |
| | | Down | Closed circuit |
| **Rear height circuit** | 11 and 4<br>7 and 5 | Up | Closed circuit |
| | | Down | Open circuit |
| | 11 and 5<br>7 and 4 | Up | Open circuit |
| | | Down | Closed circuit |
| **Forward/rearward circuit** | 11 and 9<br>7 and 10 | Forward | Open circuit |
| | | Rearward | Closed circuit |
| | 11 and 10<br>7 and 9 | Forward | Closed circuit |
| | | Rearward | Open circuit |
| **Backrest circuit** | 11 and 3<br>7 and 2 | Forward | Open circuit |
| | | Rearward | Closed circuit |
| | 11 and 2<br>7 and 3 | Forward | Closed circuit |
| | | Rearward | Open circuit |

## Terminals

**C627**

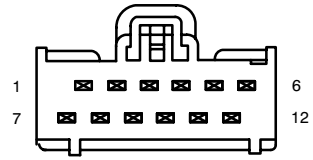


F12137