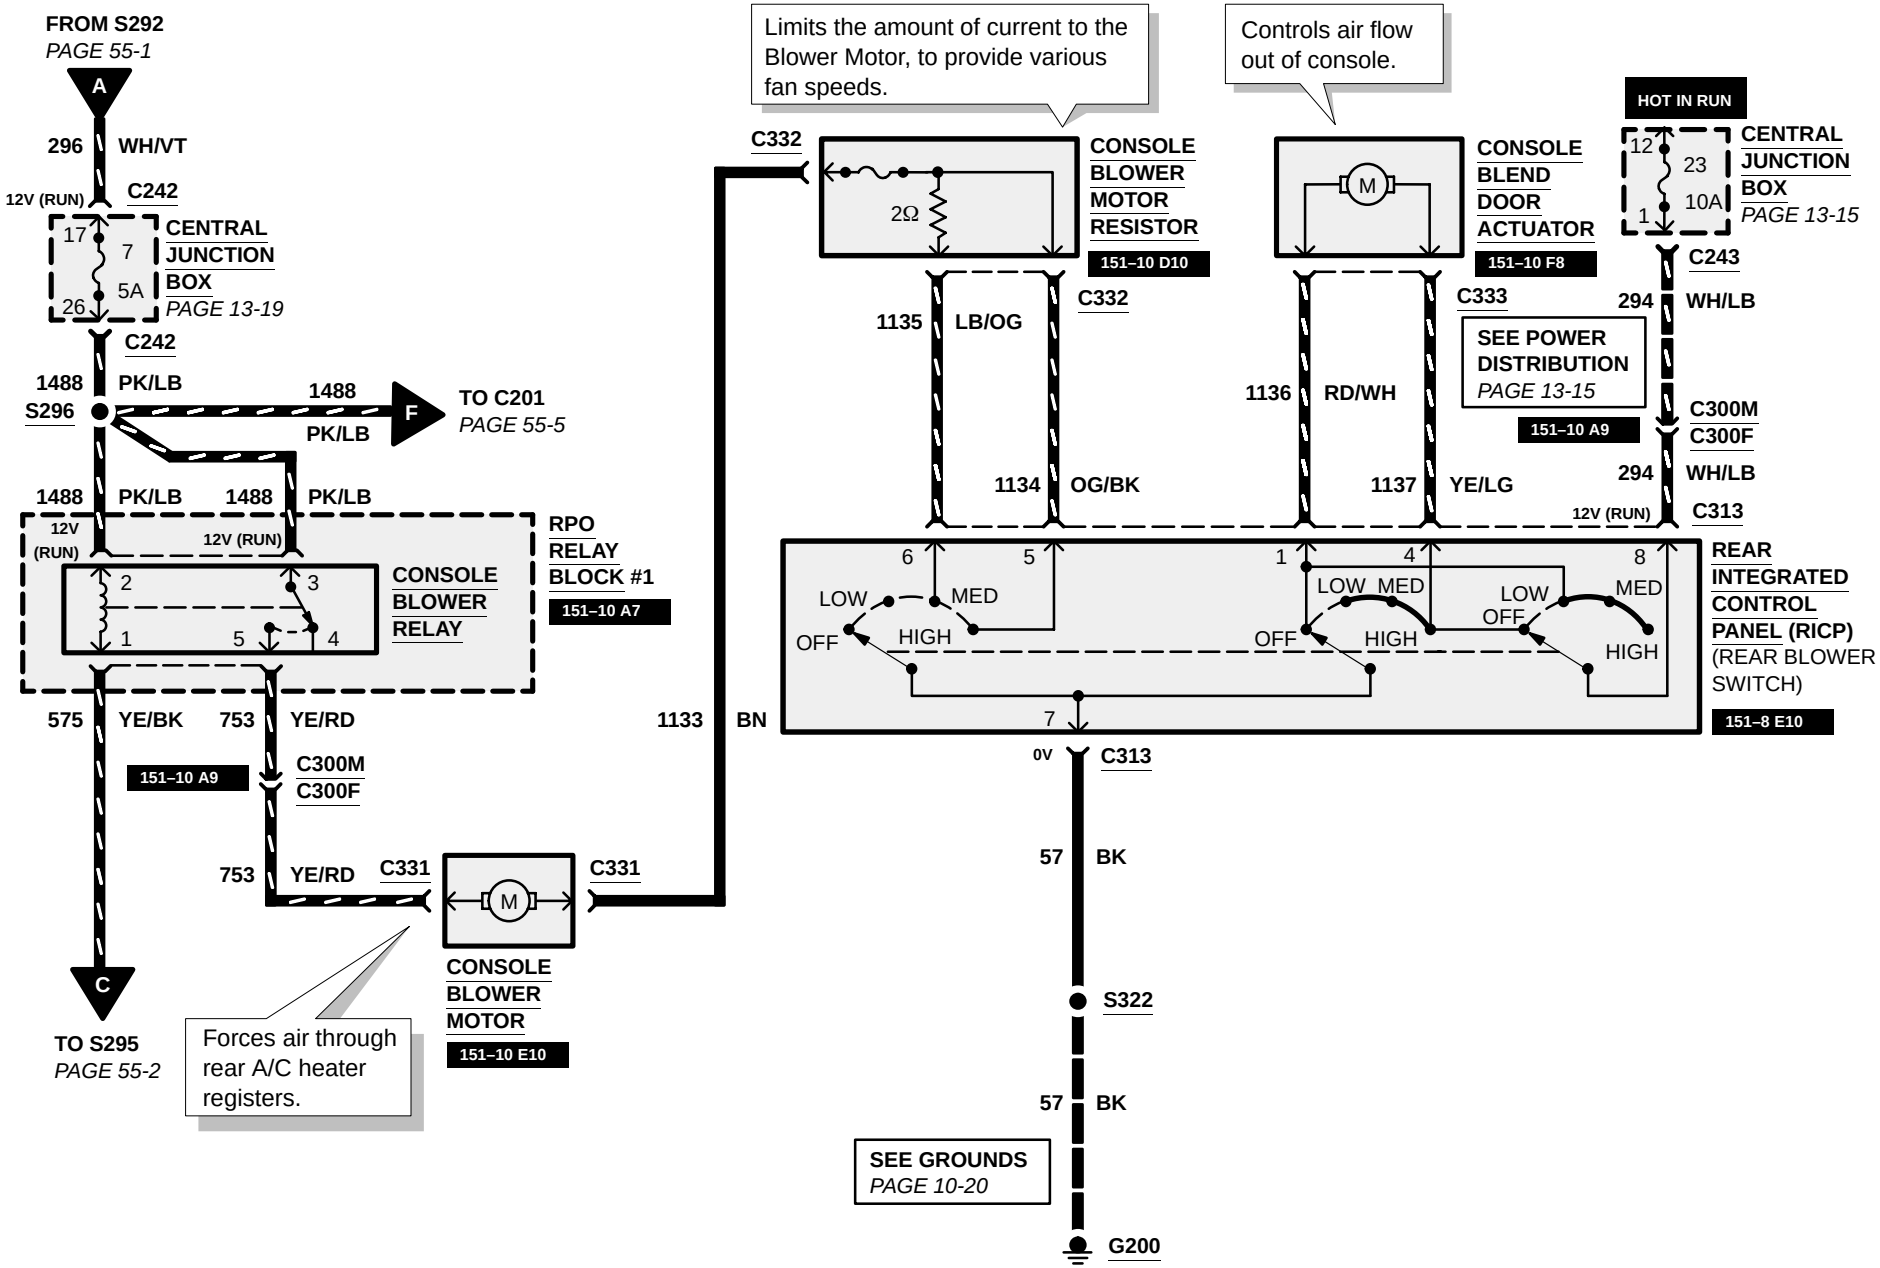
FROM S292
PAGE 55-1
A
296 WH/VT
12V (RUN) C242
CENTRAL JUNCTION BOX
17 7 5A 26
PAGE 13-19
C242
1488 PK/LB
S296
1488 PK/LB
TO C201
PAGE 55-5
1488 PK/LB
1488 PK/LB
12V (RUN)
12V (RUN)
RPO RELAY BLOCK #1
151–10 A7
CONSOLE BLOWER RELAY
2 3 1 5 4
575 YE/BK
753 YE/RD
151–10 A9
C300M C300F
753 YE/RD C331
C331
CONSOLE BLOWER MOTOR
151–10 E10
C
TO S295
PAGE 55-2
Forces air through rear A/C heater registers.
Limits the amount of current to the Blower Motor, to provide various fan speeds.
Controls air flow out of console.
C332
1133 BN
CONSOLE BLOWER MOTOR RESISTOR
2Ω
151–10 D10
CONSOLE BLEND DOOR ACTUATOR
M
151–10 F8
C332
1135 LB/OG
1134 OG/BK
C333
1136 RD/WH
1137 YE/LG
SEE POWER DISTRIBUTION
PAGE 13-15
151–10 A9
HOT IN RUN
12 23 1 10A
CENTRAL JUNCTION BOX
PAGE 13-15
C243
294 WH/LB
C300M C300F
294 WH/LB
12V (RUN) C313
6 5 1 4 8 7
LOW MED HIGH OFF
REAR INTEGRATED CONTROL PANEL (RICP)
(REAR BLOWER SWITCH)
151–8 E10
0V C313
57 BK
S322
57 BK
SEE GROUNDS
PAGE 10-20
G200