PICKUP

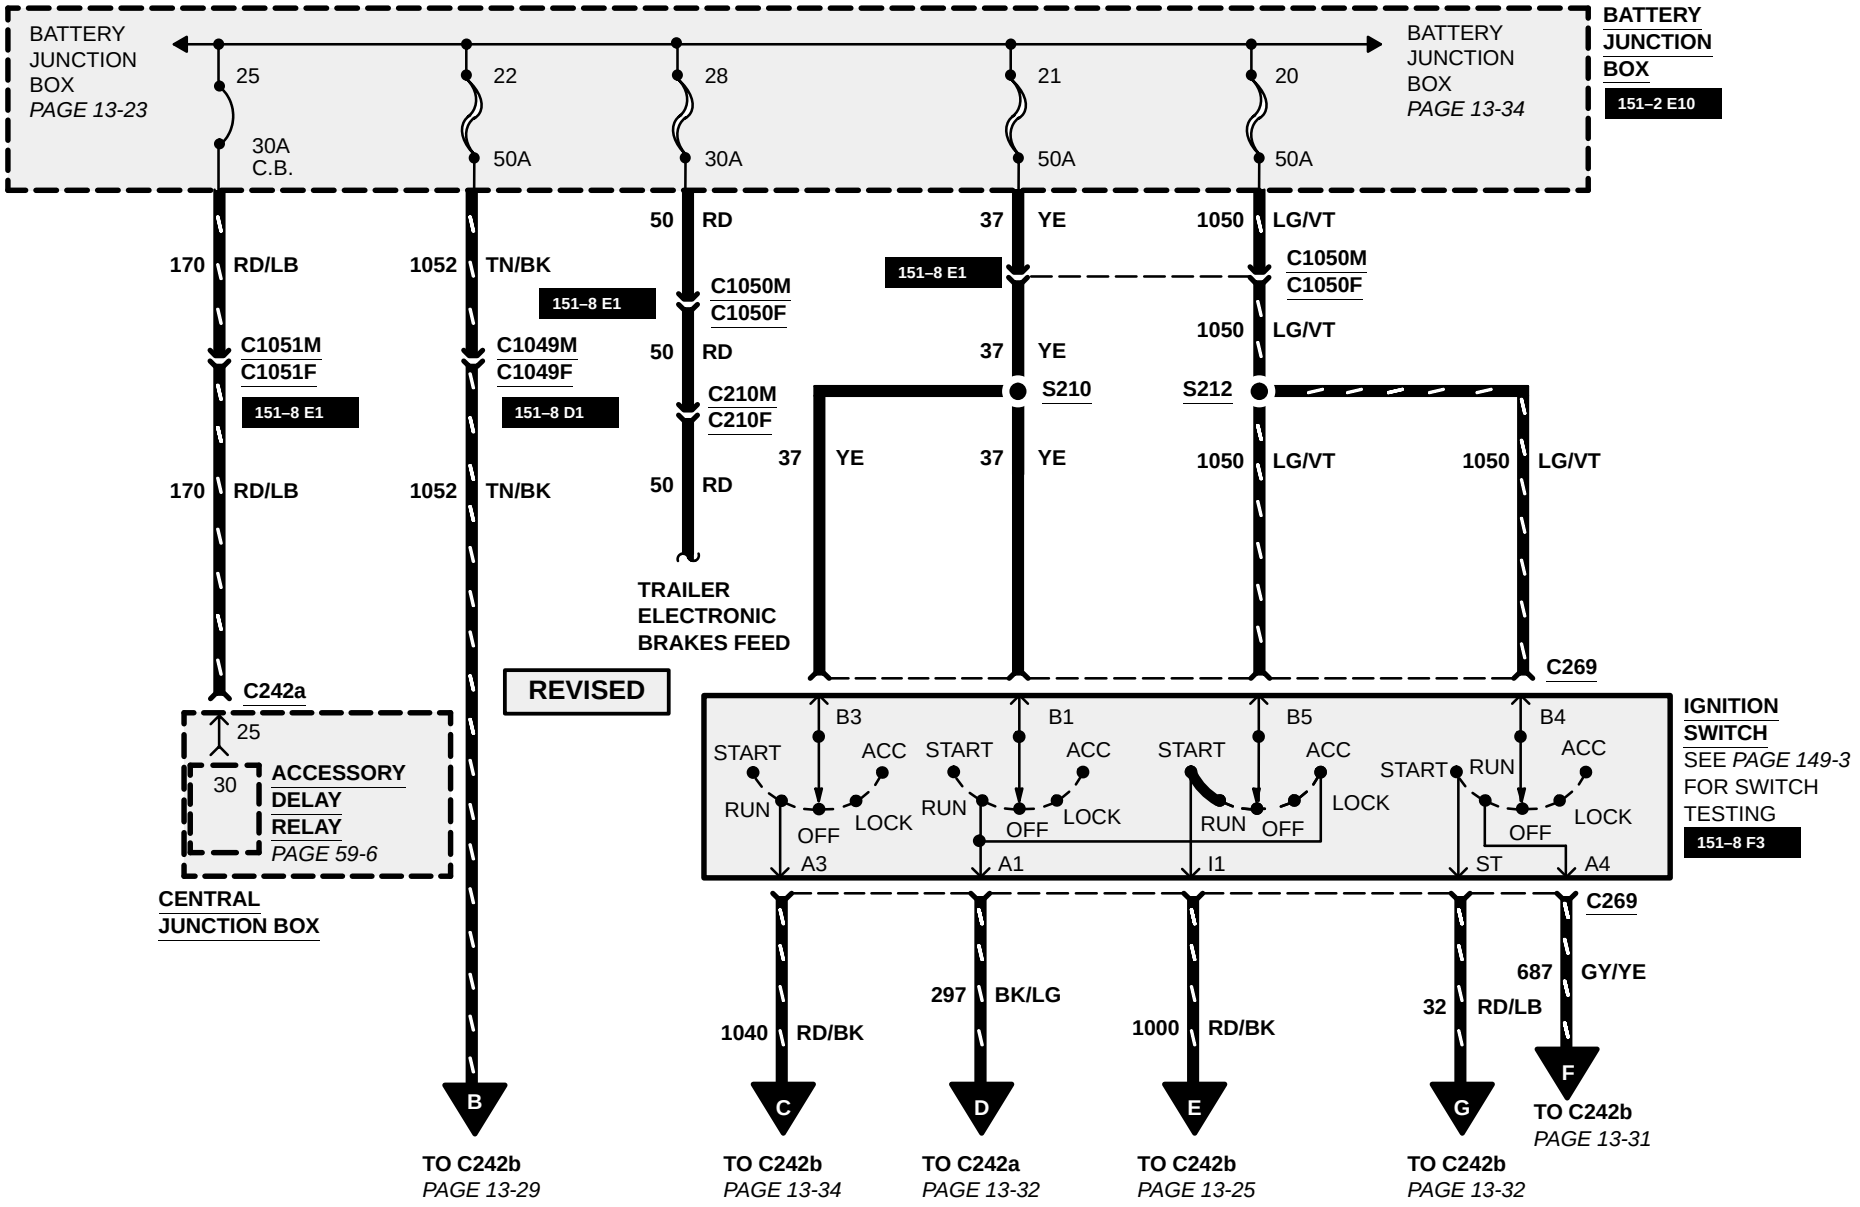
BATTERY JUNCTION BOX PAGE 13-23
25
22
28
21
20
30A C.B.
50A
30A
50A
50A
BATTERY JUNCTION BOX PAGE 13-34
BATTERY JUNCTION BOX
151–2 E10
170 RD/LB
1052 TN/BK
50 RD
37 YE
1050 LG/VT
C1051M C1051F
151–8 E1
C1049M C1049F
151–8 D1
C1050M C1050F
151–8 E1
C1050M C1050F
C210M C210F
S210
S212
C242a
25
30
ACCESSORY DELAY RELAY
PAGE 59-6
CENTRAL JUNCTION BOX
TRAILER ELECTRONIC BRAKES FEED
REVISED
C269
B3
B1
B5
B4
START
ACC
RUN
OFF
LOCK
A3
A1
I1
ST
A4
IGNITION SWITCH
SEE PAGE 149-3 FOR SWITCH TESTING
151–8 F3
1040 RD/BK
297 BK/LG
1000 RD/BK
32 RD/LB
687 GY/YE
B
C
D
E
F
G
TO C242b PAGE 13-29
TO C242b PAGE 13-34
TO C242a PAGE 13-32
TO C242b PAGE 13-25
TO C242b PAGE 13-32
TO C242b PAGE 13-31