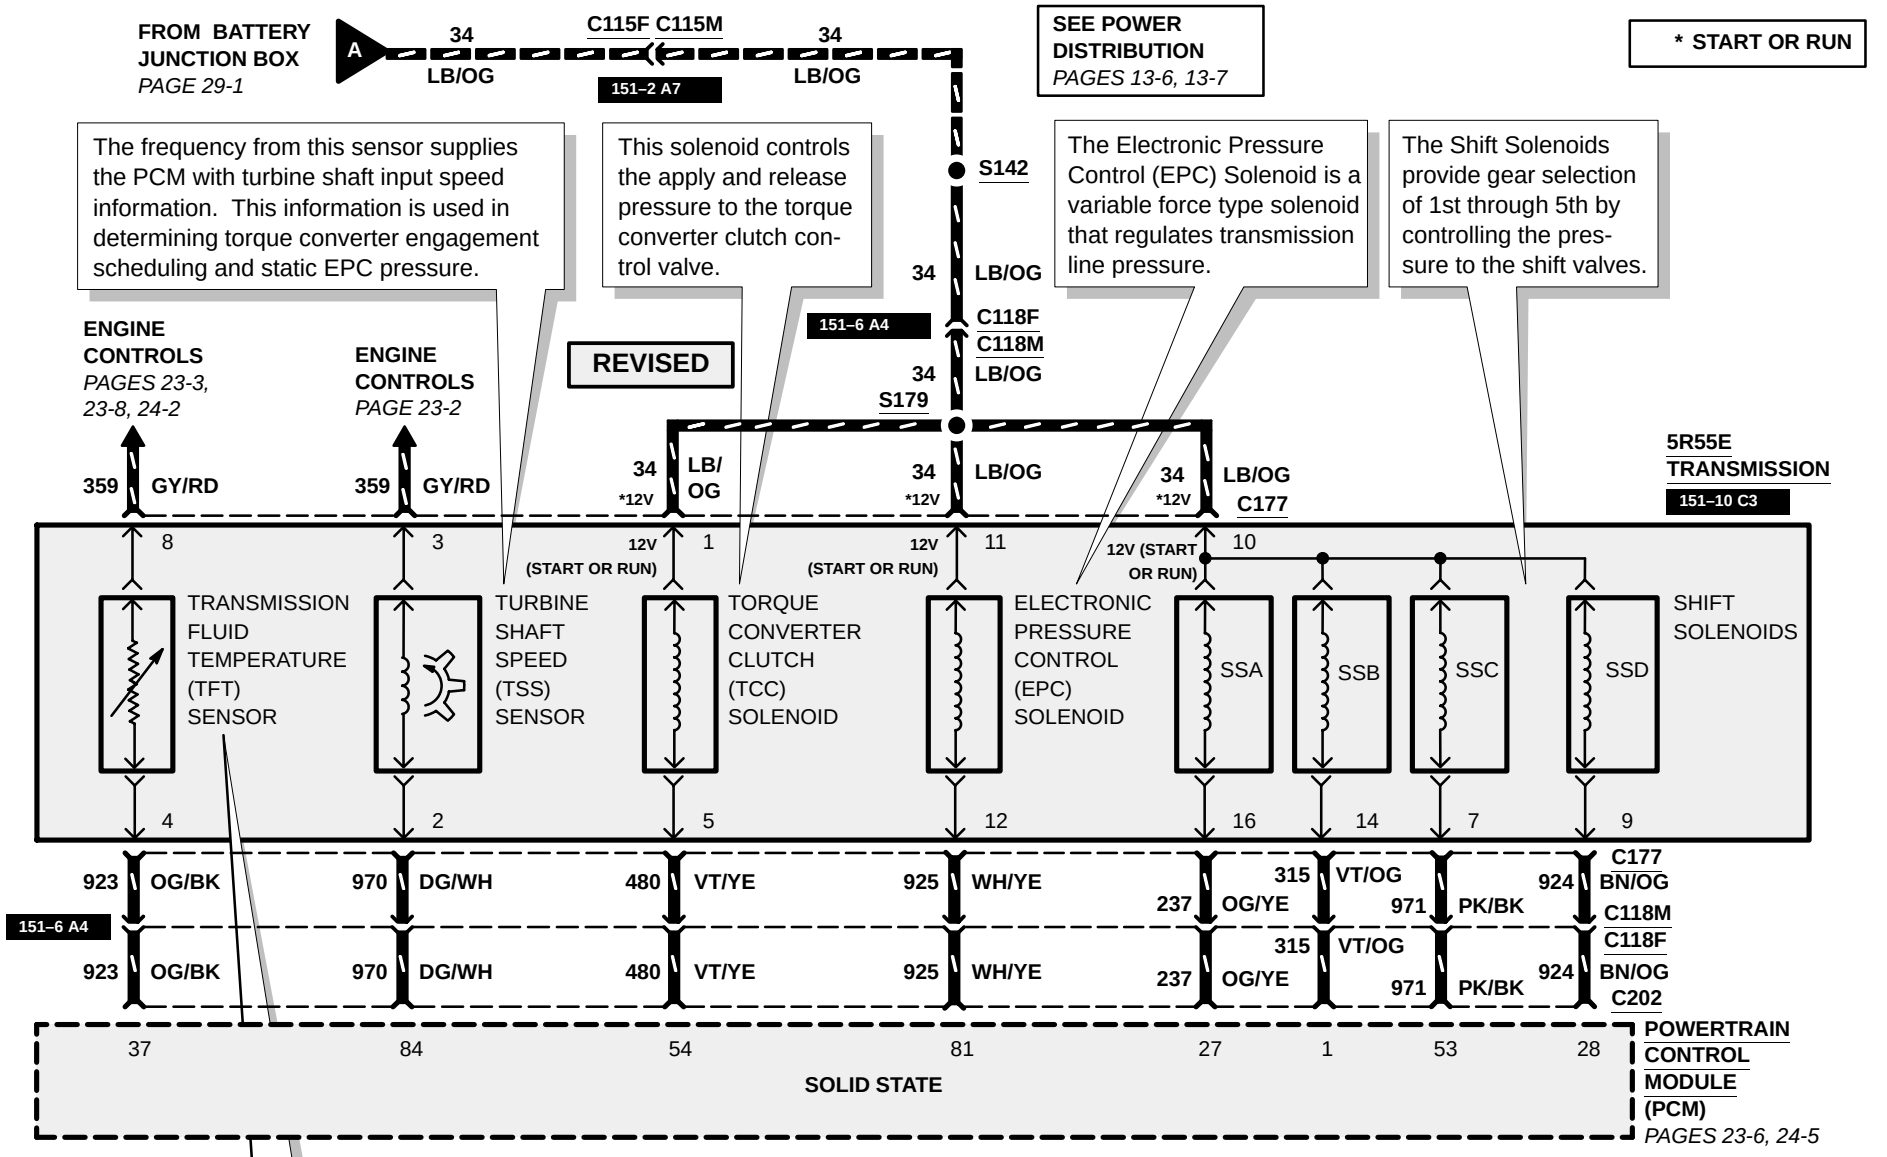
FROM BATTERY JUNCTION BOX
PAGE 29-1
A
34 LB/OG
C115F C115M
151–2 A7
34 LB/OG
SEE POWER DISTRIBUTION
PAGES 13-6, 13-7
* START OR RUN
The frequency from this sensor supplies the PCM with turbine shaft input speed information. This information is used in determining torque converter engagement scheduling and static EPC pressure.
This solenoid controls the apply and release pressure to the torque converter clutch control valve.
The Electronic Pressure Control (EPC) Solenoid is a variable force type solenoid that regulates transmission line pressure.
The Shift Solenoids provide gear selection of 1st through 5th by controlling the pressure to the shift valves.
S142
34 LB/OG
151–6 A4
C118F
C118M
34 LB/OG
S179
REVISED
ENGINE CONTROLS
PAGES 23-3, 23-8, 24-2
ENGINE CONTROLS
PAGE 23-2
359 GY/RD
359 GY/RD
34 LB/OG *12V
34 LB/OG *12V
34 LB/OG *12V
C177
5R55E TRANSMISSION
151–10 C3
8
3
12V (START OR RUN)
1
12V (START OR RUN)
11
12V (START OR RUN)
10
TRANSMISSION FLUID TEMPERATURE (TFT) SENSOR
TURBINE SHAFT SPEED (TSS) SENSOR
TORQUE CONVERTER CLUTCH (TCC) SOLENOID
ELECTRONIC PRESSURE CONTROL (EPC) SOLENOID
SSA
SSB
SSC
SSD
SHIFT SOLENOIDS
4
2
5
12
16
14
7
9
923 OG/BK
970 DG/WH
480 VT/YE
925 WH/YE
237 OG/YE
315 VT/OG
971 PK/BK
924 BN/OG
C177
C118M
151–6 A4
923 OG/BK
970 DG/WH
480 VT/YE
925 WH/YE
237 OG/YE
315 VT/OG
971 PK/BK
924 BN/OG
C118F
C202
37
84
54
81
27
1
53
28
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGES 23-6, 24-5
The PCM monitors the voltage drop across a temperature sensitive thermistor. The PCM uses this information to determine transmission fluid temperature for adjustment of shift schedules and torque converter clutch engagement schedules. It is also used to adjust EPC pressure for temperature.
REVISED
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.