C2075

K126
Accessory delay
relay

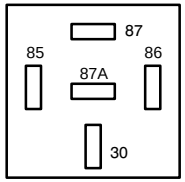

F05051

Pin	Circuit	Circuit function
30	964 (DB/LG)	fused feed, Accessory
85	964 (DB/LG)	fused feed, Accessory
86	1332 (LB)	Accessory delay relay, control
87	400 (LB/BK)	Accessory relay, switched power, output
87a	–	not used

C2089

14401

N449
Adjustable pedal
switch

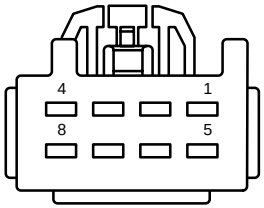

F08193

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	1205 (BK)	Ground
3	1494 (WH)	Adjustable pedal switch, Forward
4	956 (OG/LG)	Voltage supplied at all times (overload protected)
5	1417 (LG/RD)	Light emitting diode (LED), Illumination
6	–	not used
7	1495 (RD)	Adjustable pedal switch, Rearward
8	1205 (BK)	Ground

C2094

14401

N440
Memory set switch
(14776)

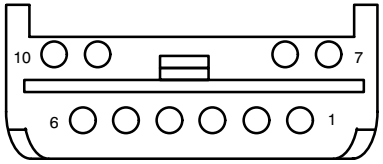

F10009

Pin	Circuit	Circuit function
1	270 (BN/OG)	Memory set switch (14776)
2	–	not used
3	268 (BK/OG)	Memory seat switch, position 2
4	267 (BR/LG)	Memory seat switch, position 1
5	–	not used
6	956 (OG/LG)	Voltage supplied at all times (overload protected)
7	–	not used
8	272 (WH/OG)	Memory set switch (14776), Illumination, input
9	1205 (BK)	Ground
10	–	not used