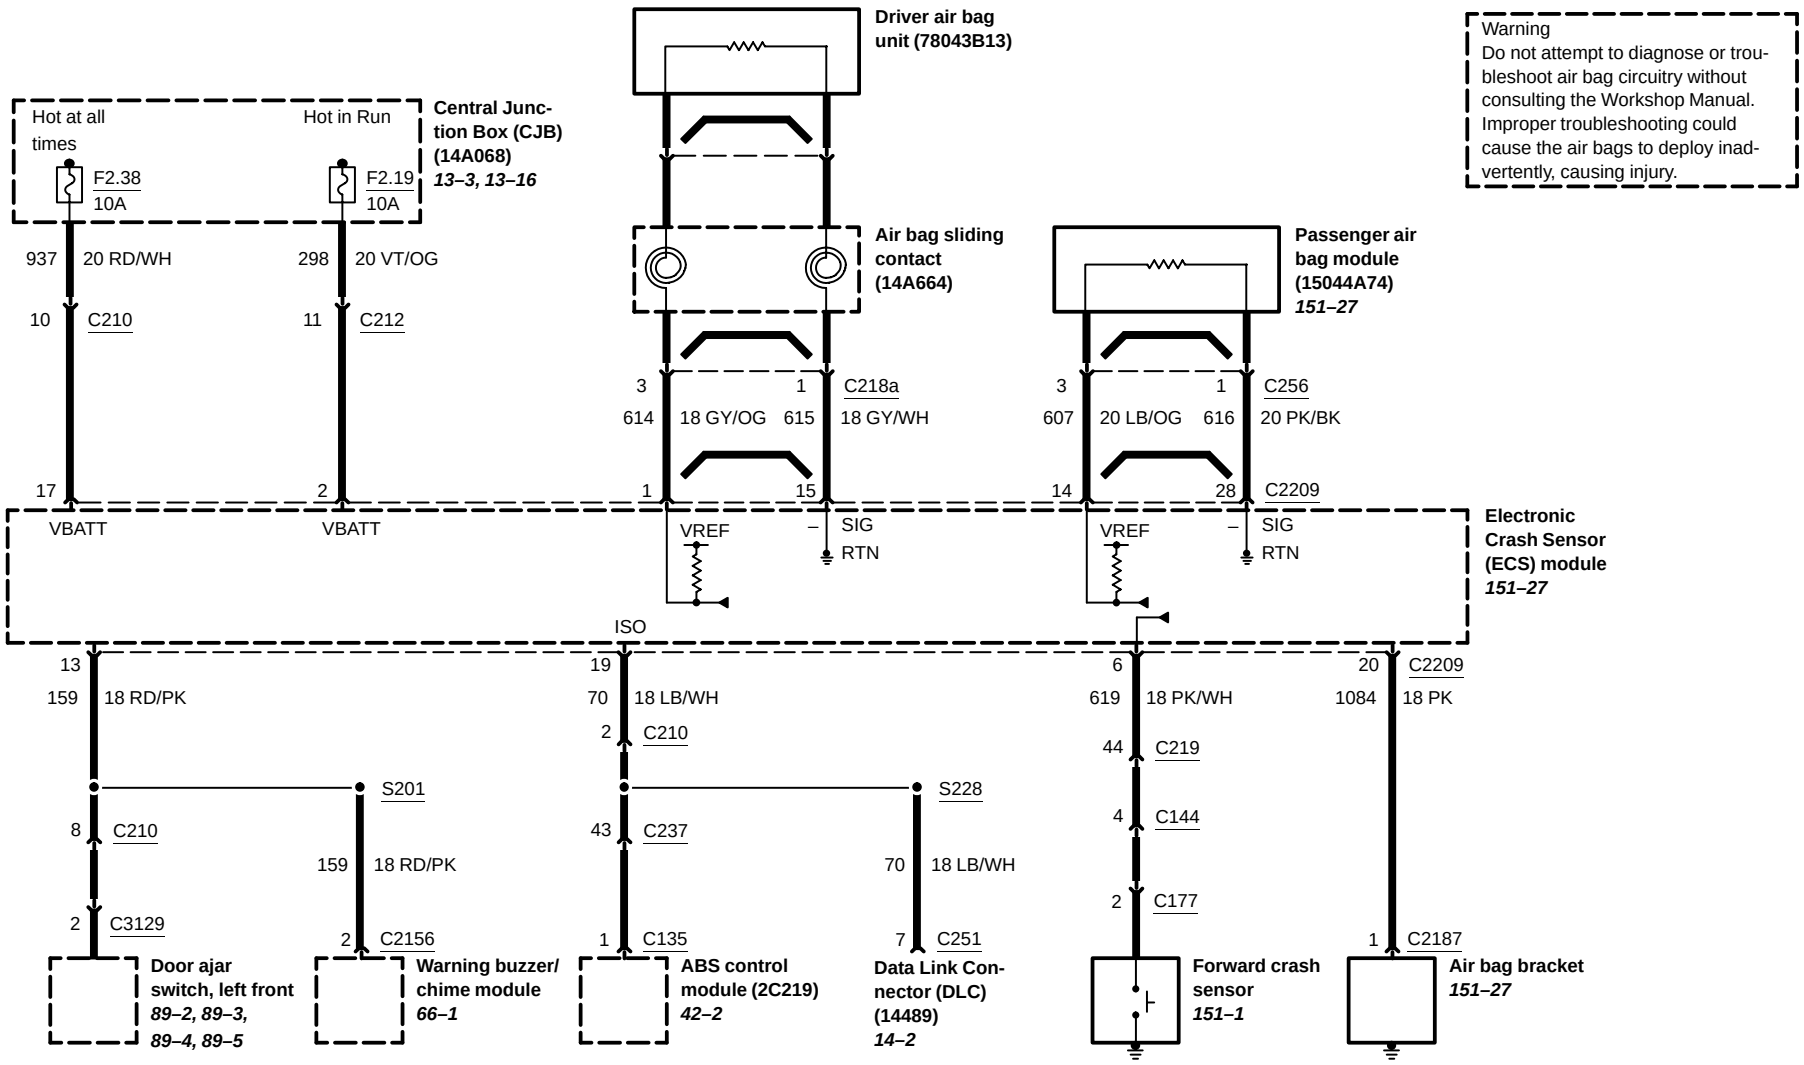
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
Driver air bag unit (78043B13)
Central Junction Box (CJB) (14A068) 13–3, 13–16
Hot at all times
Hot in Run
F2.38 10A
F2.19 10A
Air bag sliding contact (14A664)
Passenger air bag module (15044A74) 151–27
937 20 RD/WH
298 20 VT/OG
10 C210
11 C212
3 614 18 GY/OG 1 615 18 GY/WH C218a
3 607 20 LB/OG 1 616 20 PK/BK C256
17 2 1 15 14 28 C2209
VBATT
VBATT
VREF
SIG RTN
VREF
SIG RTN
Electronic Crash Sensor (ECS) module 151–27
ISO
13 159 18 RD/PK
19 70 18 LB/WH
6 619 18 PK/WH
20 1084 18 PK C2209
2 C210
44 C219
4 C144
2 C177
8 C210
2 C3129
S201
159 18 RD/PK
2 C2156
S228
43 C237
1 C135
70 18 LB/WH
7 C251
1 C2187
Door ajar switch, left front 89–2, 89–3, 89–4, 89–5
Warning buzzer/ chime module 66–1
ABS control module (2C219) 42–2
Data Link Connector (DLC) (14489) 14–2
Forward crash sensor 151–1
Air bag bracket 151–27