C177 (BK)

14290

Forward crash sensor

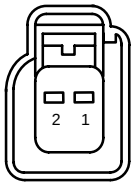

F02132

Pin	Circuit	Circuit function
1	618 (VT/LG)	Forward crash sensor, return
2	617 (PK/OG)	Forward crash sensor, feed

C180 (BK)

12B637

Camshaft position sensor (6B288)

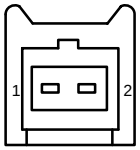

F02012

Pin	Circuit	Circuit function
1	282 (DB/OG)	Camshaft position sensor (6B288), input
2	359 (GY/RD)	signal, return

C181 (BK)

12B637

Fuel injector 1 (9F593)

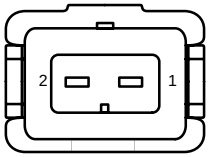

F02089

Pin	Circuit	Circuit function
1	555 (TN)	Fuel injector 1, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C182 (BK)

12B637

Fuel injector 2 (9F593)

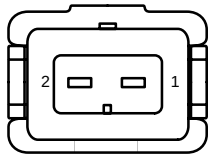

F02089

Pin	Circuit	Circuit function
1	556 (WH)	Fuel injector 2, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C183 (BK)

12B637

Fuel injector 3 (9F593)

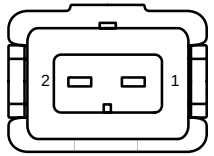

F02089

Pin	Circuit	Circuit function
1	557 (BN/YE)	Fuel injector 3, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C184 (BK)

12B637

Fuel injector 4 (9F593)

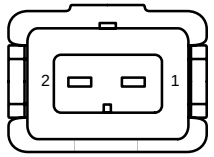

F02089

Pin	Circuit	Circuit function
1	558 (BN/LB)	Fuel injector 4, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)