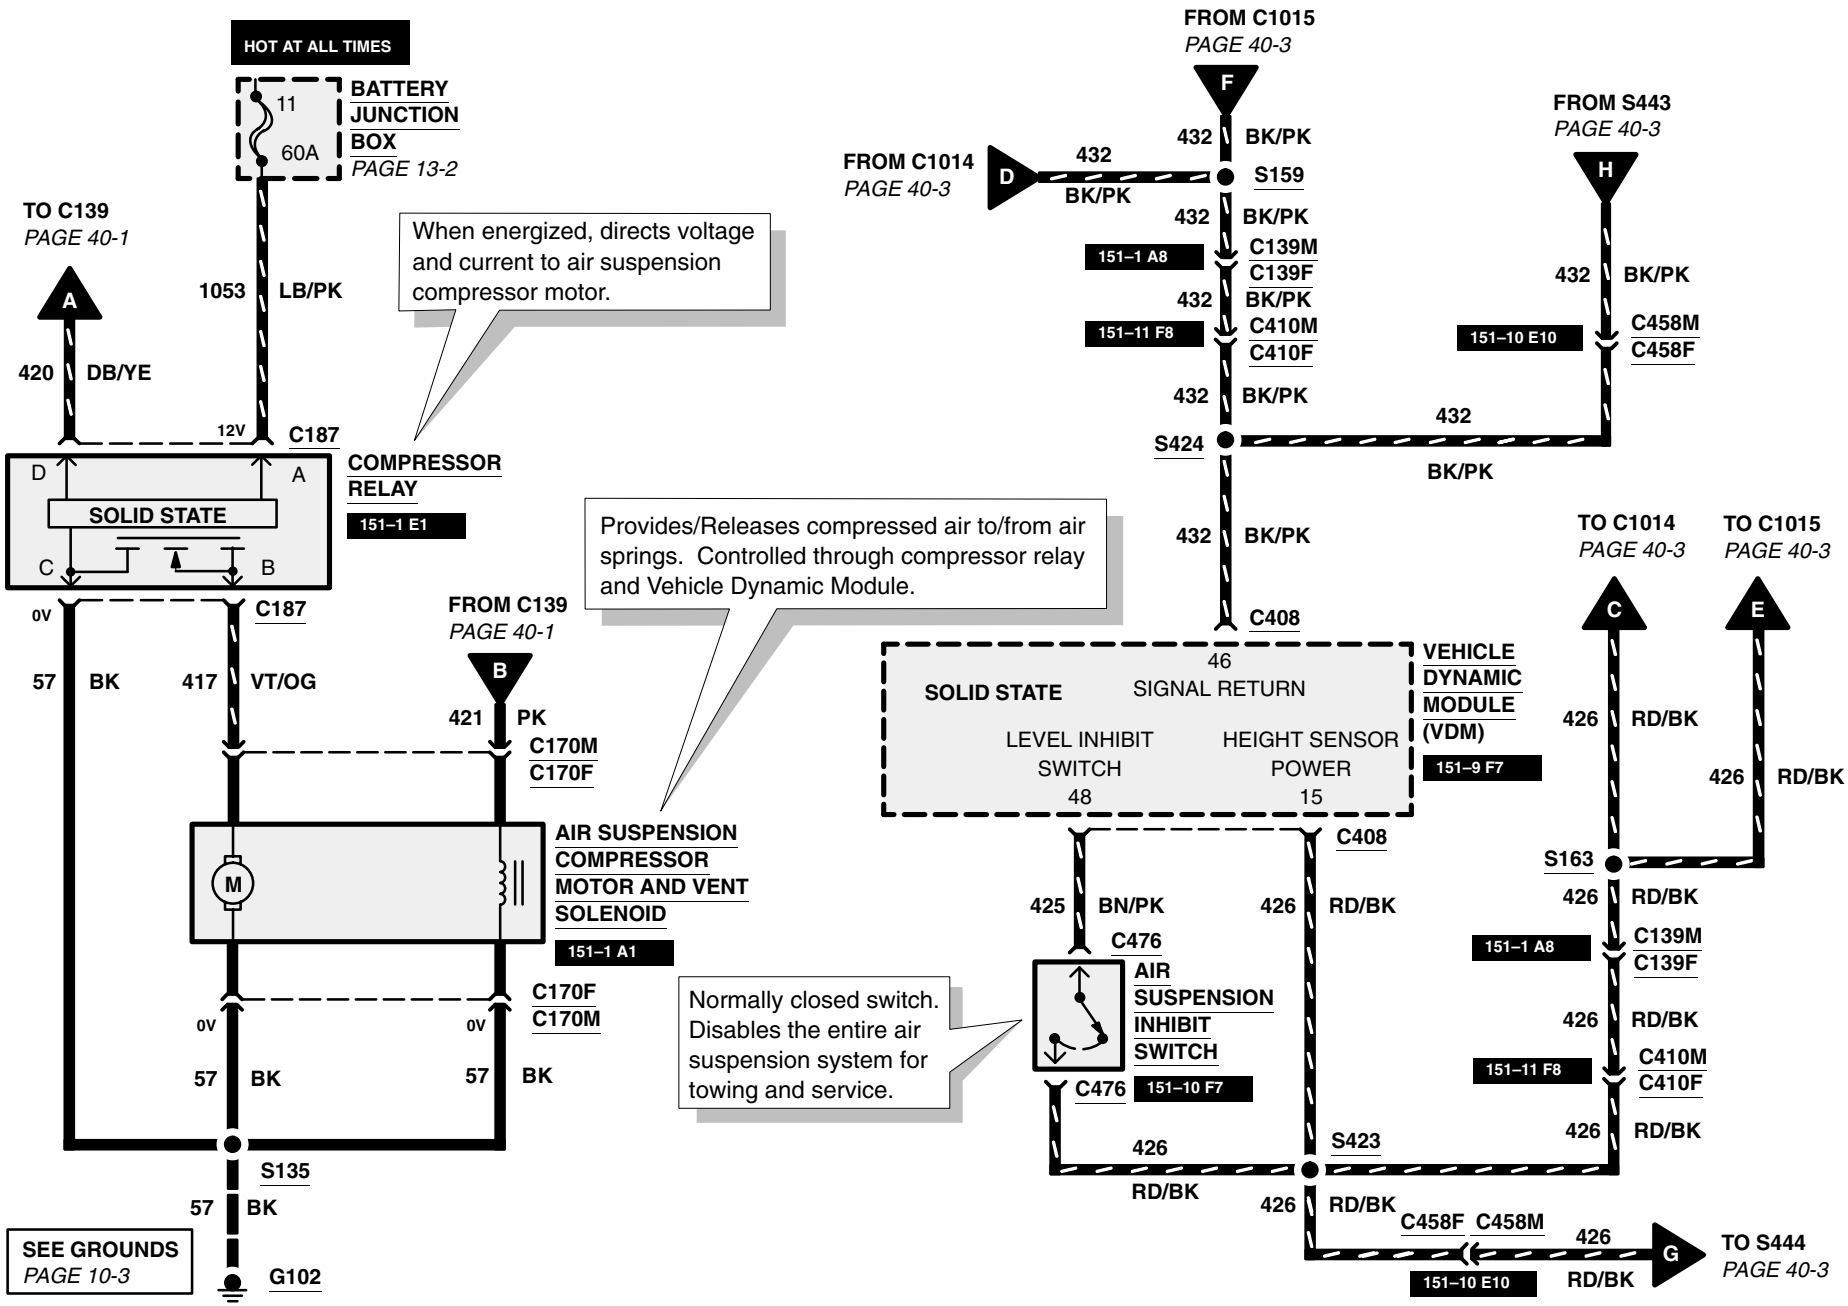
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-2
11
60A
TO C139
PAGE 40-1
A
1053 LB/PK
420 DB/YE
12V
C187
When energized, directs voltage and current to air suspension compressor motor.
COMPRESSOR RELAY
151–1 E1
D
A
SOLID STATE
C
B
0V
C187
57 BK
417 VT/OG
FROM C139
PAGE 40-1
B
421 PK
C170M
C170F
Provides/Releases compressed air to/from air springs. Controlled through compressor relay and Vehicle Dynamic Module.
AIR SUSPENSION COMPRESSOR MOTOR AND VENT SOLENOID
151–1 A1
M
C170F
C170M
0V
57 BK
0V
57 BK
S135
57 BK
SEE GROUNDS
PAGE 10-3
G102
FROM C1015
PAGE 40-3
F
432 BK/PK
FROM C1014
PAGE 40-3
D
432 BK/PK
S159
432 BK/PK
C139M
C139F
151–1 A8
432 BK/PK
C410M
C410F
151–11 F8
432 BK/PK
S424
FROM S443
PAGE 40-3
H
432 BK/PK
C458M
C458F
151–10 E10
432
BK/PK
432 BK/PK
C408
46
SOLID STATE
SIGNAL RETURN
LEVEL INHIBIT SWITCH
48
HEIGHT SENSOR POWER
15
VEHICLE DYNAMIC MODULE (VDM)
151–9 F7
C408
425 BN/PK
C476
AIR SUSPENSION INHIBIT SWITCH
Normally closed switch. Disables the entire air suspension system for towing and service.
C476
151–10 F7
426 RD/BK
S423
426 RD/BK
426 RD/BK
C458F C458M
426
151–10 E10
RD/BK
G
TO S444
PAGE 40-3
TO C1014
PAGE 40-3
C
426 RD/BK
TO C1015
PAGE 40-3
E
426 RD/BK
S163
426 RD/BK
C139M
C139F
151–1 A8
426 RD/BK
C410M
C410F
151–11 F8
426 RD/BK