C535b

14A005

N447
Master window adjust switch (14529)

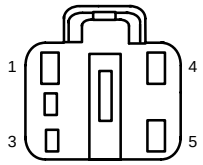

F05157

Pin	Circuit	Circuit function
1	296 (WH/VT)	Fused accessory relay, switched power, output
2	57 (BK)	Ground
3	314 (TN/LB)	Window switch, feed, right front, Up
4	57 (BK)	Ground
5	313 (WH/YE)	Window switch, feed, right front, Up

C602

19A123/14A005

N85
Door ajar switch, right front

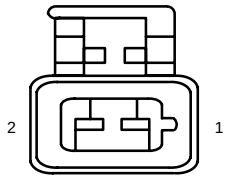

F02379

Pin	Circuit	Circuit function
1	345 (BK/PK)	Door ajar switch, right front, signal
2	57 (BK)	Ground

C603

14A005

M242
Door lock actuator, right front

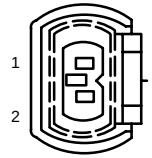

F02116

Pin	Circuit	Circuit function
1	118 (PK/OG)	Door lock, feed
2	117 (PK/BK)	Door lock, output

C605

14A005

N205
Door lock switch, passenger side (14028)

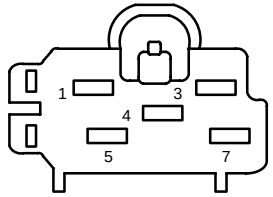

F07044

Pin	Circuit	Circuit function
1	57 (BK0	Ground
2	120 (PK/LG)	Door unlock relay, control
3	118 (PK/OG)	Door lock, feed
3	120 (PK/LG)	Door unlock relay, control
4	517 (BK/WH)	Voltage supplied at all times (overload protected)
4	57 (BK)	Ground
5	296 (WH/VT)	Fused accessory relay, switched power, output
6	117 (PK/BK)	Door lock,output
6	119 (PK/YE)	Door lock relay, control
7	119 (PK/YE)	Door lock relay, control