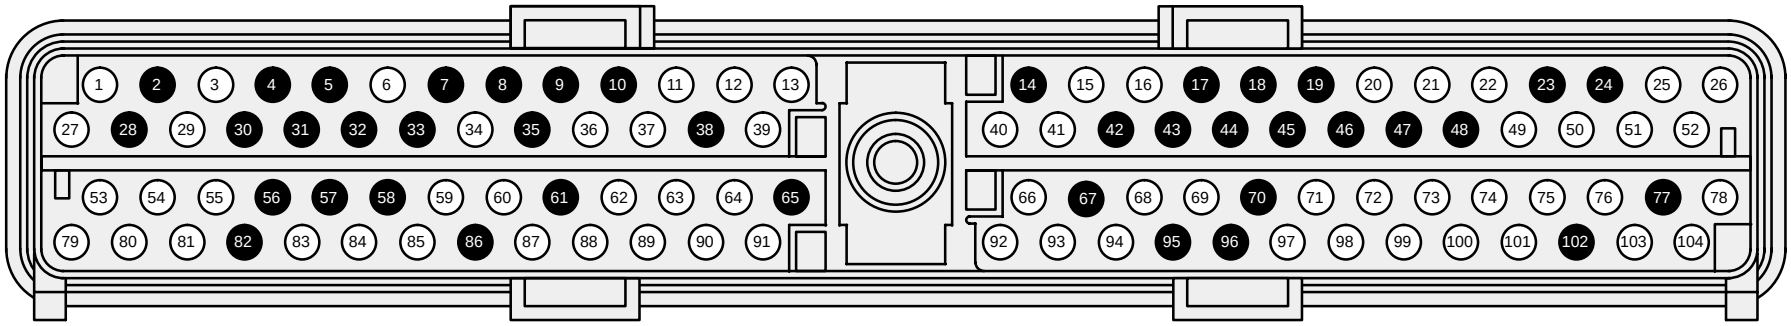

C174 (GRAY)
POWERTRAIN CONTROL MODULE (PCM)

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	1025 (OG/YE)	Coil on Plug #6	18	–	NOT USED
2	–	NOT USED	19	–	NOT USED
3	570 (BK/WH)	Power Ground	20	924 (BN/OG)	Clutch Coast Solenoid (CSS)
4	–	NOT USED	21	349 (DB)	Crankshaft Position (CKP) (+) Sensor
5	–	NOT USED	22	350 (GY)	Crankshaft Position (CKP) (–) Sensor
6	237 (OG/YE)	Shift Solenoid A (SSA)	23	–	NOT USED
7	–	NOT USED	24	–	NOT USED
8	–	NOT USED	25	567 (LB/YE)	Case Ground
9	–	NOT USED	26	1024 (LG/WH)	Coil on Plug #1
10	–	NOT USED	27	1021 (LG/YE)	Coil on Plug #5
11	315 (VT/OG)	Shift Solenoid B (SSB)	28	–	NOT USED
12	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL) Output	29	224 (TN/WH)	Transmission Control Switch (TCS)
			30	–	NOT USED
13	107 (VT)	Data Link Connector (DLC)	31	–	NOT USED
14	–	NOT USED	32	–	NOT USED
15	915 (PK/LB)	J1850 Bus (–)	33	–	NOT USED
16	914 (TN/OG)	J1850 Bus (+)	34	1144 (YE/BK)	TR1
17	–	NOT USED	35	–	NOT USED

PIN	CIRCUIT	CIRCUIT FUNCTION
36	968 (TN/LB)	Mass Air Flow (MAF) Sensor
37	923 (OG/BK)	Transmission Fluid Temperature (TFT) Sensor
38	–	NOT USED
39	743 (GY)	Intake Air Temperature (IAT) Sensor
40	238 (DG/YE)	Fuel Pump Monitor
41	347 (BK/YE)	A/C High Pressure Cutoff Switch Input
42	–	NOT USED
43	–	NOT USED
44	–	NOT USED
45	–	NOT USED
46	367 (BN)	NOT USED
47	–	NOT USED
48	–	NOT USED
49	1145 (LB/BK)	TR2
50	1143 (WH/BK)	TR4
51	570 (BK/WH)	Power Ground
52	1028 (WH/PK)	Coil on Plug #3
53	1030 (DG/VT)	Coil on Plug #4
54	480 (VT/YE)	Torque Converter Clutch (TCC) Solenoid
55	729 (RD/WH)	Keep Alive Power (KAPWR)
56	–	NOT USED
57	–	NOT USED
58	–	NOT USED
59	970 (DG/WH)	Turbine Shaft Speed (TSS) Sensor
60	74 (GY/LB)	Heated Oxygen Sensor #11 (HO2S) Input
61	–	NOT USED
62	1164 (LB)	Engine Fuel Temperature (EFT) Sensor
63	141 (RD/PK)	Injector Pressure Transducer
64	199 (LB/YE)	TR3A
65	48	NOT USED
66	1102 (YE/LG)	Cylinder Head Temperature (CHT) Sensor
67	–	NOT USED
68	679 (GY/BK)	Vehicle Speed Output Sensor
69	331 (PK/YE)	WOT Relay
70	–	NOT USED
71	361 (RD)	Vehicle Power (VPWR)
72	1171 (WH)	NGV Module
73	1169 (WH/LB)	NGV Module
74	1167 (WH/BK)	NGV Module
75	1165 (WH/RD)	NGV Module
76	–	NOT USED
77	570 (BK/WH)	Power Ground
78	1027 (PK/LB)	Coil on Plug #7
79	1029 (WH/RD)	Coil on Plug #8
80	926 (LB/OG)	Fuel Shutoff Valve Control
81	925 (WH/YE)	Electronic Pressure Control (EPC) Solenoid
82	–	NOT USED
83	264 (WH/LB)	Idle Air Control (IAC) Valve Control
84	136 (DB/YE)	Output Shaft Speed (OSS) Sensor
85	795 (DG)	Camshaft Position (CMP) Sensor
86	–	NOT USED
87	94 (RD/BK)	Heated Oxygen Sensor #21 (HO2S)
88	967 (LB/RD)	Mass Air Flow (MAF) Sensor
89	355 (GY/WH)	Throttle Position (TP) Sensor
90	351 (BN/WH)	Reference Voltage
91	359 (GY/RD)	Signal Return
92	810 (RD/LG)	Brake Pedal Position (BPP) Switch
93	387 (RD/WH)	Heated Oxygen Sensor #11 (HO2S) Heater
94	388 (YE/LB)	Heated Oxygen Sensor #21 (HO2S) Heater
95	–	NOT USED
96	–	NOT USED
97	361 (RD)	Vehicle Power (VPWR)
98	1172 (YE)	NGV Module
99	1170 (YE/LB)	NGV Module
100	1168 (YE/BK)	NGV Module
101	1166 (YE/RD)	NGV Module
102	–	NOT USED
103	570 (BK/WH)	Power Ground
104	1026 (PK/WH)	Coil on Plug #2

REVISED