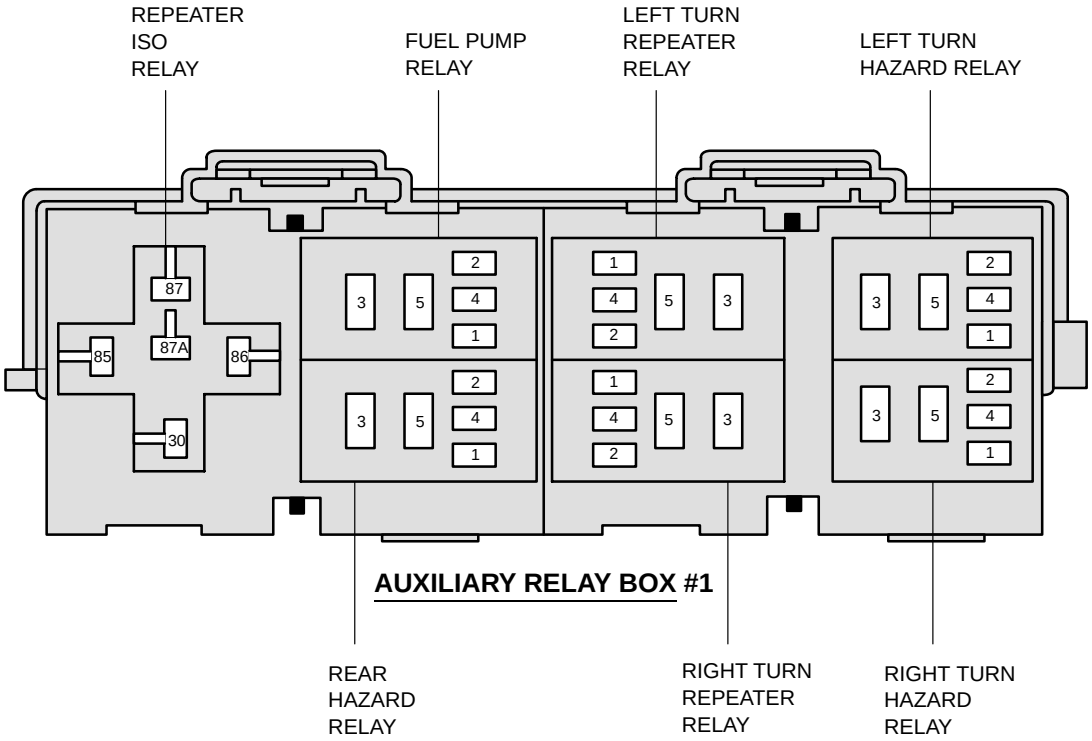
REPEATER ISO RELAY
FUEL PUMP RELAY
LEFT TURN REPEATER RELAY
LEFT TURN HAZARD RELAY
87
87A
85
86
30
3
5
2
4
1
AUXILIARY RELAY BOX #1
REAR HAZARD RELAY
RIGHT TURN REPEATER RELAY
RIGHT TURN HAZARD RELAY