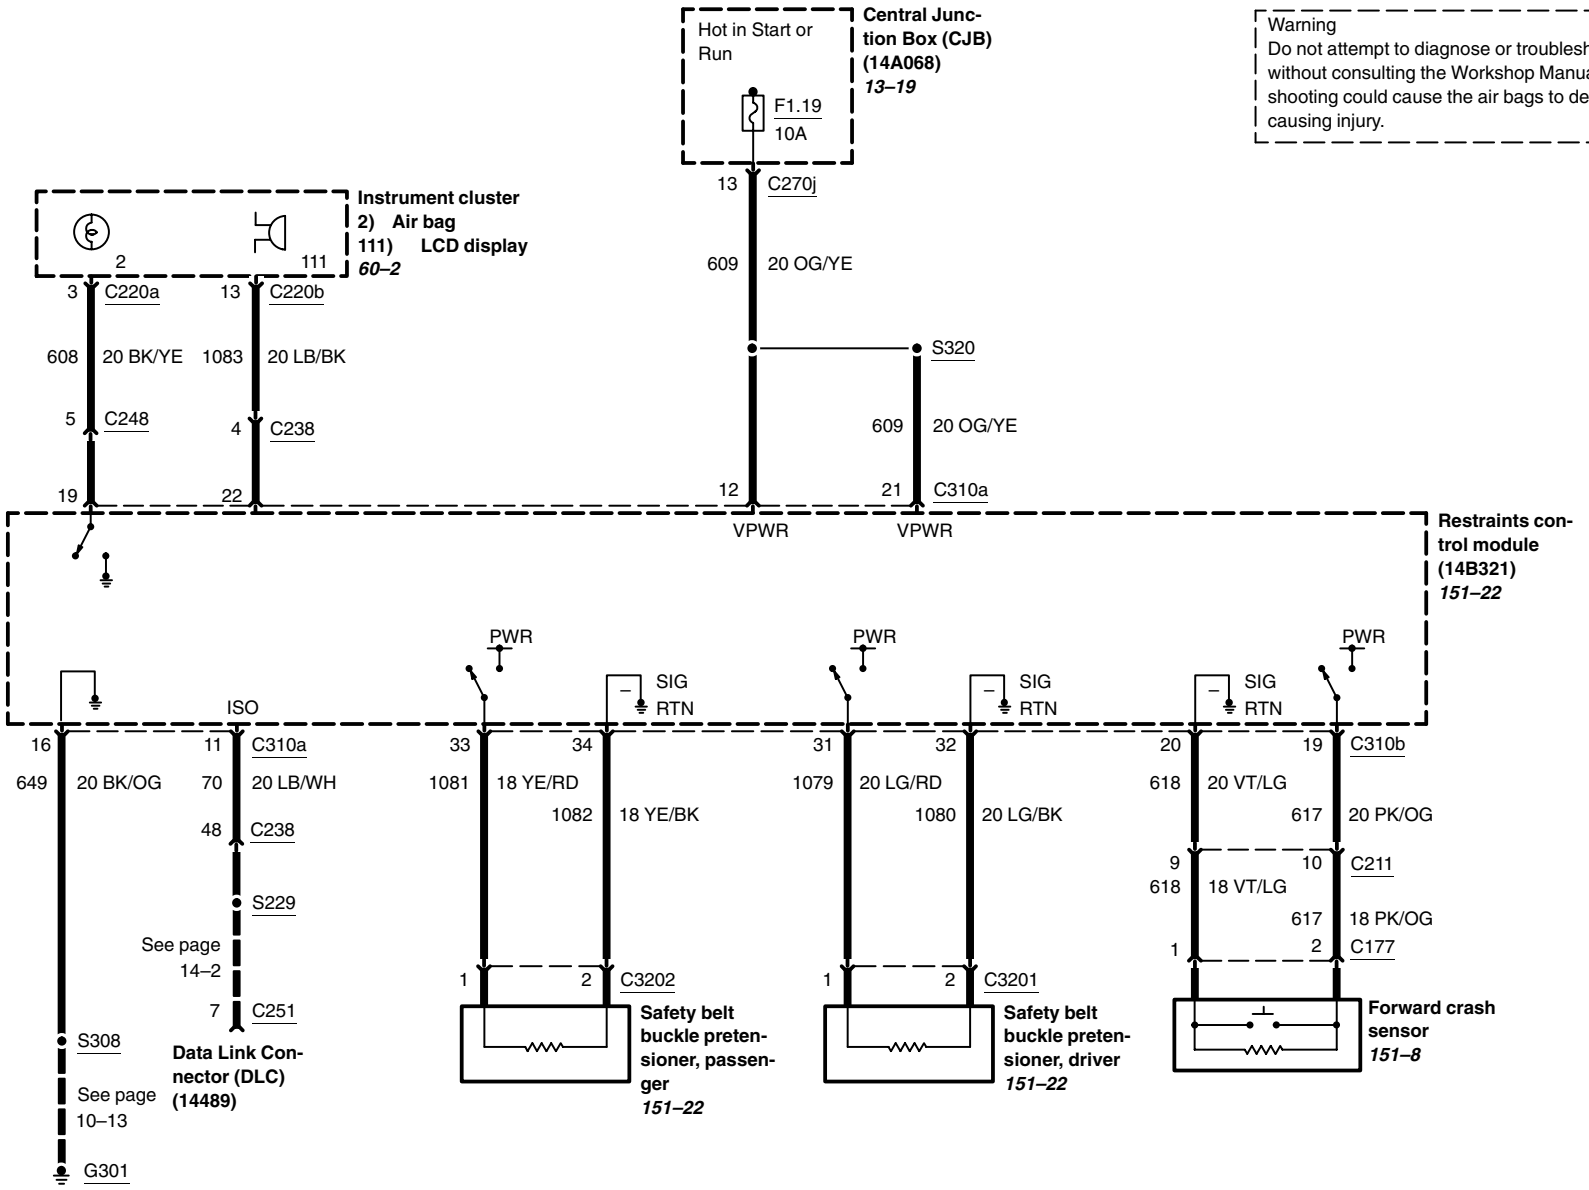
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper trouble-shooting could cause the air bags to deploy inadvertently, causing injury.
Hot in Start or Run
F1.19
10A
Central Junction Box (CJB) (14A068) 13–19
13 C270j
609 20 OG/YE
S320
609 20 OG/YE
12 VPWR
21 C310a VPWR
Instrument cluster
2) Air bag
111) LCD display
60–2
2
111
3 C220a
608 20 BK/YE
5 C248
19
13 C220b
1083 20 LB/BK
4 C238
22
Restraints control module (14B321) 151–22
ISO
PWR
SIG RTN
PWR
SIG RTN
PWR
SIG RTN
16
649 20 BK/OG
11 C310a
70 20 LB/WH
48 C238
S229
See page 14–2
7 C251
S308
See page 10–13
G301
Data Link Connector (DLC) (14489)
33
1081 18 YE/RD
34
1082 18 YE/BK
1 2 C3202
Safety belt buckle pretensioner, passenger 151–22
31
1079 20 LG/RD
32
1080 20 LG/BK
1 2 C3201
Safety belt buckle pretensioner, driver 151–22
20
618 20 VT/LG
19 C310b
617 20 PK/OG
9
618 18 VT/LG
10 C211
617 18 PK/OG
1
2 C177
Forward crash sensor 151–8