C701 (GY)

14A005

Window adjust switch, left rear (14A412)

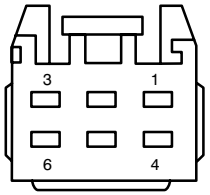

F06303

Pin	Circuit	Circuit function
1	316 (YE/LB)	Window switch, feed, left rear – Up
2	885 (YE/LB)	Window switch, to, Window motor – Down
3	193 (YE/LG)	Window lockout, feed
4	–	not used
5	884 (YE/BK)	Window switch, to, Window motor – Up
6	317 (GY/OG)	Window switch, feed, left rear – Down

C702 (BK)

14632/14A005

Speaker, left rear (18808)

* Super cab
** Harley Davidson

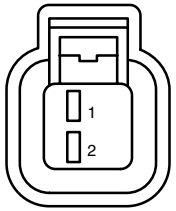

F02069

Pin	Circuit	Circuit function
1	800 (GY/LB)	Speaker, right rear (18808) +
	*802 (OG/RD)	Speaker, right rear (18808) +
	**827 (TN/WH)	Speaker, right rear (18808) +
2	801 (TN/YE)	Speaker, right rear (18808) –
	*803 (BN/PK)	Speaker, right rear (18808) –

C703 (GY)

14A005

Power window motor, left rear (23394)



F02073

Pin	Circuit	Circuit function
1	885 (YE/LB)	Window switch, to, Window motor – Down
2	884 (YE/BK)	Window switch, to, Window motor – Up