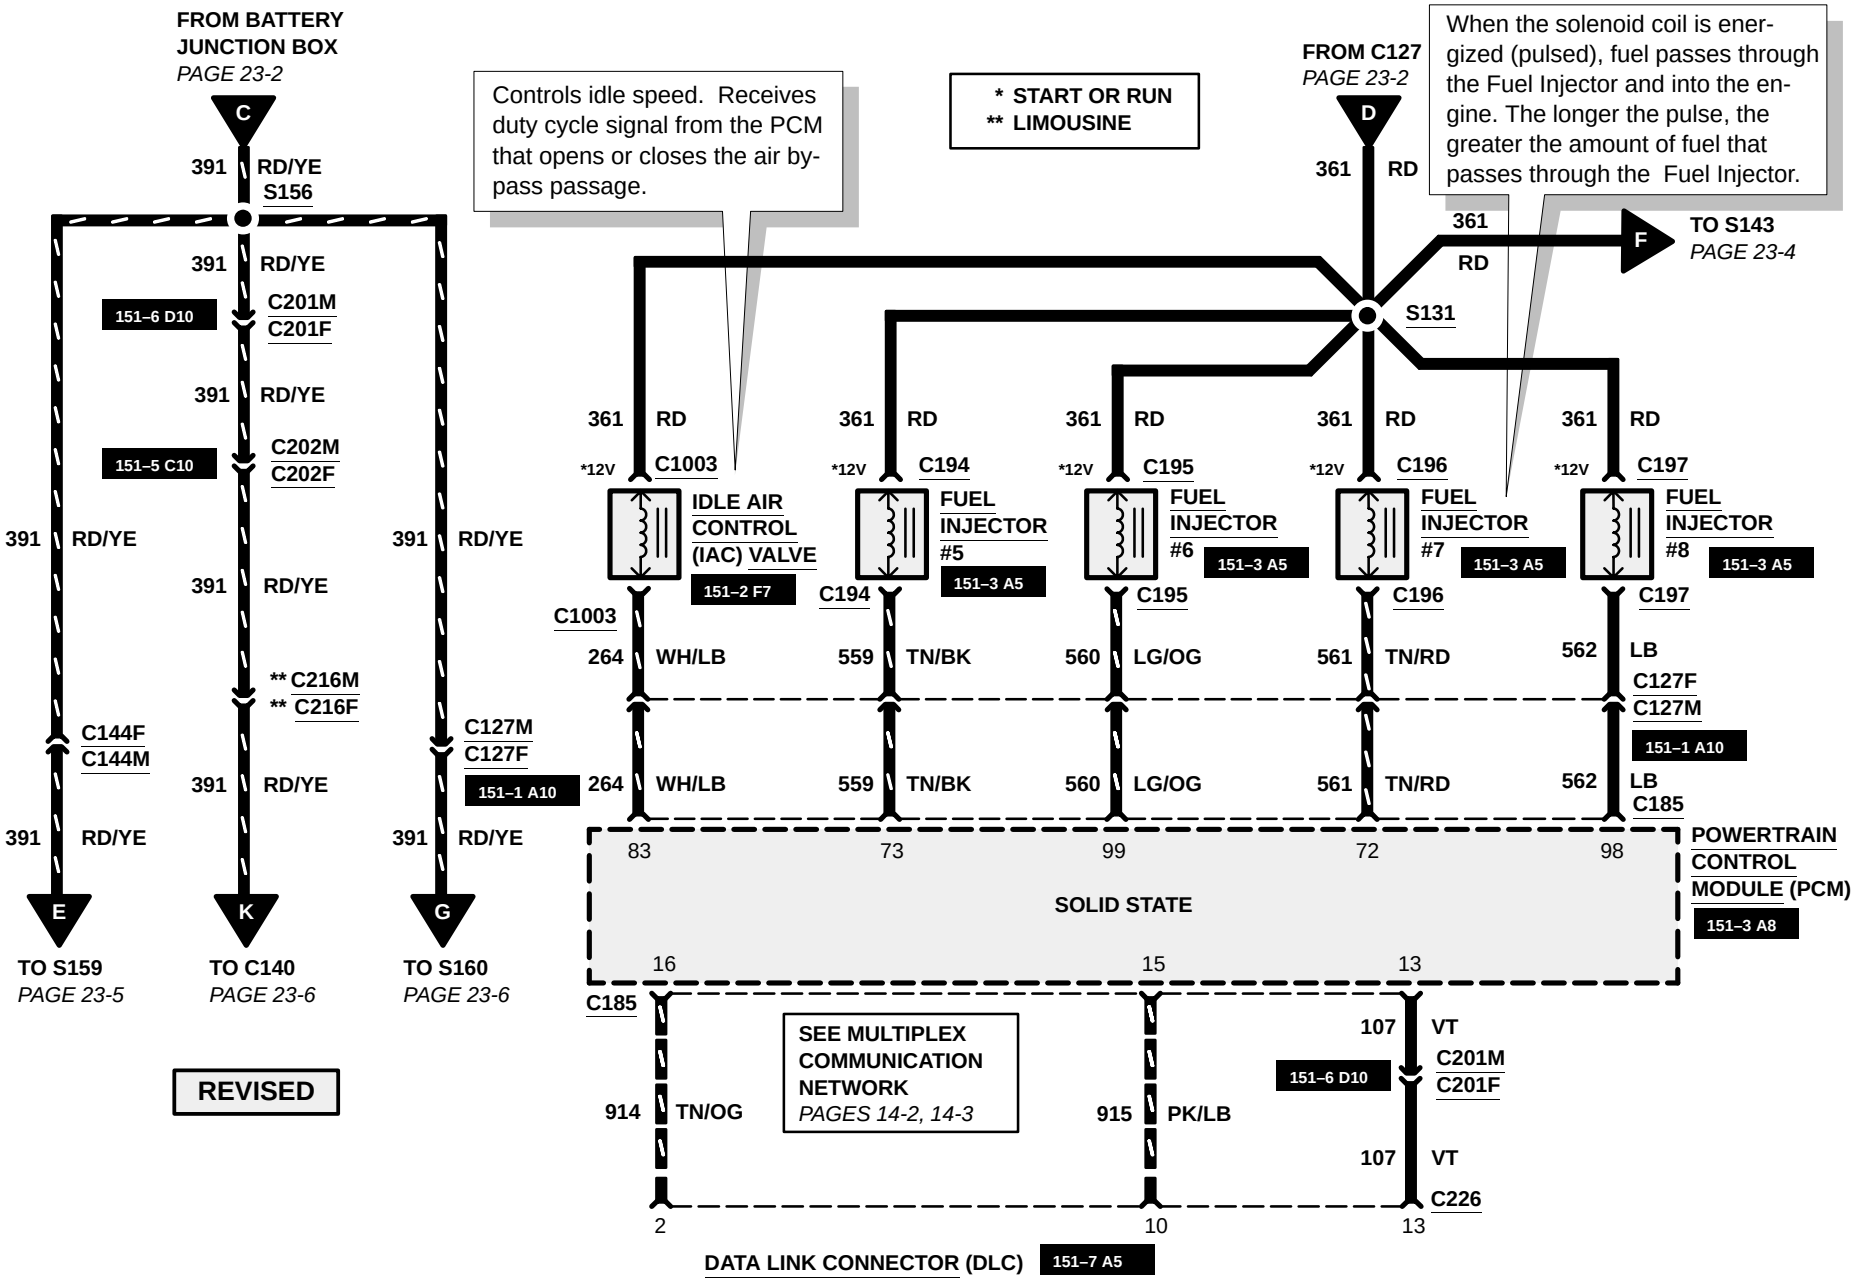
FROM BATTERY JUNCTION BOX
PAGE 23-2
C
391 RD/YE
S156
391 RD/YE
151–6 D10
C201M
C201F
391 RD/YE
151–5 C10
C202M
C202F
391 RD/YE
391 RD/YE
** C216M
** C216F
391 RD/YE
C144F
C144M
391 RD/YE
E
TO S159
PAGE 23-5
391 RD/YE
K
TO C140
PAGE 23-6
391 RD/YE
C127M
C127F
151–1 A10
391 RD/YE
G
TO S160
PAGE 23-6
REVISED
Controls idle speed. Receives duty cycle signal from the PCM that opens or closes the air bypass passage.
* START OR RUN
** LIMOUSINE
When the solenoid coil is energized (pulsed), fuel passes through the Fuel Injector and into the engine. The longer the pulse, the greater the amount of fuel that passes through the Fuel Injector.
FROM C127
PAGE 23-2
D
361 RD
361 RD
F
TO S143
PAGE 23-4
S131
361 RD
*12V
C1003
IDLE AIR CONTROL (IAC) VALVE
151–2 F7
361 RD
*12V
C194
FUEL INJECTOR #5
151–3 A5
361 RD
*12V
C195
FUEL INJECTOR #6
151–3 A5
361 RD
*12V
C196
FUEL INJECTOR #7
151–3 A5
361 RD
*12V
C197
FUEL INJECTOR #8
151–3 A5
C1003
264 WH/LB
C194
559 TN/BK
C195
560 LG/OG
C196
561 TN/RD
C197
562 LB
C127F
C127M
151–1 A10
264 WH/LB
559 TN/BK
560 LG/OG
561 TN/RD
562 LB
C185
83
73
99
72
98
POWERTRAIN CONTROL MODULE (PCM)
151–3 A8
SOLID STATE
16
15
13
C185
914 TN/OG
SEE MULTIPLEX COMMUNICATION NETWORK
PAGES 14-2, 14-3
915 PK/LB
107 VT
151–6 D10
C201M
C201F
107 VT
C226
2
10
13
DATA LINK CONNECTOR (DLC)
151–7 A5