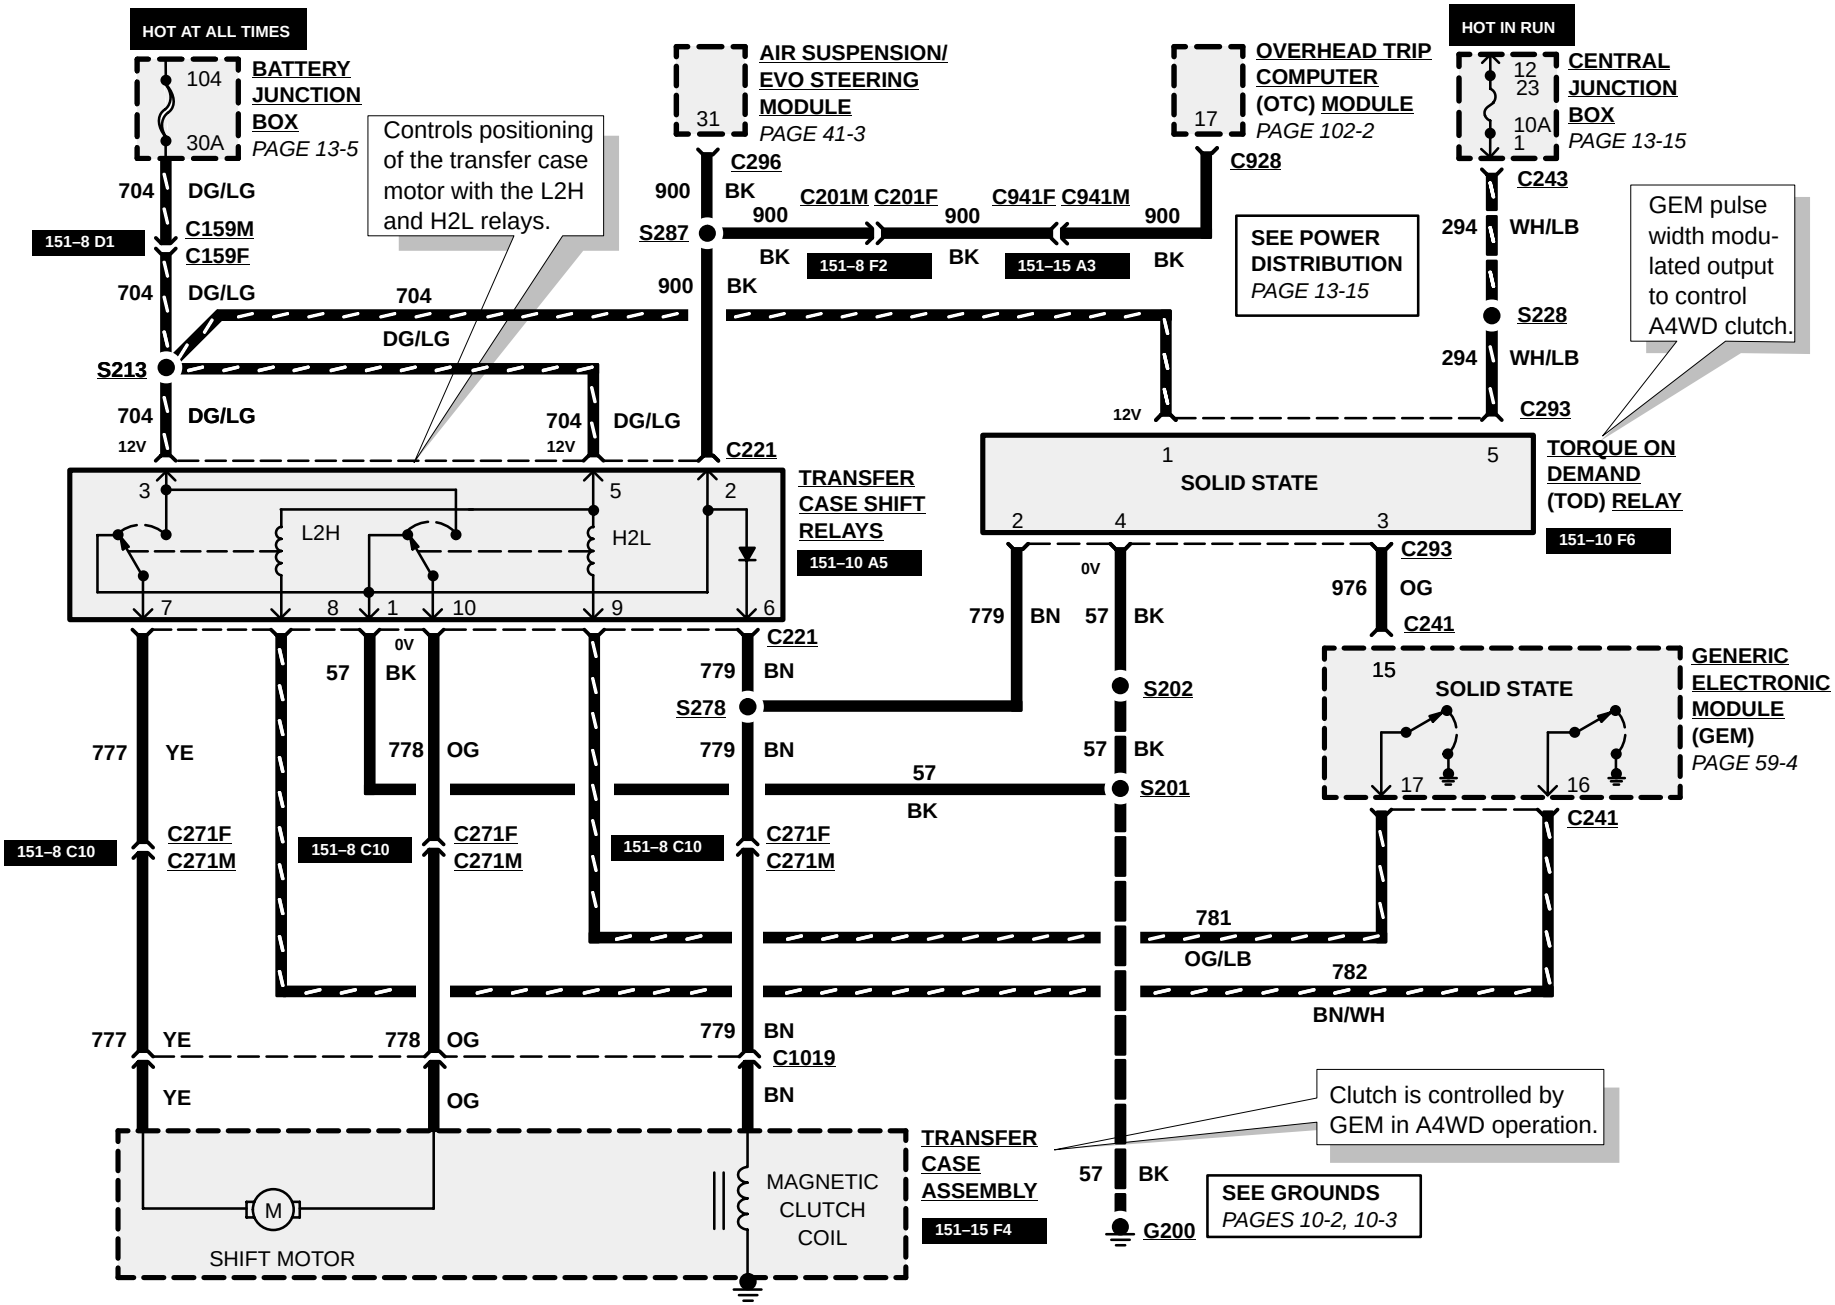
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-5
104
30A
Controls positioning of the transfer case motor with the L2H and H2L relays.
AIR SUSPENSION/ EVO STEERING MODULE
PAGE 41-3
31
OVERHEAD TRIP COMPUTER (OTC) MODULE
PAGE 102-2
17
HOT IN RUN
CENTRAL JUNCTION BOX
PAGE 13-15
12
23
10A
1
C296
C928
C243
704 DG/LG
900 BK
C201M C201F
C941F C941M
294 WH/LB
151–8 D1
C159M
C159F
S287
151–8 F2
151–15 A3
SEE POWER DISTRIBUTION
PAGE 13-15
GEM pulse width modulated output to control A4WD clutch.
S228
S213
294 WH/LB
C293
12V
TORQUE ON DEMAND (TOD) RELAY
151–10 F6
SOLID STATE
TRANSFER CASE SHIFT RELAYS
151–10 A5
L2H
H2L
C221
0V
779 BN
57 BK
976 OG
C241
S278
S202
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-4
SOLID STATE
S201
777 YE
778 OG
781 OG/LB
782 BN/WH
151–8 C10
C271F
C271M
C1019
TRANSFER CASE ASSEMBLY
151–15 F4
SHIFT MOTOR
MAGNETIC CLUTCH COIL
Clutch is controlled by GEM in A4WD operation.
G200
SEE GROUNDS
PAGES 10-2, 10-3