C329

14B084

Heated seat module, passenger side front

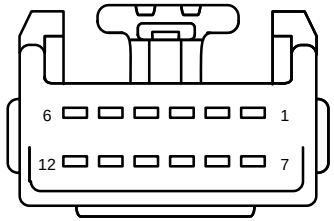

F12075

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	1061 (BN/LB)	Seat cushion heater, driver side, Sensor, return
4	1060 (BK/LB)	Seat cushion heater, passenger side, Sensor, feed
5	295 (LB/PK)	Voltage in Run (overload protected)
6	1064 (YE/LB)	Seat cushion heater, driver side, heater, feed
7	1067 (VT/LB)	Seat back heater, passenger side, heater, return
8	1020 (DG/VT)	Climate controlled seat module
9	–	not used
10	461 (OG)	switch indicator control
11	–	not used
12	1153 (RD/BK)	Voltage supplied at all times (overload protected)

C330

14B084

Seat adjust switch, passenger side front

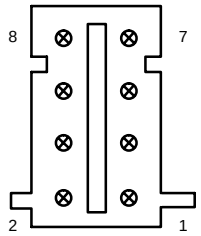

F08245

Pin	Circuit	Circuit function
1	984 (YE/LB)	Seat adjust switch, to, rear, Tilt, Seat motor
2	989 (RD/LG)	Seat adjust switch, to, front, Tilt, Seat motor
3	988 (YE/LG)	Seat adjust switch, to, front, Tilt, Seat motor
4	51 (BK/WH)	Voltage supplied at all times (overload protected)
5	985 (RD/LB)	Seat adjust switch, to, rear, Tilt, Seat motor
6	987 (RD/WH)	Seat adjust switch, to, Passenger seat horizontal motor
7	986 (YE/WH)	Seat adjust switch, to, Passenger seat horizontal motor
8	57 (BK)	Ground