## C3163

### 19K315

Heated seat module, right rear

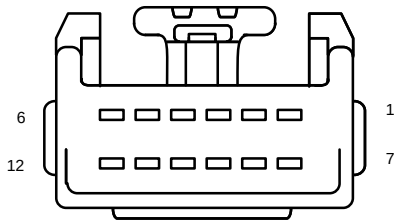


F12075

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 31-HC21 (BK/GN) | Ground |
| 2 | – | not used |
| 3 | 9-HC23 (BN/YE) | Temperature, return |
| 4 | 8-HC23 (WH/BK) | Temperature, signal |
| 5 | 20-HC21D (PK/BK) | Voltage in Run (overload protected) |
| 6 | 20S-HC17 (PK) | heater, feed |
| 7 | 31S-HC16 (BK/BU) | heater, return |
| 8 | 8-HC21 (WH/GN) | Climate controlled seat module - High |
| 9 | 7-HC22 (YE) | indicator - Low |
| 10 | 7-HC21 (YE/GN) | indicator - High |
| 11 | 10-HC21 (GY/OG) | Climate controlled seat module - Height sensor, left front |
| 12 | 30-HC21 (RD/GN) | Voltage supplied in Start and Run (overload protected) |

## C3167

### 19K315

Seat cushion heater, left rear

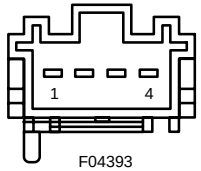


F04393

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 20S-HC17 (PK) | heater, feed |
| 2 | 8-HC23 (WH/BK) | Temperature, signal |
| 3 | 9-HC23 (BN/YE) | Temperature, return |
| 4 | 20S-HC16 (PK/BU) | heater, return |

## C3168

### 19K315

Seat cushion heater, right rear

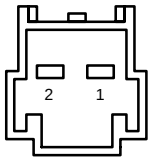


F02077

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 20S-HC16 (PK/BU) | heater, feed |
| 2 | 31S-HC16 (BK/BU) | Temperature, signal |