* DIESEL

4R100

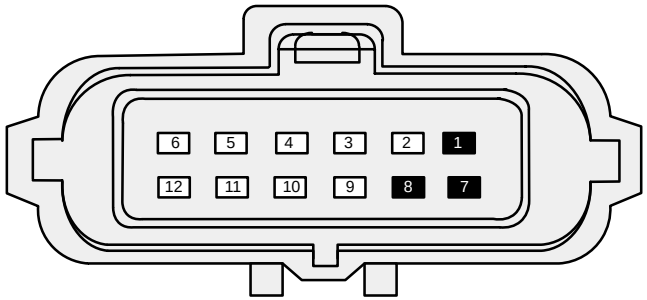

C115

DIGITAL TRANSMISSION RANGE (DTR) SENSOR

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	359 (GY/RD)	Signal Return
3	199 (LB/YE)	TR3A Signal to PCM
4	*1012 (OG/BK)	TR1 Signal to PCM
	1144 (YE/BK)	TR1 Signal to PCM
5	*146 (WH/PK)	TR2 Signal to PCM
	1145 (LB/BK)	TR2 Signal to PCM
6	*145 (GY/BK)	TR4 Signal to PCM
	1146 (LG/RD)	TR4 Signal to PCM
7	–	NOT USED
8	–	NOT USED
9	296 (WH/VT)	Fused Power Feed (Hot in Run)
10	32 (RD/LB)	Starter Relay Enable
11	140 (BK/PK)	Reversing Lamp Output (Hot in Reverse)
12	1093 (TN/RD)	Start Signal from Steering Column/ Ignition/Lighting Control Module

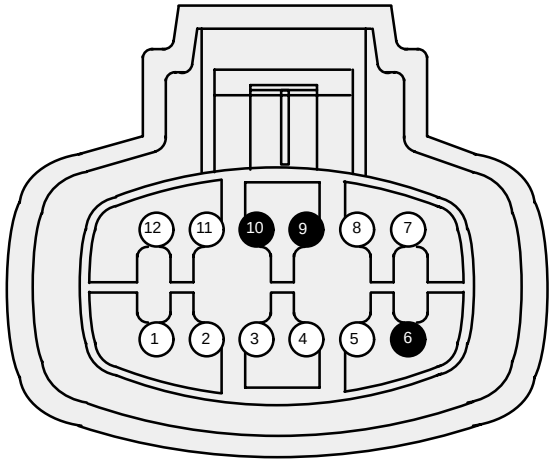

C114

4R100 TRANSMISSION

PIN	CIRCUIT	CIRCUIT FUNCTION
1	361 (RD)	Power Feed from PCM Power Relay
2	315 (VT/OG)	Shift Solenoid B
3	237 (OG/YE)	Shift Solenoid A
4	480 (VT/YE)	Torque Converter Clutch (TCC) Solenoid
5	924 (BN/OG)	Coast Clutch Solenoid
6	–	NOT USED
7	923 (OG/BK)	Transmission Fluid Temperature (TFT) Sensor
8	359 (GY/RD)	Sensor Signal Return
9	–	NOT USED
10	–	NOT USED
11	925 (WH/YE)	Electronic Pressure Control (EPC)
12	361 (RD)	Power Feed from PCM Power Relay