C339

19A442

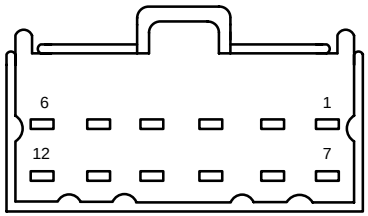

F12019

1) 724 (LB/YE)
2) 1204 (BK/OG)
3) 720 (RD/YE)
4) 728 (RD/OG)
5) 713 (WH)
6) 57 (BK)
7) 725 (PK)
8) 723 (GY/RD)
9)
10) 297 (BK/LG)
11) 714 (VT)
12) 57 (BK)

19A456

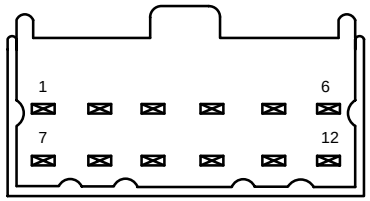

F12036

1) 724 (LB/YE)
2) 1204 (BK/OG)
3) 720 (RD/YE)
4) 728 (RD/OG)
5 713 (WH)
6) 57 (BK)
7) 725 (PK)
8) 723 (GY/RD)
9)
10) 297 (BK/LG)
11) 714 (VT)
12) 57 (BK)

C340

19A442

Microphone

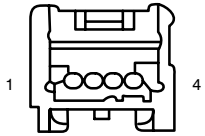

F04381

Pin	Circuit	Circuit function
1	714 (VT)	Microphone, audio +
2	713 (WH)	Microphone, audio –
3	1204 (BK/OG)	Ground
4	728 (WH/OG)	On button

C356 (NA)

14A699

Seat track position sensor, left

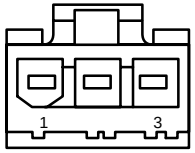

F03111

Pin	Circuit	Circuit function
1	1558 (TN/BK)	Seat position sensor - horizontal sense
2	–	not used
3	1520 (LG)	Seat position sensor - horizontal sense

C357

14A699

Power seat motor assembly, left

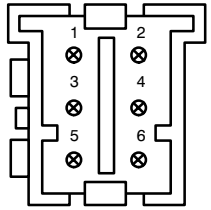

F06089

Pin	Circuit	Circuit function
1	981 (RD/WH)	Fwd/Rwd motor, Forward
2	980 (YE/WH)	Fwd/Rwd motor, Rearward
3	990 (YE/LB)	Front height motor, Down
4	983 (RD/LG)	Rear height motor, Up
5	979 (RD/LB)	Front height motor, Up
6	982 (YE/LG)	Rear height motor, Down