C280

14401

N452
Traction control
switch

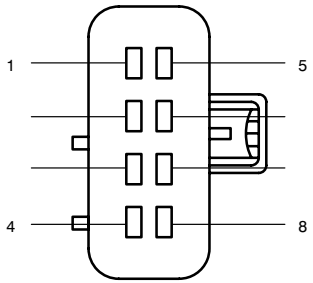

F08088

Pin	Circuit	Circuit function
1	489 (PK/BK)	Voltage in Run (overload protected)
2	959 (GY)	Traction control switch, to, Instrument cluster
3	–	not used
4	960 (BK/LB)	Traction assist On/Off indicator, to ABS control module
5	–	not used
6	489 (PK/BK)	Voltage in Run (overload protected)
7	1205 (BK)	Ground
8	19 (LB/RD)	Instrument illumination, feed

C282

14A005

N316
Inertia Fuel Shutoff
(IFS) switch
(9D362)



F03239

Pin	Circuit	Circuit function
1	–	not used
2	238 (DG/YE)	Fuel pump relay, switched power, output
3	787 (PK/BK)	Fuel pump, Power

C290a

14401

A11
Radio (18806)

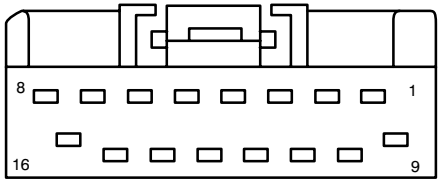

F16071

Pin	Circuit	Circuit function
1	19 (LB/RD)	Instrument illumination, feed
2	1205 (BK)	Illumination, Ground
3	32 (RD/LB)	Voltage supplied in Start (overload protected)
4	–	not used
5	802 (OG/RD)	Speaker, right rear (18808) +
6	803 (BN/PK)	Speaker, right rear (18808) –
7	805 (WH/LG)	Speaker, right front (18808) +
8	811 (DG/OG)	Speaker, right front (18808) –
9	828 (VT/LB)	Voltage supplied at all times (overload protected)
10	1002 (BK/PK)	Voltage in Run or Accessory (overload protected)
11	694 (BK/LG)	audio ground
12	800 (GY/LB)	Speaker, left rear (18808) +
13	801 (TN/YE)	Speaker, left rear (18808) –
14	804 (OG/LG)	Speaker, left front (18808) +
15	813 (LB/WH)	Speaker, left front (18808) –
16	694 (BK/LG)	audio ground