## C1184

**12B637**

Y111
Fuel injector 4
(9F593)

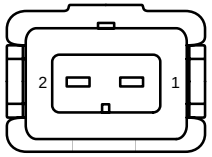


F02089

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1168 (YE/BK) | Fuel injector 4, control – Natural Gas Vehicle (NGV) |
| 2 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |

## C1185

**12B637**

Y112
Fuel injector 5
(9F593)

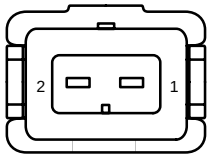


F02089

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1169 (WH/LB) | Fuel injector 4, control – Natural Gas Vehicle (NGV) |
| 2 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |

## C1186

**12B637**

Y113
Fuel injector 6
(9F593)

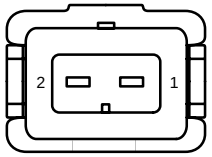


F02089

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1170 (YE/LB) | Fuel injector 6, control – Natural Gas Vehicle (NGV) |
| 2 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |

## C1189

**12B637**

B8
Throttle Position
Sensor (TPS)
(9B989)

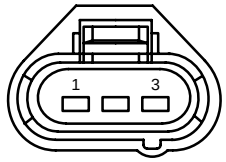


F03175

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 359 (GY/RD) | signal, return |
| 2 | 355 (GY/WH) | Throttle Position Sensor (TPS) (9B989), input |
| 3 | 351 (BN/WH) | Reference, voltage |

## C1195

**12B637**

P133
Vapor management
valve

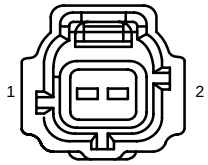


F02103

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 391 (RD/YE) | Voltage supplied in Start and Run (overload protected) |
| 2 | 191 (LG/BK) | Powertrain Control Module (PCM) (12A650), Vapor management valve |

## C1196

**12B637**

U1
Ignition transformer
capacitor

F01031

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 16 (RD/LG) | Voltage supplied in Start and Run (overload protected) |