COMPONENT TESTING PROCEDURE

Connect battery pos. and neg. to terminals:	Check continuity from terminals:	Continuity will be:
85 and 86	30 to 87 and 30 to 87A	From 30 to 87 only
–	85 to all others	To 86 only
–	30 to all others	To 87A only

TERMINALS

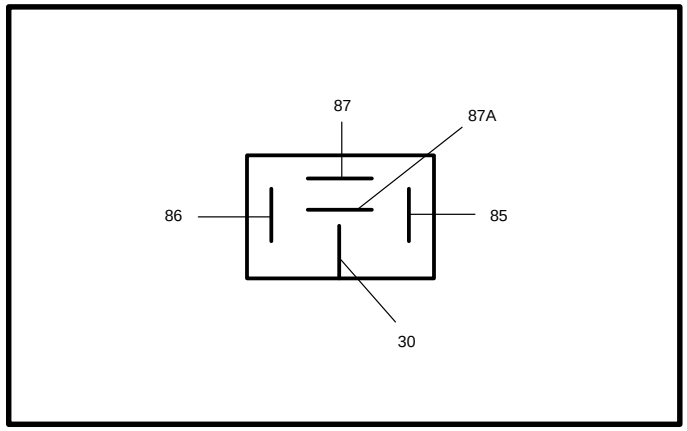
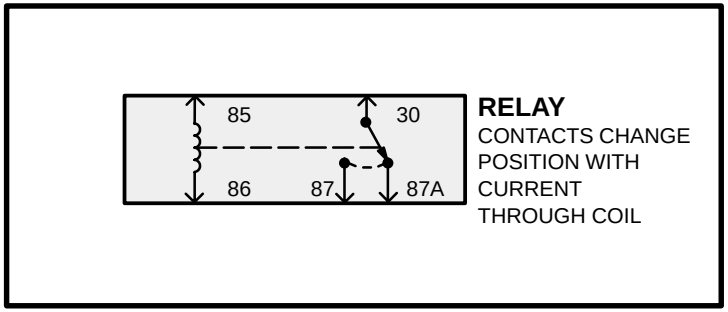
SCHEMATIC