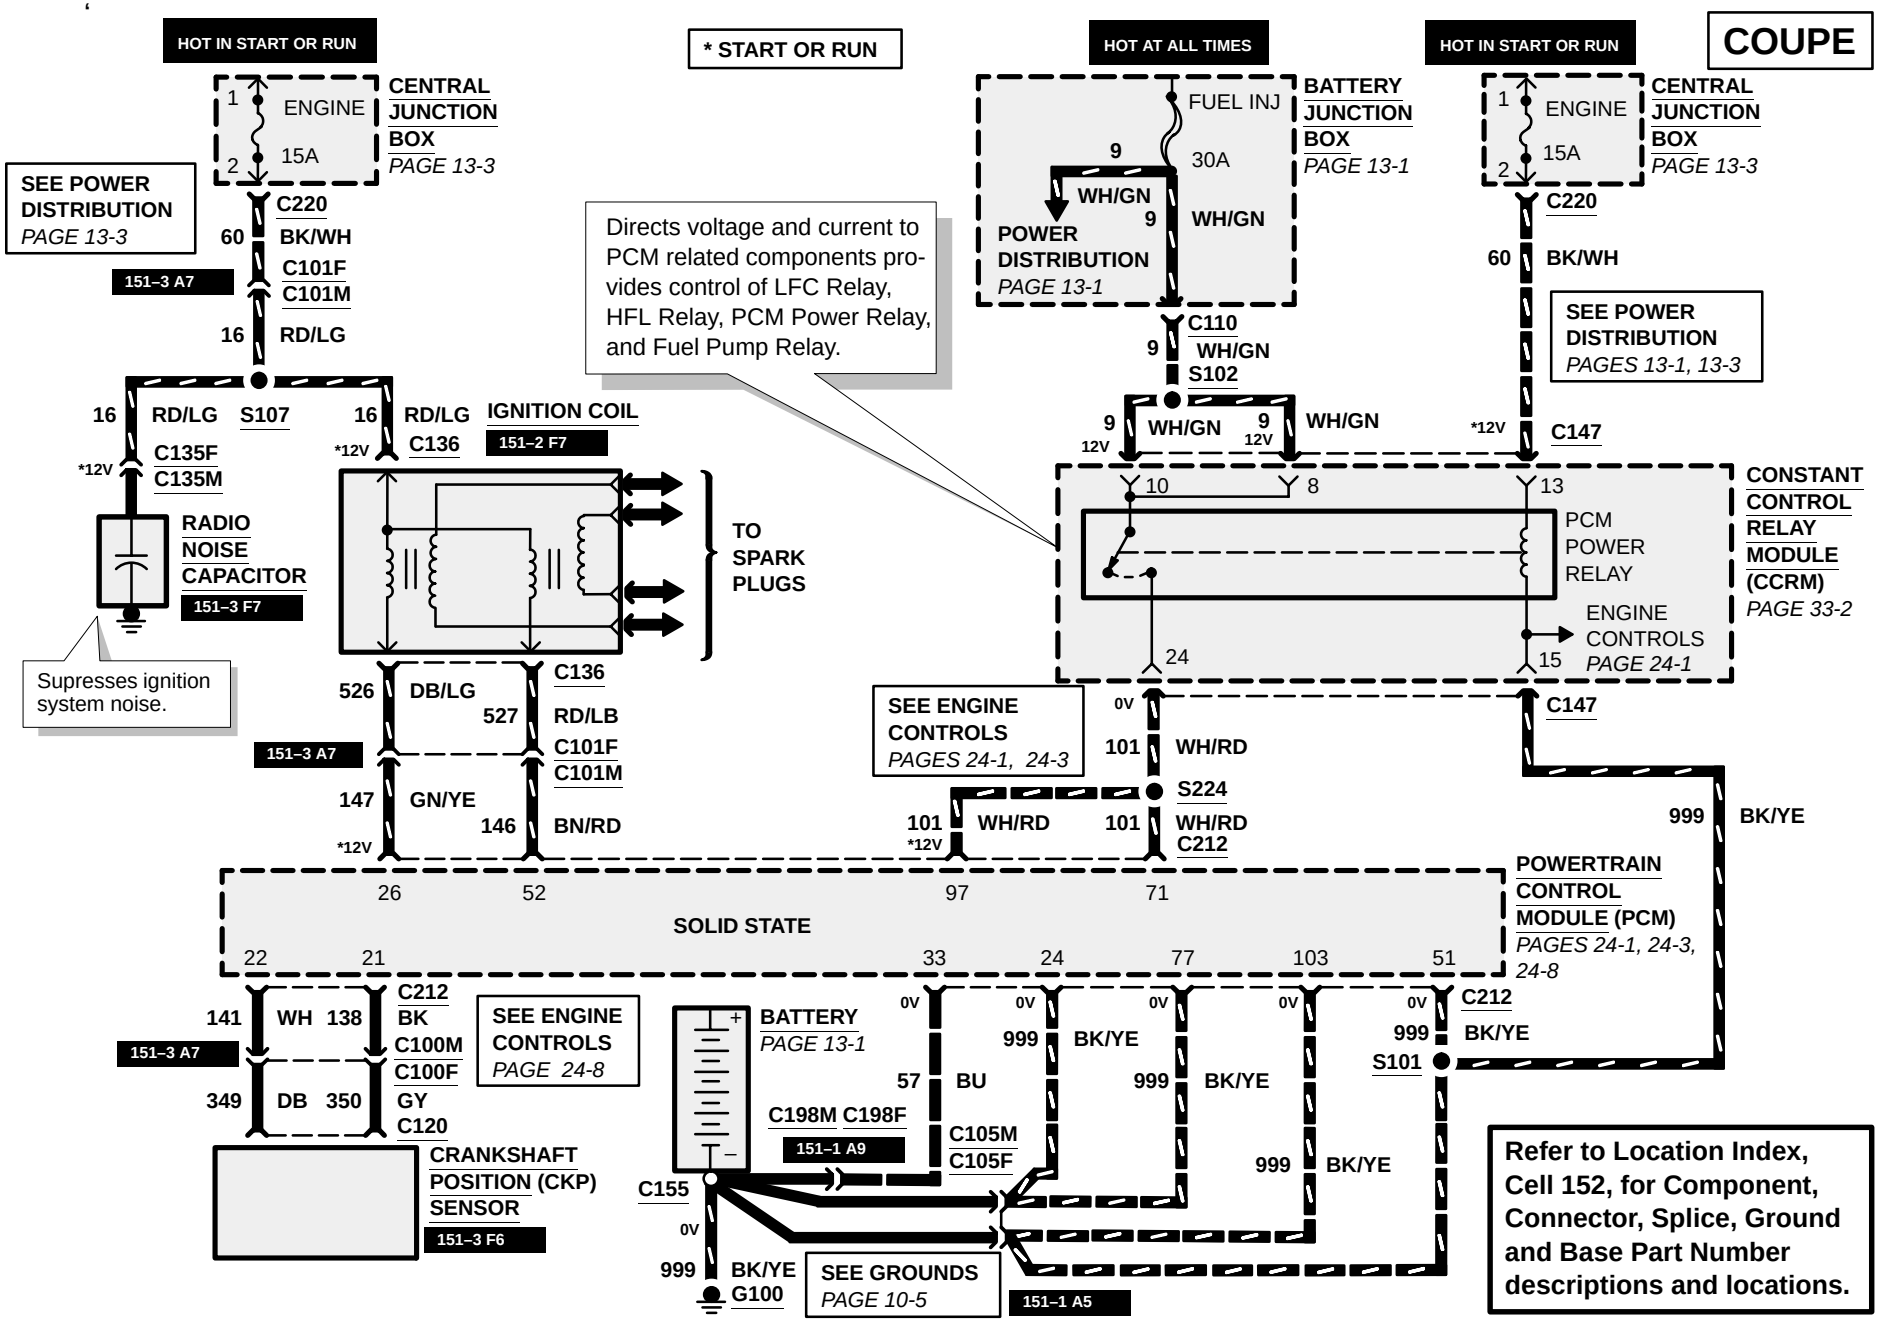
COUPE
HOT IN START OR RUN
* START OR RUN
HOT AT ALL TIMES
HOT IN START OR RUN
CENTRAL JUNCTION BOX PAGE 13-3
ENGINE
15A
SEE POWER DISTRIBUTION PAGE 13-3
C220
60 BK/WH
C101F
C101M
151–3 A7
16 RD/LG
Directs voltage and current to PCM related components provides control of LFC Relay, HFL Relay, PCM Power Relay, and Fuel Pump Relay.
FUEL INJ
30A
BATTERY JUNCTION BOX PAGE 13-1
9 WH/GN
POWER DISTRIBUTION PAGE 13-1
C110
S102
SEE POWER DISTRIBUTION PAGES 13-1, 13-3
C147
CONSTANT CONTROL RELAY MODULE (CCRM) PAGE 33-2
PCM POWER RELAY
ENGINE CONTROLS PAGE 24-1
16 RD/LG S107
C135F
C135M
*12V
RADIO NOISE CAPACITOR
151–3 F7
Supresses ignition system noise.
16 RD/LG C136
IGNITION COIL
151–2 F7
TO SPARK PLUGS
526 DB/LG
527 RD/LB
C136
C101F
C101M
151–3 A7
147 GN/YE
146 BN/RD
SEE ENGINE CONTROLS PAGES 24-1, 24-3
101 WH/RD
S224
C212
999 BK/YE
POWERTRAIN CONTROL MODULE (PCM) PAGES 24-1, 24-3, 24-8
SOLID STATE
141 WH 138 BK
C100M
C100F
349 DB 350 GY
C120
SEE ENGINE CONTROLS PAGE 24-8
CRANKSHAFT POSITION (CKP) SENSOR
151–3 F6
BATTERY PAGE 13-1
C198M C198F
151–1 A9
57 BU
C105M
C105F
S101
C155
G100
SEE GROUNDS PAGE 10-5
151–1 A5
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.