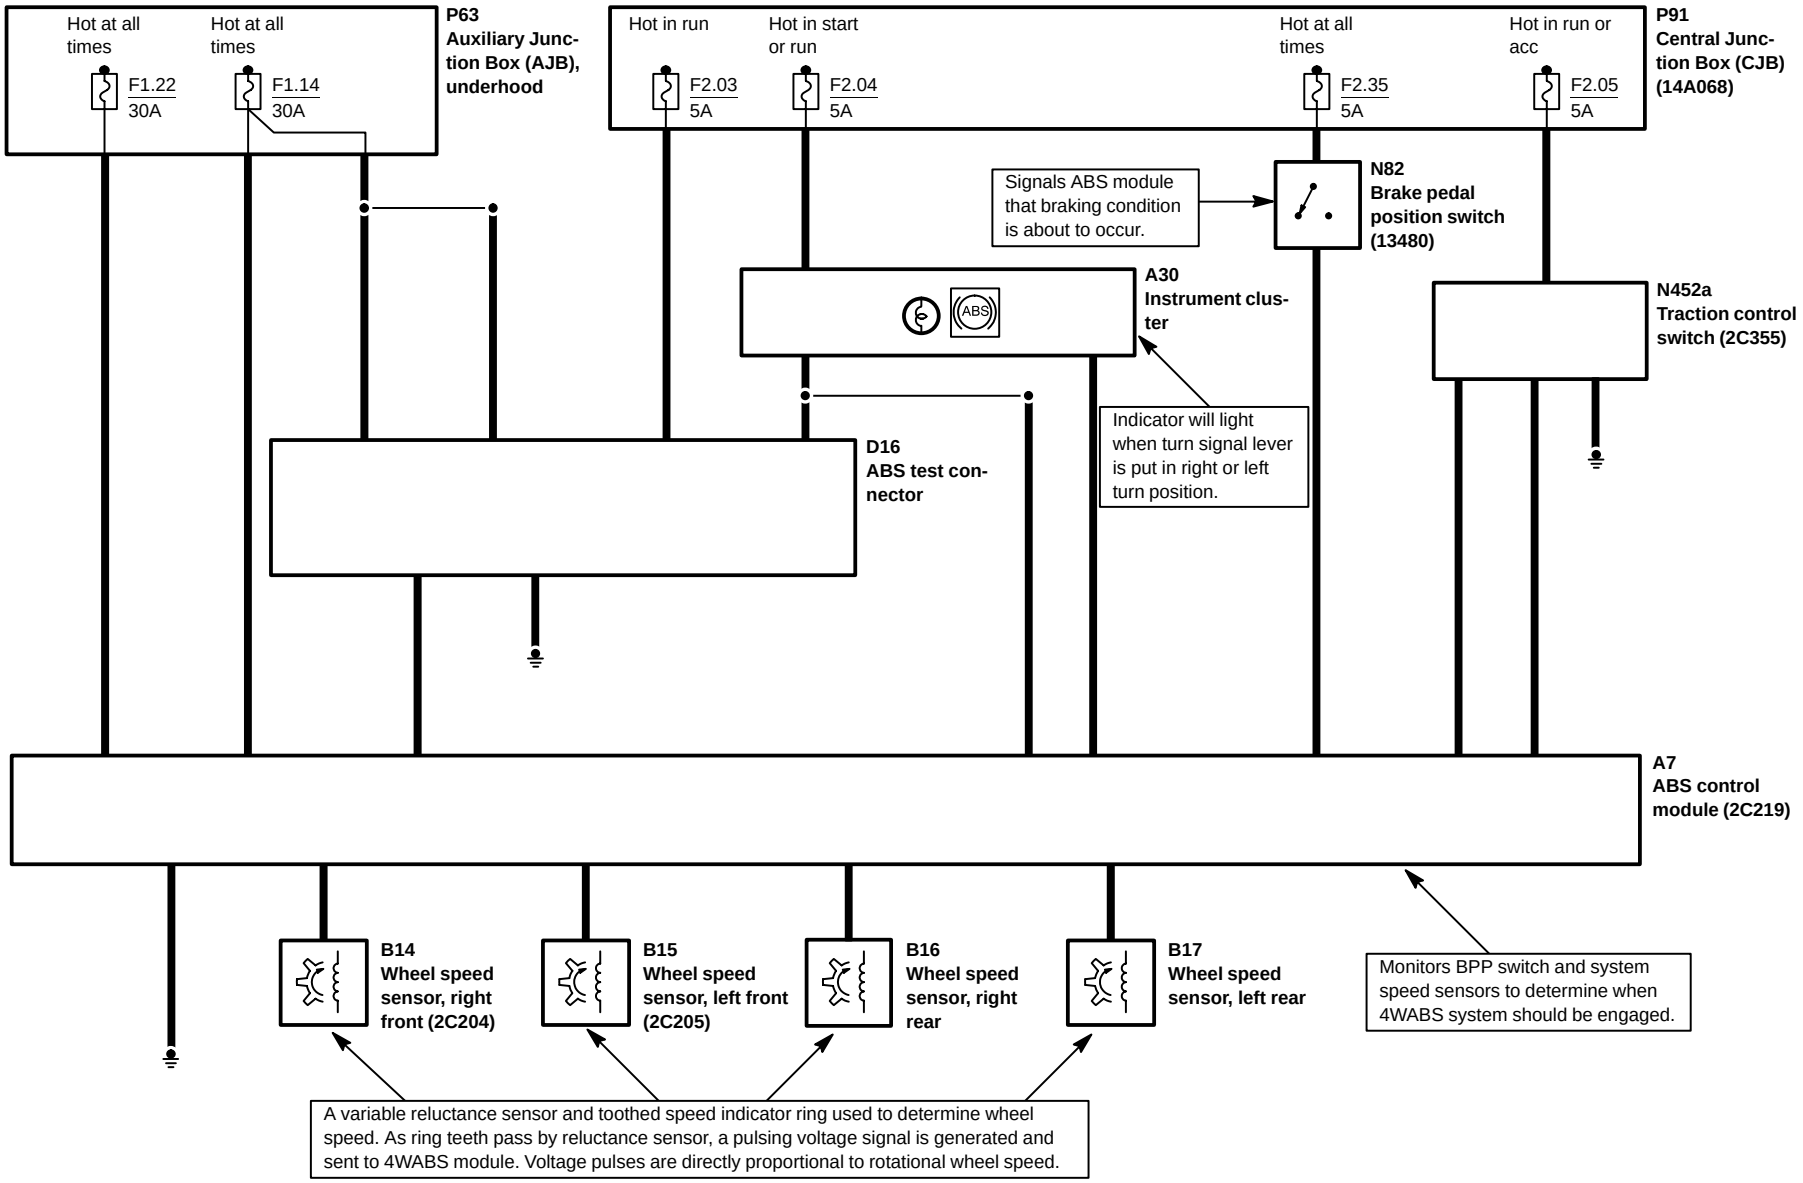
Hot at all times
Hot at all times
F1.22
30A
F1.14
30A
P63
Auxiliary Junction Box (AJB), underhood
Hot in run
Hot in start or run
Hot at all times
Hot in run or acc
F2.03
5A
F2.04
5A
F2.35
5A
F2.05
5A
P91
Central Junction Box (CJB) (14A068)
Signals ABS module that braking condition is about to occur.
N82
Brake pedal position switch (13480)
A30
Instrument cluster
ABS
N452a
Traction control switch (2C355)
Indicator will light when turn signal lever is put in right or left turn position.
D16
ABS test connector
A7
ABS control module (2C219)
B14
Wheel speed sensor, right front (2C204)
B15
Wheel speed sensor, left front (2C205)
B16
Wheel speed sensor, right rear
B17
Wheel speed sensor, left rear
Monitors BPP switch and system speed sensors to determine when 4WABS system should be engaged.
A variable reluctance sensor and toothed speed indicator ring used to determine wheel speed. As ring teeth pass by reluctance sensor, a pulsing voltage signal is generated and sent to 4WABS module. Voltage pulses are directly proportional to rotational wheel speed.