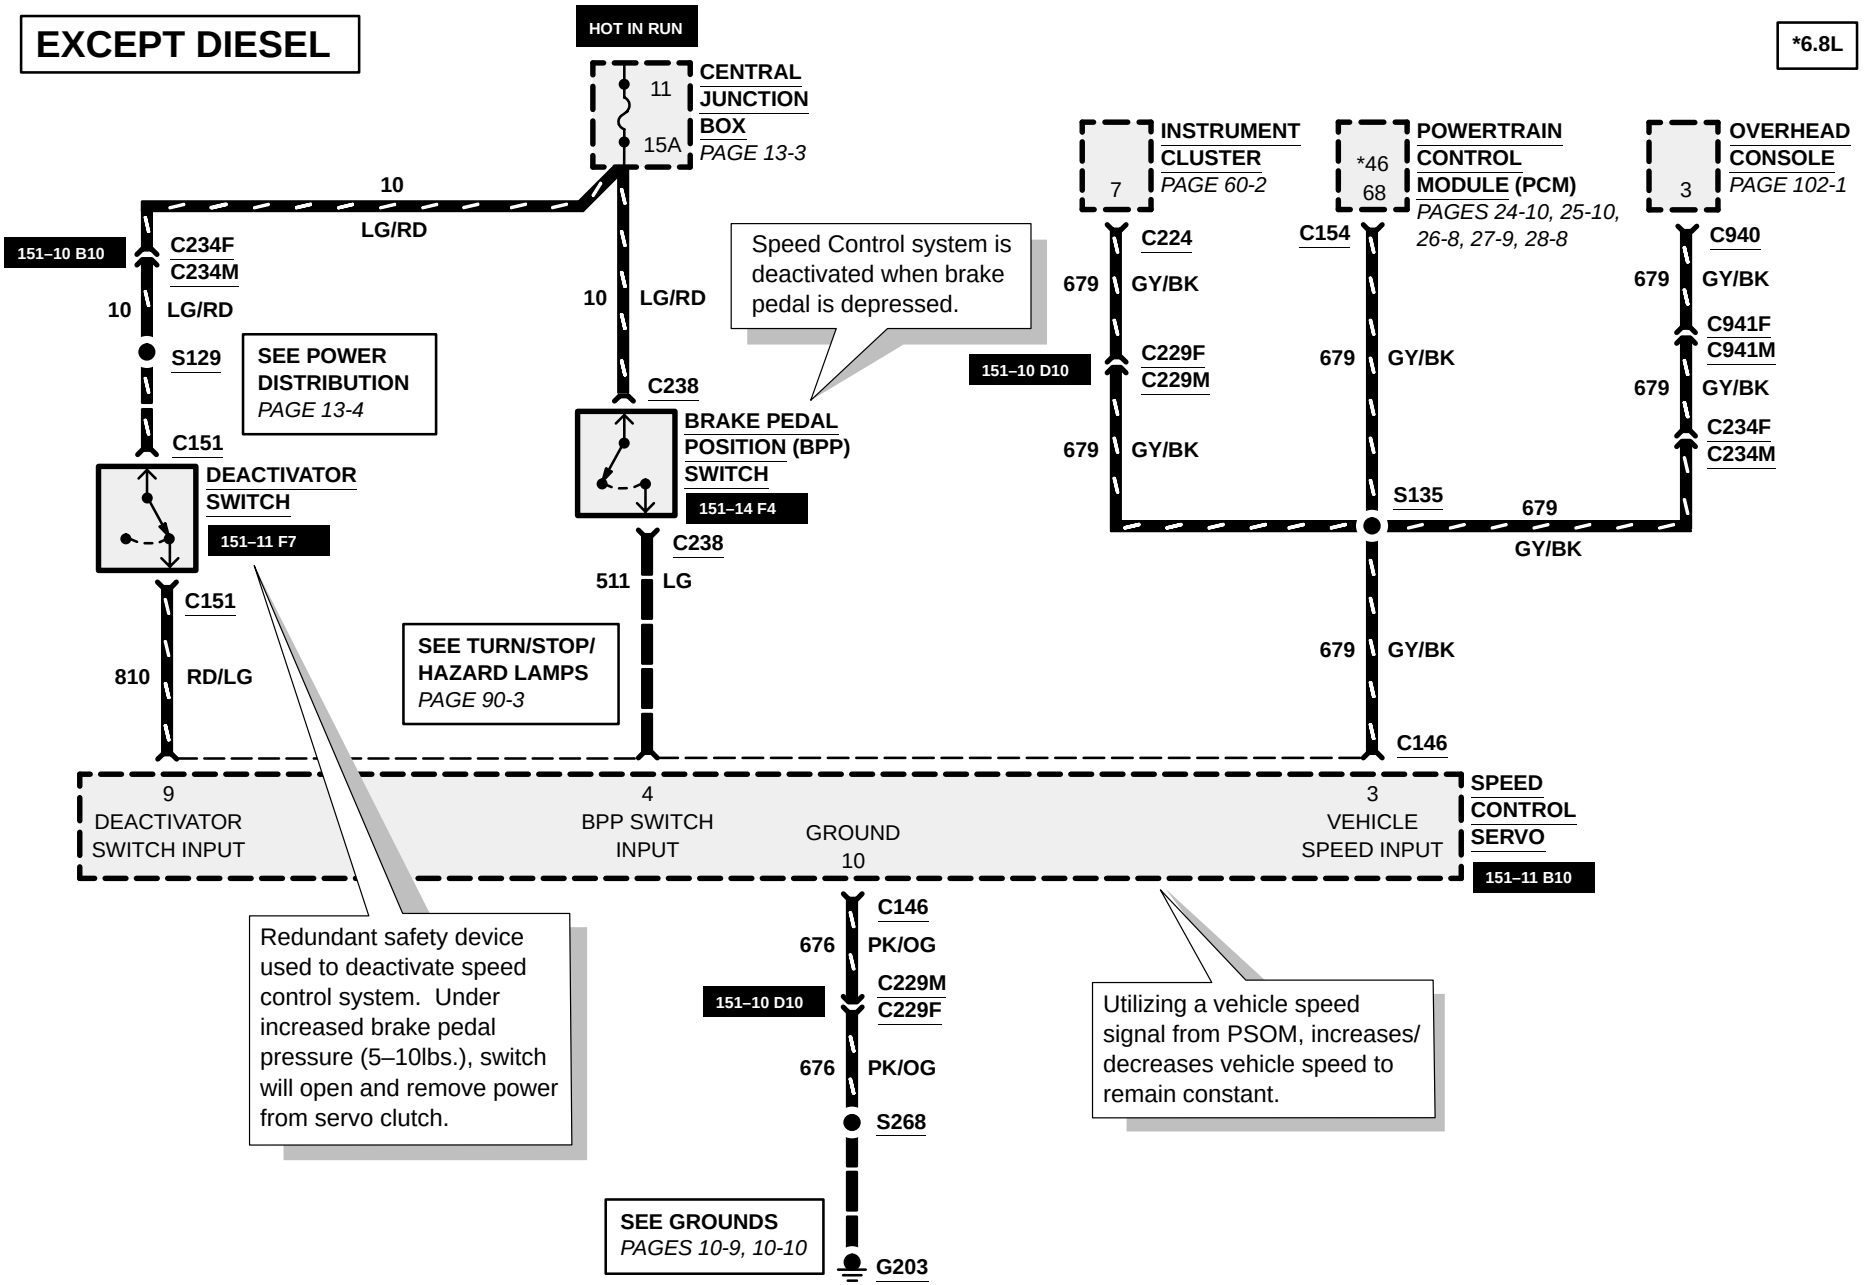
EXCEPT DIESEL
*6.8L
HOT IN RUN
CENTRAL JUNCTION BOX
11
15A
PAGE 13-3
INSTRUMENT CLUSTER
7
PAGE 60-2
POWERTRAIN CONTROL MODULE (PCM)
*46
68
PAGES 24-10, 25-10, 26-8, 27-9, 28-8
OVERHEAD CONSOLE
3
PAGE 102-1
10
LG/RD
151–10 B10
C234F
C234M
10
LG/RD
S129
SEE POWER DISTRIBUTION
PAGE 13-4
C151
DEACTIVATOR SWITCH
151–11 F7
C151
810
RD/LG
10
LG/RD
C238
BRAKE PEDAL POSITION (BPP) SWITCH
151–14 F4
C238
511
LG
Speed Control system is deactivated when brake pedal is depressed.
SEE TURN/STOP/ HAZARD LAMPS
PAGE 90-3
C224
679
GY/BK
151–10 D10
C229F
C229M
679
GY/BK
C154
679
GY/BK
S135
679
GY/BK
C940
679
GY/BK
C941F
C941M
679
GY/BK
C234F
C234M
C146
9
DEACTIVATOR SWITCH INPUT
4
BPP SWITCH INPUT
GROUND
10
3
VEHICLE SPEED INPUT
SPEED CONTROL SERVO
151–11 B10
Redundant safety device used to deactivate speed control system. Under increased brake pedal pressure (5–10lbs.), switch will open and remove power from servo clutch.
C146
676
PK/OG
151–10 D10
C229M
C229F
676
PK/OG
S268
SEE GROUNDS
PAGES 10-9, 10-10
G203
Utilizing a vehicle speed signal from PSOM, increases/ decreases vehicle speed to remain constant.