C310a

14A005

Restraints control module (14B321)

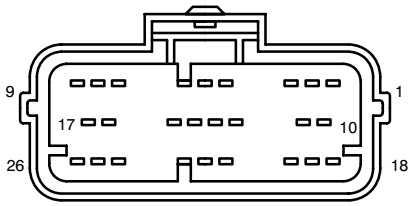

F26008

Pin	Circuit	Circuit function
1	1556 (DG/VT)	Seat weight sensor, passenger
2	1557 (DB/OG)	Seat weight sensor, passenger
3	1079 (LG/RD)	Driver safety belt retractor pretensioner, feed
4	1080 (LG/BK)	Driver safety belt retractor pretensioner, return
5	85 (BN/LB)	Safety belt buckle switch, driver
6	1081 (YE/RD)	Passenger safety belt retractor pretensioner, feed
7	1082 (YE/BK)	Passenger safety belt retractor pretensioner, return
8	1520 (LG)	Seat position sensor – horizontal sense
9	1558 (TN/BK)	Safety belt buckle switch (10B924), return
10	1514 (RD/BK)	Safety belt buckle switch, passenger
11	1516 (YE/WH)	Driver air bag, feed, monitor
12	1517 (RD/OG)	Driver air bag, return
13	1261 (WH/LG)	Air bag – driver side impact crash sensor to module – feed
14	1262 (BN/LG)	Air bag – driver side impact crash sensor to module – return
15	1257 (WH/LB)	Air bag – driver side impact to module – feed
16	1258 (RD)	Air bag – driver side impact to module – return
17	1263 (WH)	Air bag – passenger side impact crash sensor to module – feed
18	1264 (BN)	Air bag – passenger side impact crash sensor to module – return
19	–	not used
20	1518 (RD/WH)	Passenger air bag, feed, monitor
21	1519 (LG/RD)	Passenger air bag, return
22	–	not used
23	1259 (WH/YE)	Air bag – passenger side impact to module – feed
24	1260 (BN/YE)	Air bag – passenger side impact to module – return
25	617 (PK/OG)	Air bag crash sensor #1, feed
26	618 (VT/LG)	Air bag crash sensor #1, monitor

C310b

14A005

Restraints control module (14B321)

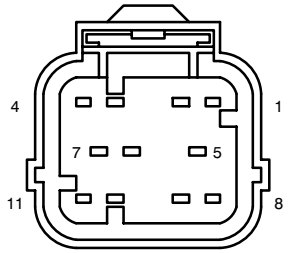

F11018

Pin	Circuit	Circuit function
1	298 (VT/OG)	Voltage supplied in Start and Run (overload protected)
2	615 (GY/WH)	Driver air bag, return
3	614 (GY/OG)	Driver air bag, feed, monitor
4	70 (LB/WH)	ISO Bus
5	616 (PK/BK)	Passenger air bag, return
6	607 (LB/OG)	Passenger air bag, feed, monitor
7	866 (WH)	Signal to VEMS
8	57 (BK)	Ground
9	608 (BK/YE)	Air bag indicator, control
10	57 (BK)	Ground
11	1083 (LB/BK)	Air bag, tone driver