COMPONENT TESTING PROCEDURE

Connect battery positive and negative to terminals:	Check continuity from terminals	Continuity will be:
85 and 86	30 to 87 and 30 to 87A	From 30 to 87 only
–	85 to all others	To 86 only
–	30 to all others	To 87A only

TERMINALS

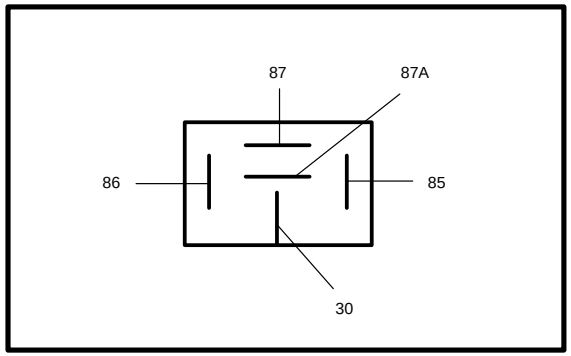
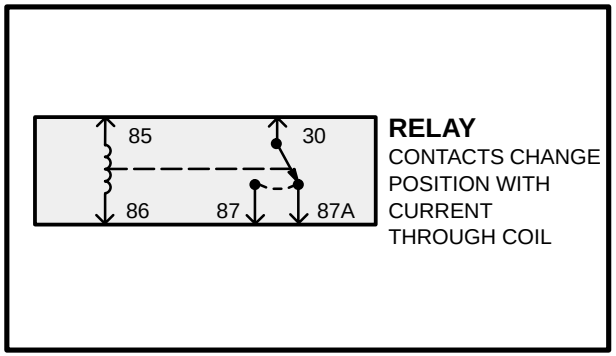
SCHEMATIC