* COUPE

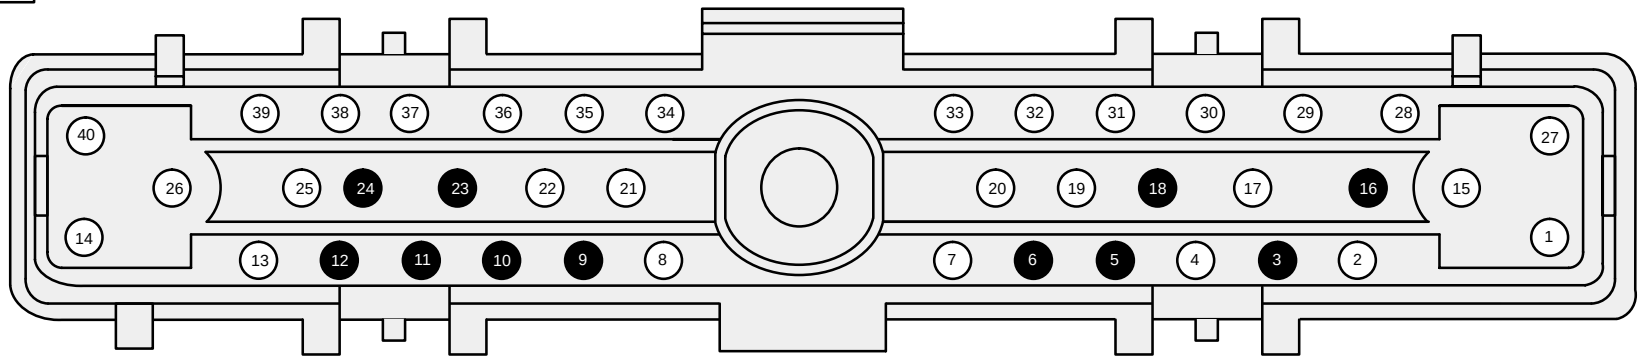


**C386**
**ANTI-LOCK BRAKE CONTROL MODULE**

| PIN | CIRCUIT | CIRCUIT FUNCTION | PIN | CIRCUIT | CIRCUIT FUNCTION |
|---|---|---|---|---|---|
| 1 | 57 (BK) | Ground | 21 | 915 (RD/BU) | Left Rear Anti-Lock Brake Sensor |
| 2 | 351 (GN) | Brake Pedal Position (BPP) Switch | 22 | 914 (PK/BU) | Right Rear Anti-Lock Brake Sensor |
| 3 | – | NOT USED | 23 | – | NOT USED |
| 4 | 908 (RD/YE) | ABS Main Relay Control | 24 | – | NOT USED |
| 5 | – | NOT USED | 25 | 907 (YE) | Power (ABS Relay) |
| 6 | – | NOT USED | 26 | 906 (RD/YE) | Hydraulic Pump Motor Control |
| 7 | 57 (BK) | Ground | 27 | 57 (BK) | Ground |
| 8 | 710 (WH) | Power (Hot in Start or Run) | 28 | 923 (GY/RD) | Right Rear Solenoid Valve Control |
| 9 | – | NOT USED | 29 | 921 (PK/GN) | Left Rear Solenoid Valve Control |
| 10 | – | NOT USED | 30 | 922 (VT/WH) | Right Rear Solenoid Valve Control |
| 11 | – | NOT USED | 31 | 920 (LG/BK) | Left Rear Solenoid Valve Control |
| 12 | – | NOT USED | 32 | 911 (GN) | Left Front Anti-Lock Brake Sensor |
| 13 | 529 (OG) | Data Link Connector (DLC) | 33 | 910 (BK/PK) | Right Front Anti-Lock Brake Sensor |
| | *529 (OG/BU) | Data Link Connector (DLC) | 34 | 916 (BK/RD) | Left Rear Anti-Lock Brake Sensor |
| 14 | 57 (BK) | Ground | 35 | 913 (GY/BU) | Right Rear Anti-Lock Brake Sensor |
| 15 | 57 (BK) | Ground | 36 | 902 (BN) | Left Front Solenoid Valve Control |
| 16 | – | NOT USED | 37 | 904 (VT) | Right Front Solenoid Valve Control |
| 17 | 918 (YE/RD) | Anti-Lock Brake Indicator | 38 | 903 (PK) | Left Front Solenoid Valve Control |
| 18 | – | NOT USED | 39 | 905 (BU/OG) | Right Front Solenoid Valve Control |
| 19 | 912 (RD) | Left Front Anti-Lock Brake Sensor | 40 | 906 (RD/YE) | Hydraulic Pump Motor Control |
| 20 | 909 (OG) | Right Front Anti-Lock Brake Sensor | | | |