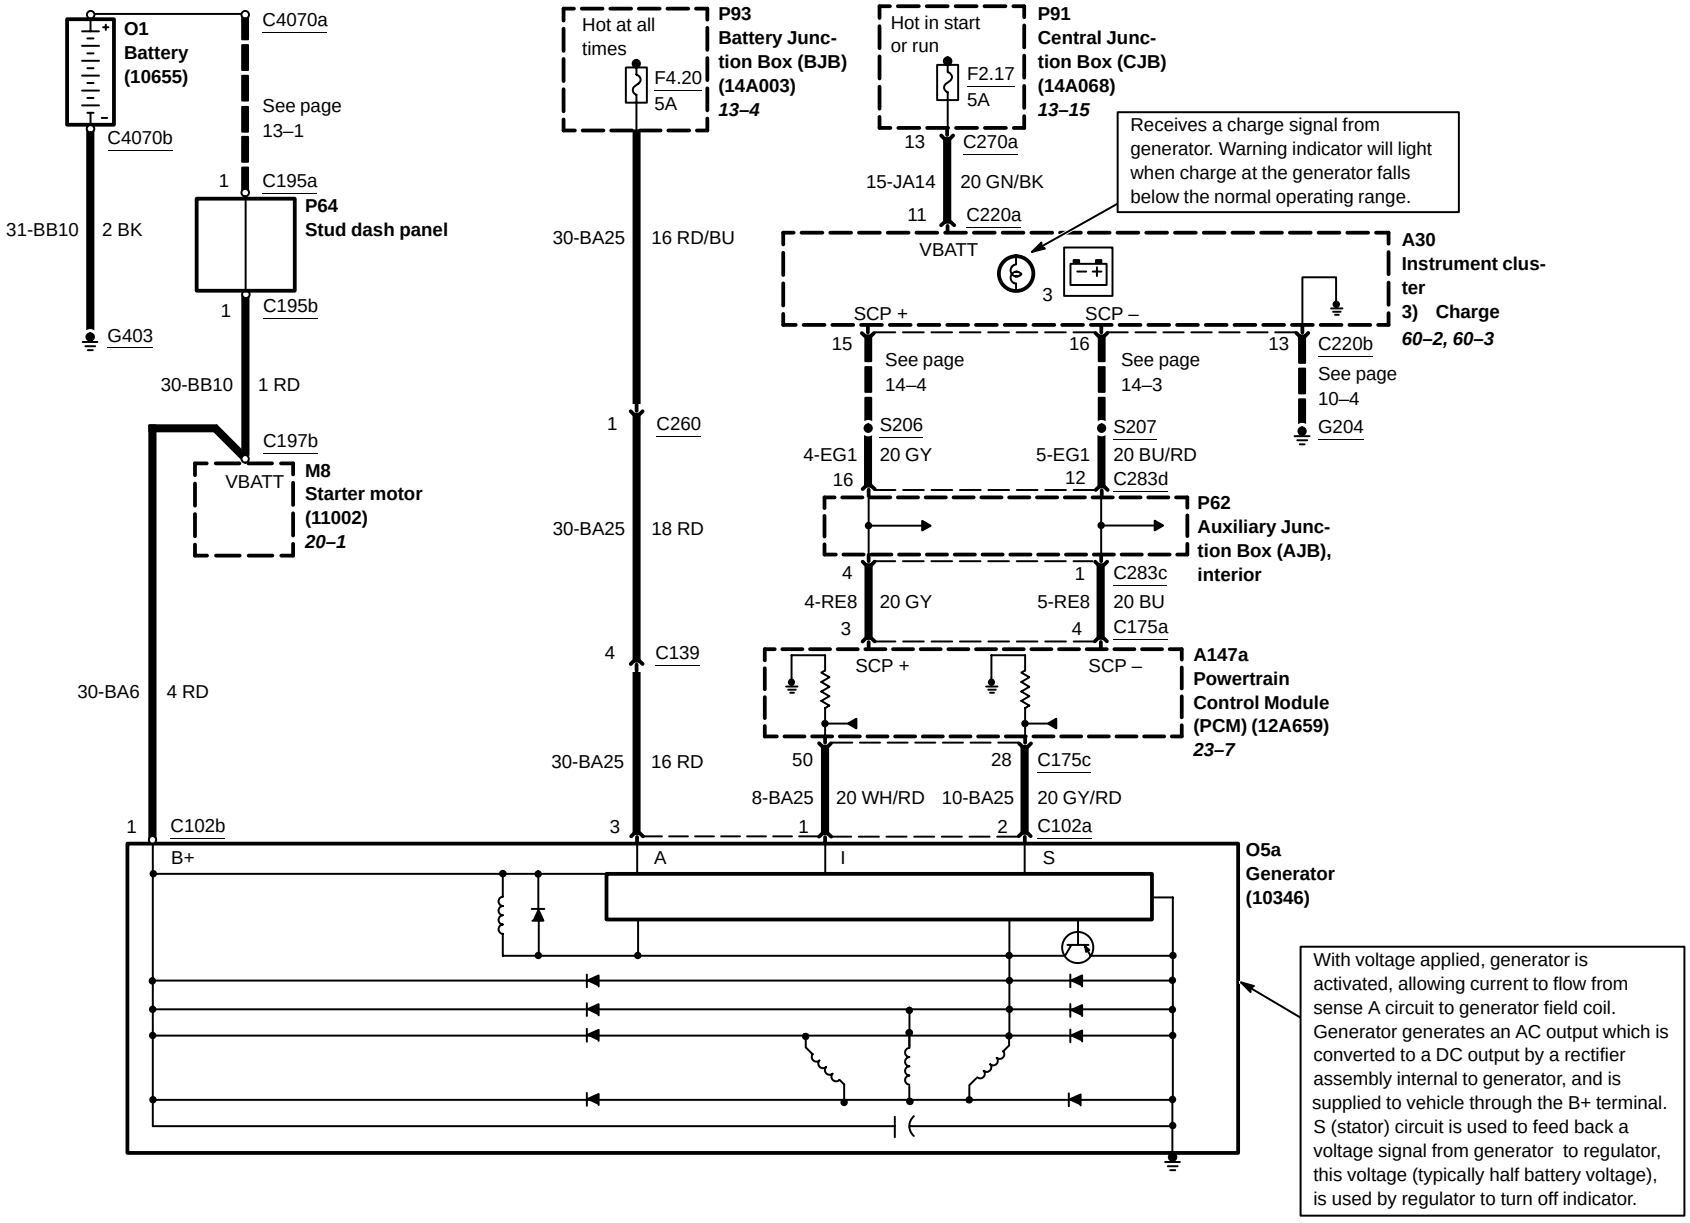
O1
Battery
(10655)
C4070a
See page
13–1
C4070b
1
C195a
P64
Stud dash panel
31-BB10
2 BK
1
C195b
G403
30-BB10
1 RD
C197b
VBATT
M8
Starter motor
(11002)
20–1
30-BA6
4 RD
1
C102b
B+
Hot at all
times
F4.20
5A
P93
Battery Junction Box (BJB)
(14A003)
13–4
30-BA25
16 RD/BU
1
C260
30-BA25
18 RD
4
C139
30-BA25
16 RD
3
A
Hot in start
or run
F2.17
5A
P91
Central Junction Box (CJB)
(14A068)
13–15
13
C270a
15-JA14
20 GN/BK
11
C220a
VBATT
3
A30
Instrument cluster
3) Charge
60–2, 60–3
SCP +
SCP –
15
See page
14–4
16
See page
14–3
13
C220b
See page
10–4
G204
S206
20 GY
S207
20 BU/RD
4-EG1
16
5-EG1
12
C283d
P62
Auxiliary Junction Box (AJB),
interior
4
4-RE8
20 GY
1
5-RE8
20 BU
C283c
3
4
C175a
A147a
Powertrain
Control Module
(PCM) (12A659)
23–7
SCP +
SCP –
50
28
C175c
8-BA25
1
20 WH/RD
10-BA25
2
20 GY/RD
C102a
I
S
O5a
Generator
(10346)
Receives a charge signal from generator. Warning indicator will light when charge at the generator falls below the normal operating range.
With voltage applied, generator is activated, allowing current to flow from sense A circuit to generator field coil. Generator generates an AC output which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal. S (stator) circuit is used to feed back a voltage signal from generator to regulator, this voltage (typically half battery voltage), is used by regulator to turn off indicator.