C692

8C290

N75
A/C compressor
cycling switch

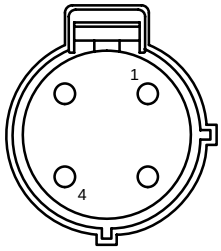

F04083

Pin	Circuit	Circuit Function
1	15S-FA38 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	–	not used
3	–	not used
4	15S-FA17 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched

C705

12A522

B40
Exhaust Pressure
Transducer (EPT)
sensor

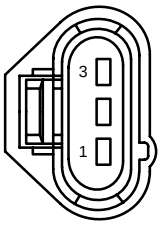

F03071

Pin	Circuit	Circuit Function
1	7-RJ7 (YE/BU)	Voltage D.C. supplied at all times (sensor)
2	9-RJ7 (BN/BU)	Sensor signal return (reference/ground)
3	8-RJ7 (WH/BU)	Sensor signal

C703

9H589

B8
Throttle Position
Sensor (TPS)

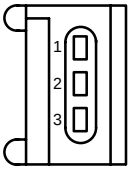

F03027

Pin	Circuit	Circuit Function
1	7-RJ28 (YE)	Voltage D.C. supplied at all times (sensor)
2	8-RJ28 (WH)	Sensor signal
3	9-RJ28 (BN)	Sensor signal return (reference/ground)

C707

14A584

M67
Door lock motor,
driver side

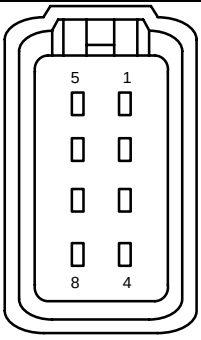

F08083

Pin	Circuit	Circuit Function
1	33-AA59 (YE/BK)	Switched between: Battery voltage, Ground or Open
2	32-AA59 (WH/BK)	Switched between: Battery voltage, Ground or Open
3	33-AA60 (YE)	Switched between: Battery voltage, Ground or Open
4	31S-AA64 (BK/GN)	Ground, switched
5	31S-AA61 (BK/BU)	Ground, switched
6	31-AA58 (BK)	Ground
7	31S-AA62 (BK/WH)	Ground, switched
8	31S-AA63 (BK/OG)	Ground, switched