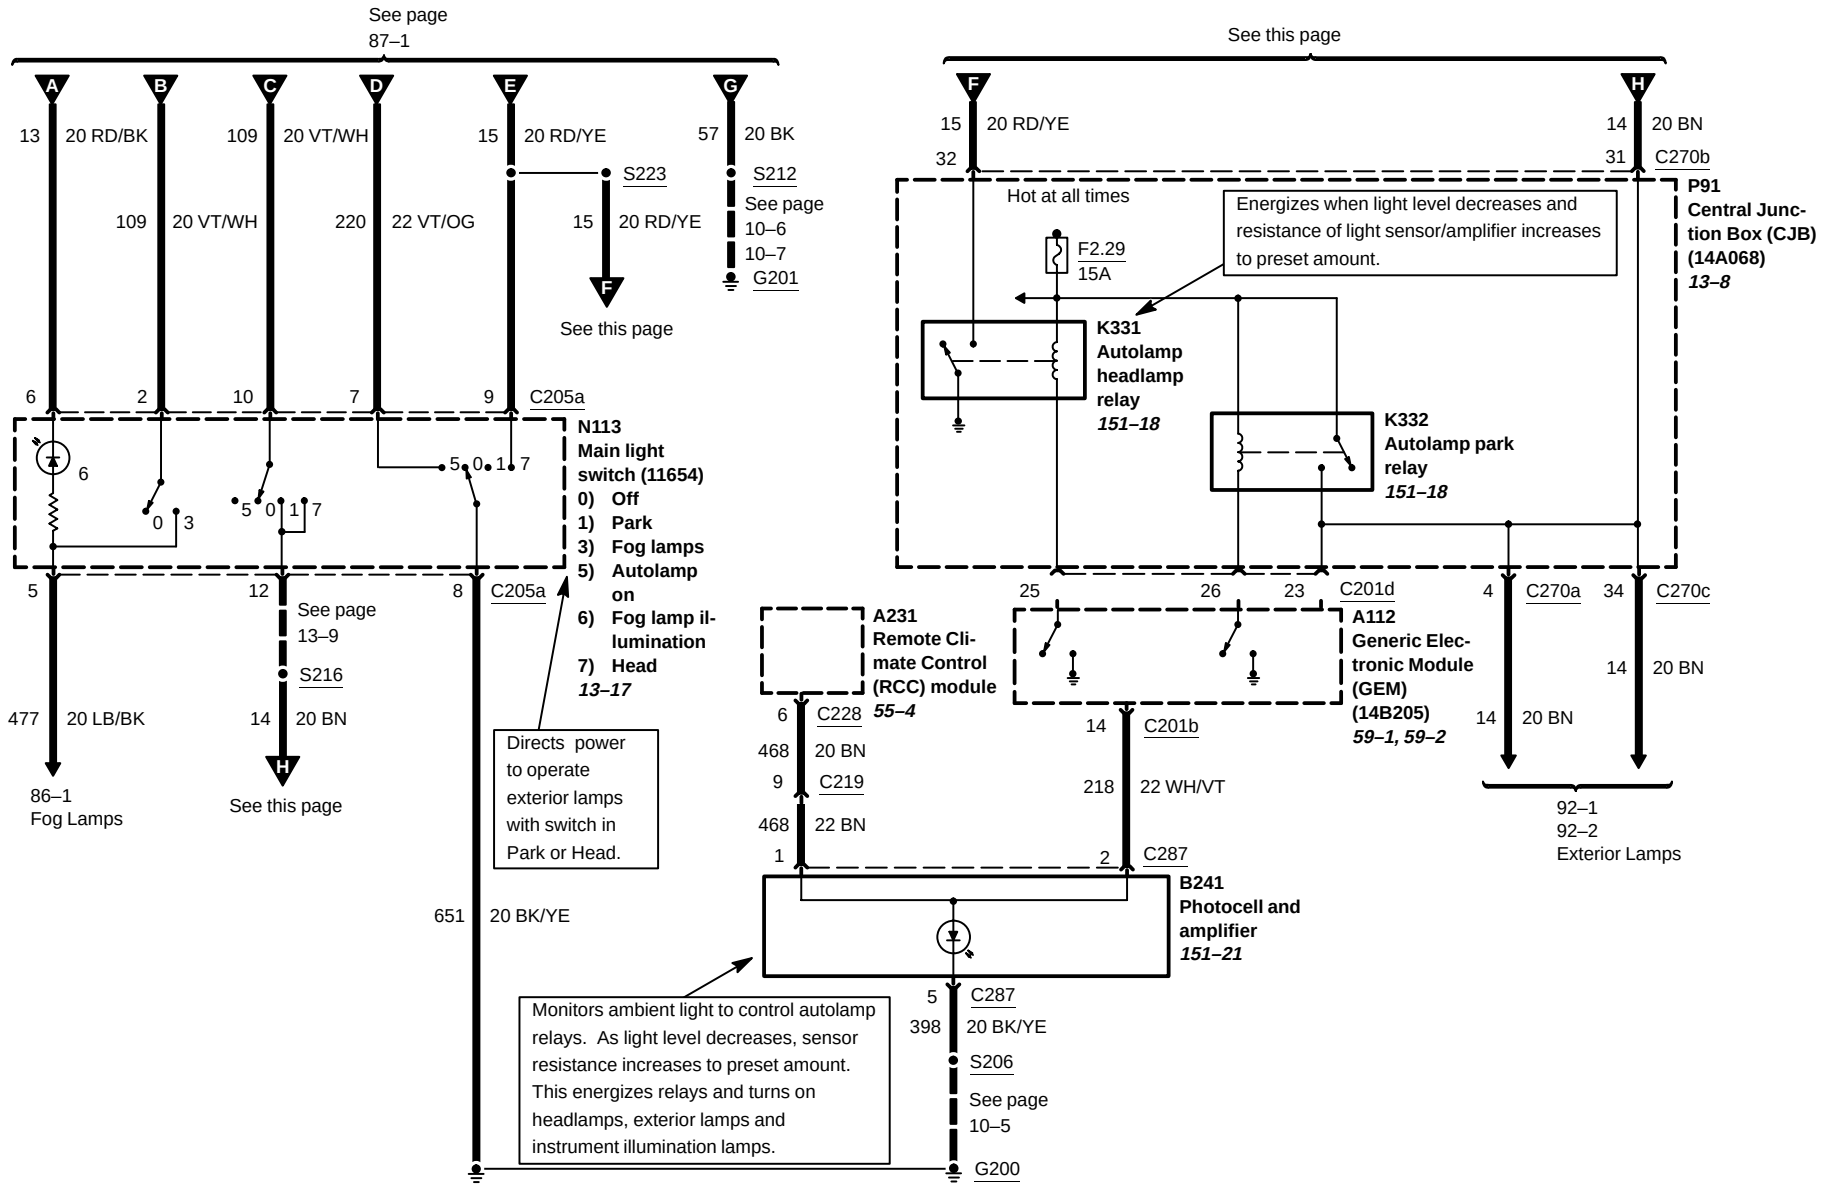
See page 87–1
A
B
C
D
E
G
13 20 RD/BK
109 20 VT/WH
15 20 RD/YE
57 20 BK
S223
S212
See page 10–6
10–7
G201
109 20 VT/WH
220 22 VT/OG
15 20 RD/YE
F
See this page
6
2
10
7
9
C205a
N113
Main light switch (11654)
0) Off
1) Park
3) Fog lamps
5) Autolamp on
6) Fog lamp illumination
7) Head
13–17
5
12
8
C205a
See page 13–9
S216
477 20 LB/BK
14 20 BN
H
86–1
Fog Lamps
See this page
Directs power to operate exterior lamps with switch in Park or Head.
651 20 BK/YE
See this page
F
H
15 20 RD/YE
14 20 BN
32
31
C270b
Hot at all times
F2.29
15A
Energizes when light level decreases and resistance of light sensor/amplifier increases to preset amount.
P91
Central Junction Box (CJB)
(14A068)
13–8
K331
Autolamp headlamp relay
151–18
K332
Autolamp park relay
151–18
A231
Remote Climate Control (RCC) module
55–4
6 C228
468 20 BN
9 C219
468 22 BN
1
25
26
23
C201d
A112
Generic Electronic Module (GEM)
(14B205)
59–1, 59–2
14 C201b
218 22 WH/VT
2 C287
4
C270a
34
C270c
14 20 BN
14 20 BN
92–1
92–2
Exterior Lamps
B241
Photocell and amplifier
151–21
5 C287
398 20 BK/YE
S206
See page 10–5
G200
Monitors ambient light to control autolamp relays. As light level decreases, sensor resistance increases to preset amount. This energizes relays and turns on headlamps, exterior lamps and instrument illumination lamps.