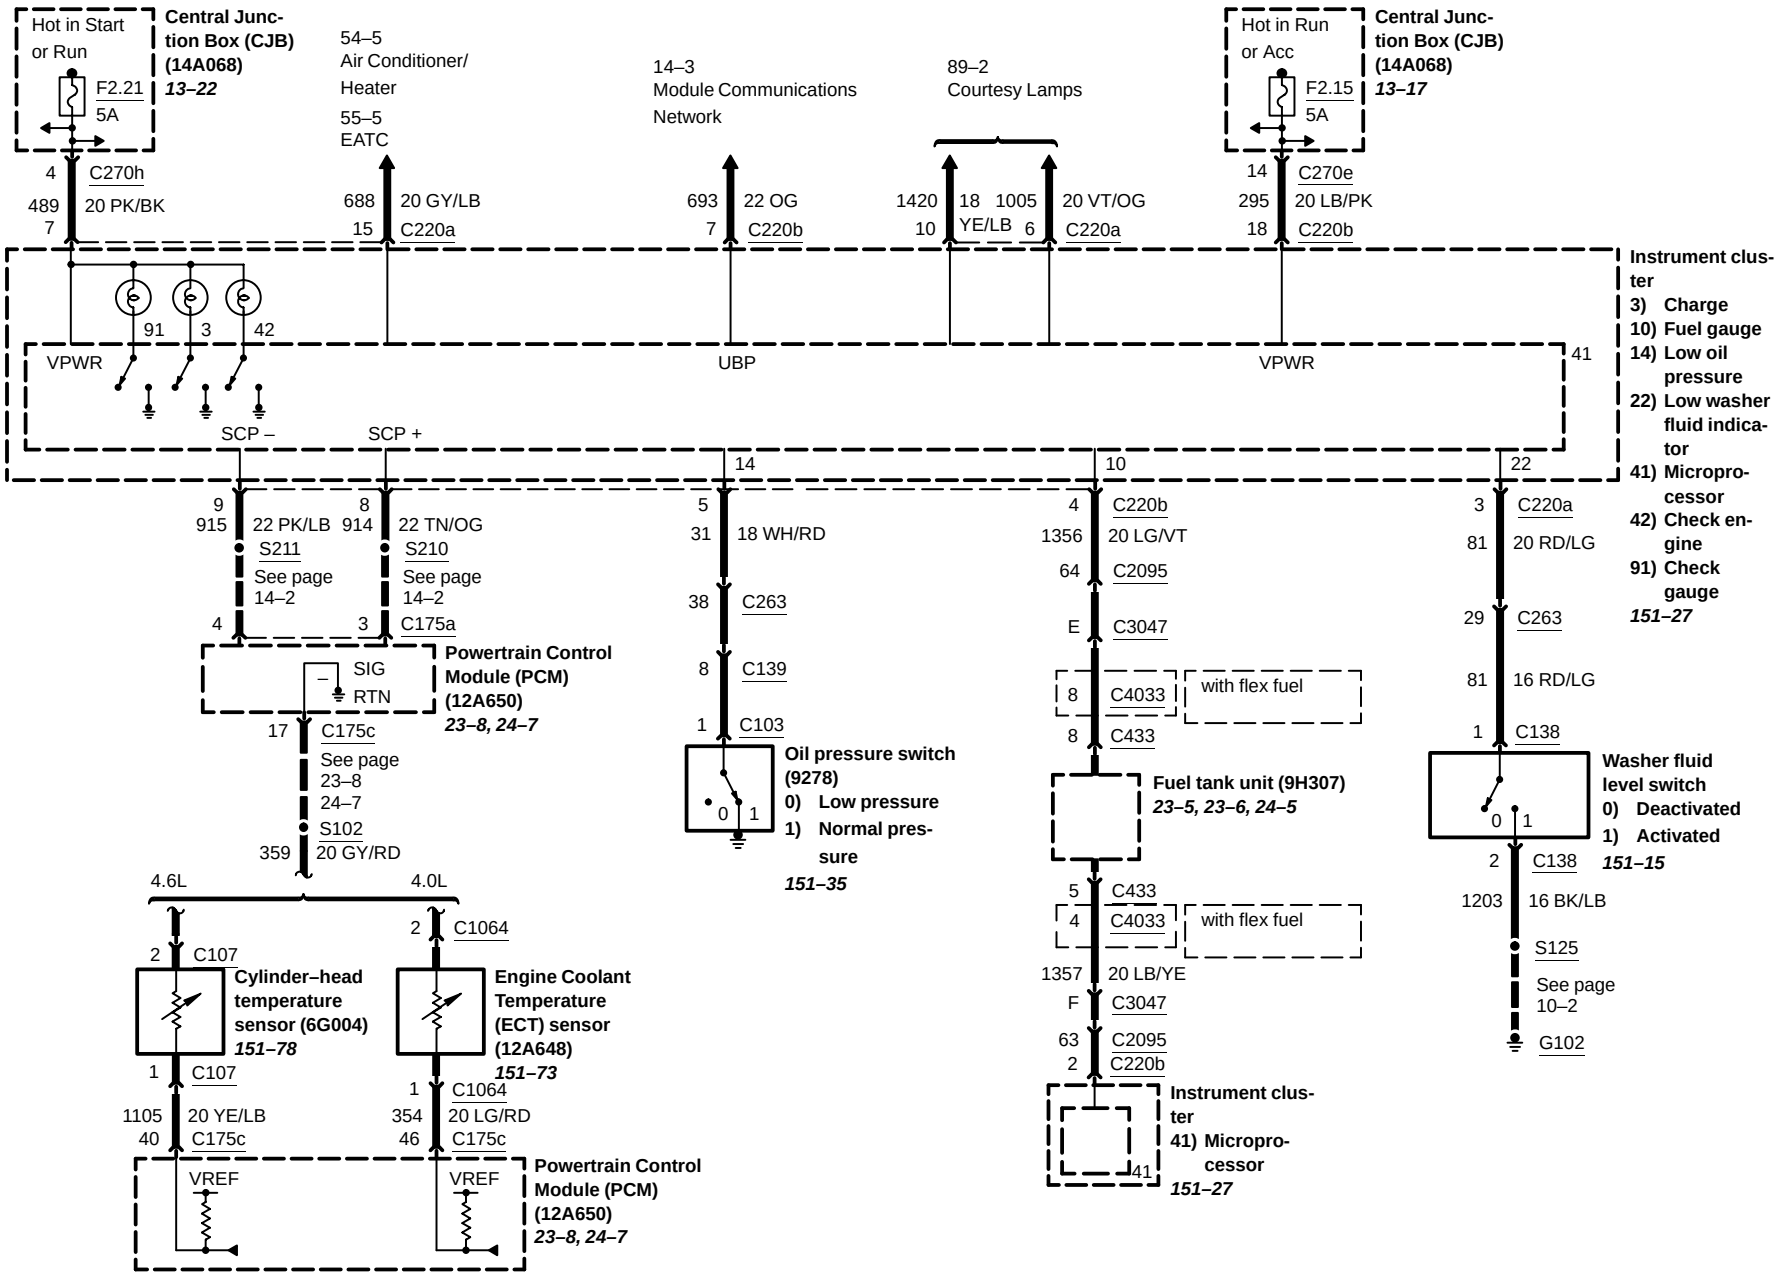
Hot in Start or Run
Central Junction Box (CJB) (14A068) 13–22
F2.21 5A
54–5 Air Conditioner/ Heater
55–5 EATC
14–3 Module Communications Network
89–2 Courtesy Lamps
Hot in Run or Acc
Central Junction Box (CJB) (14A068) 13–17
F2.15 5A
4 C270h
489 20 PK/BK
7
688 20 GY/LB
15 C220a
693 22 OG
7 C220b
1420 18 YE/LB 1005 20 VT/OG
10 6 C220a
14 C270e
295 20 LB/PK
18 C220b
91 3 42
VPWR
UBP
VPWR
41
Instrument cluster
3) Charge
10) Fuel gauge
14) Low oil pressure
22) Low washer fluid indicator
41) Microprocessor
42) Check engine
91) Check gauge
151–27
SCP –
SCP +
14
10
22
9 915 22 PK/LB S211 See page 14–2 4
8 914 22 TN/OG S210 See page 14–2 3 C175a
Powertrain Control Module (PCM) (12A650) 23–8, 24–7
SIG
RTN
17 C175c
See page 23–8 24–7
S102
359 20 GY/RD
5 31 18 WH/RD
38 C263
8 C139
1 C103
Oil pressure switch (9278)
0) Low pressure
1) Normal pressure
151–35
4 C220b
1356 20 LG/VT
64 C2095
E C3047
8 C4033 with flex fuel
8 C433
Fuel tank unit (9H307) 23–5, 23–6, 24–5
5 C433
4 C4033 with flex fuel
1357 20 LB/YE
F C3047
63 C2095
2 C220b
41
Instrument cluster
41) Microprocessor
151–27
3 C220a
81 20 RD/LG
29 C263
81 16 RD/LG
1 C138
Washer fluid level switch
0) Deactivated
1) Activated
151–15
2 C138
1203 16 BK/LB
S125
See page 10–2
G102
4.6L
4.0L
2 C107
Cylinder–head temperature sensor (6G004) 151–78
1 C107
1105 20 YE/LB
40 C175c
2 C1064
Engine Coolant Temperature (ECT) sensor (12A648) 151–73
1 C1064
354 20 LG/RD
46 C175c
VREF
VREF
Powertrain Control Module (PCM) (12A650) 23–8, 24–7