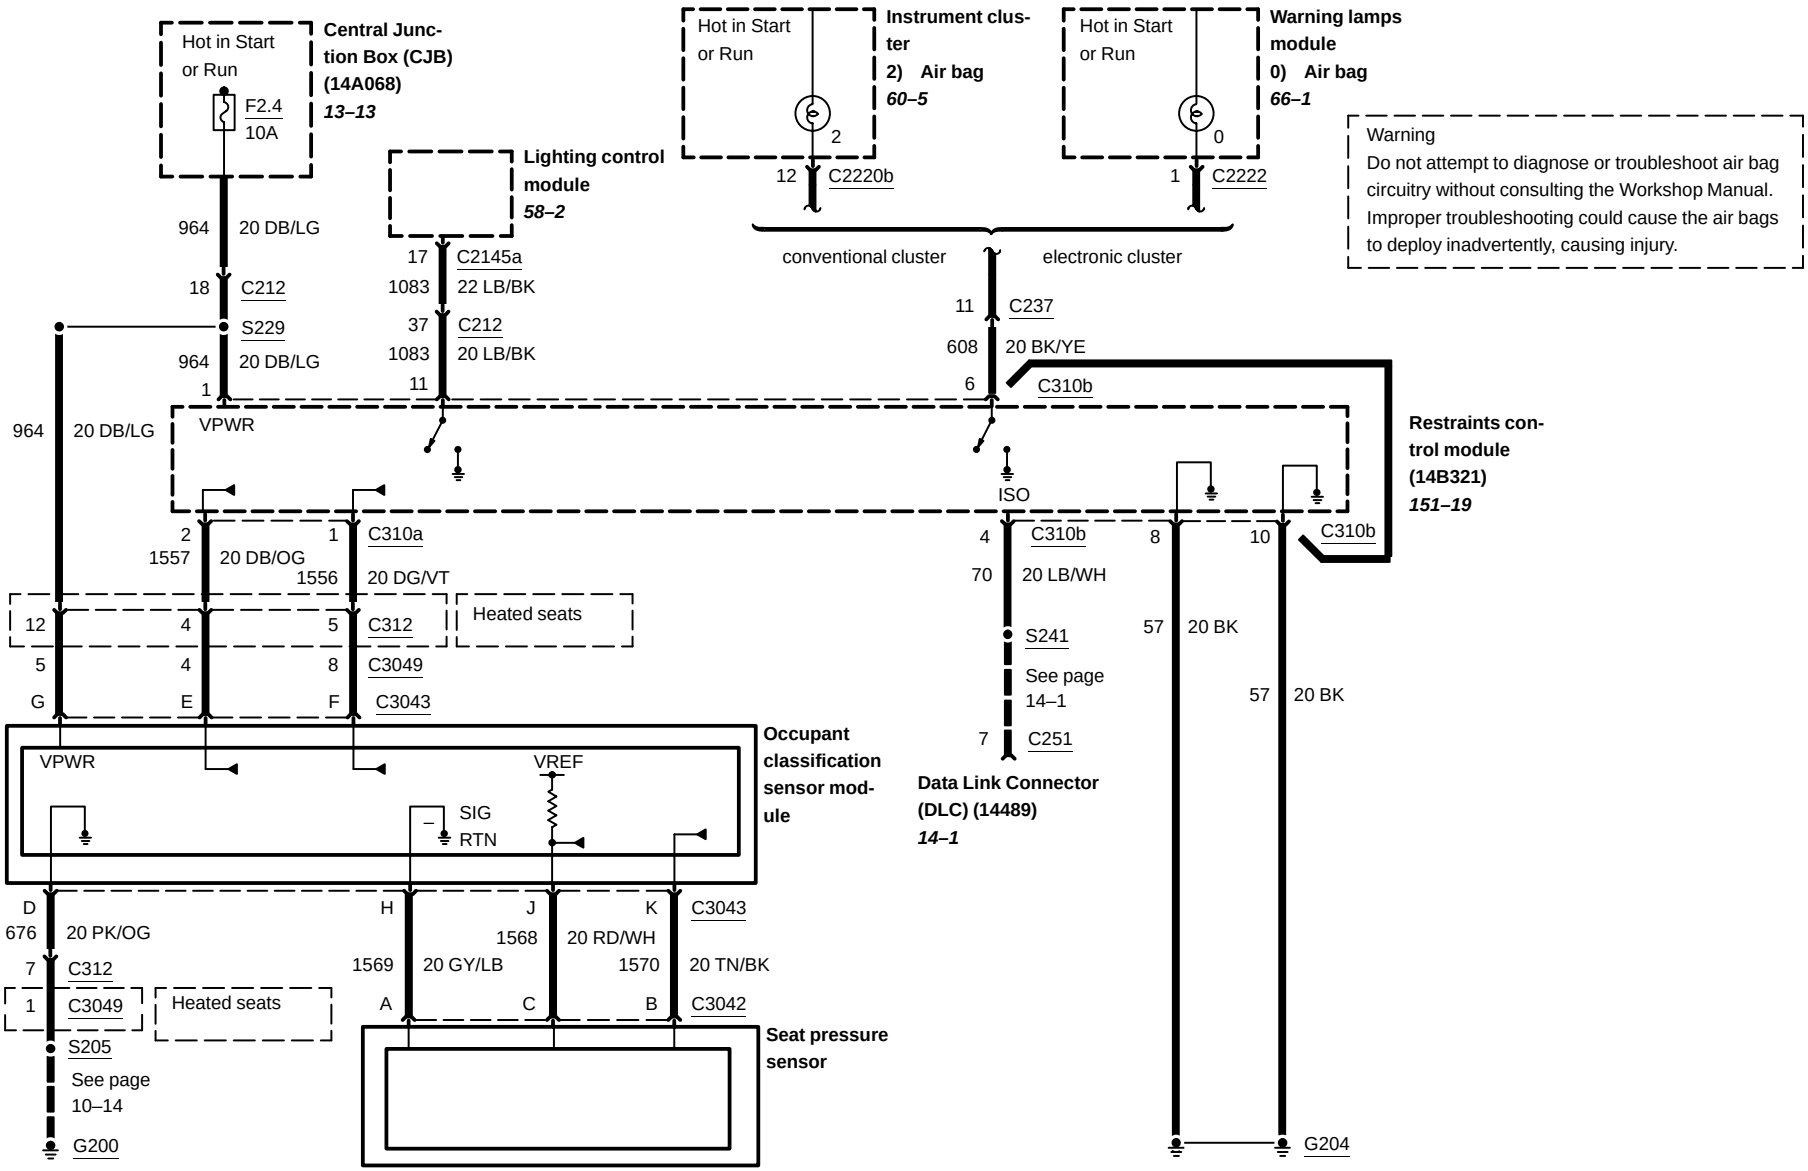
Hot in Start or Run
Central Junction Box (CJB) (14A068) 13–13
F2.4
10A
964 20 DB/LG
18 C212
S229
964 20 DB/LG
1
964 20 DB/LG
VPWR
Lighting control module 58–2
17 C2145a
1083 22 LB/BK
37 C212
1083 20 LB/BK
11
Hot in Start or Run
Instrument cluster
2) Air bag 60–5
2
12 C2220b
conventional cluster
Hot in Start or Run
Warning lamps module
0) Air bag 66–1
0
1 C2222
electronic cluster
11 C237
608 20 BK/YE
6 C310b
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
Restraints control module (14B321) 151–19
ISO
2 1 C310a
1557 20 DB/OG
1556 20 DG/VT
12 4 5 C312
Heated seats
5 4 8 C3049
G E F C3043
4 C310b
70 20 LB/WH
S241
See page 14–1
7 C251
Data Link Connector (DLC) (14489) 14–1
8 10 C310b
57 20 BK
57 20 BK
G204
Occupant classification sensor module
VPWR
VREF
SIG
RTN
D H J K C3043
676 20 PK/OG
1568 20 RD/WH
1569 20 GY/LB
1570 20 TN/BK
7 C312
1 C3049
Heated seats
A C B C3042
S205
See page 10–14
G200
Seat pressure sensor