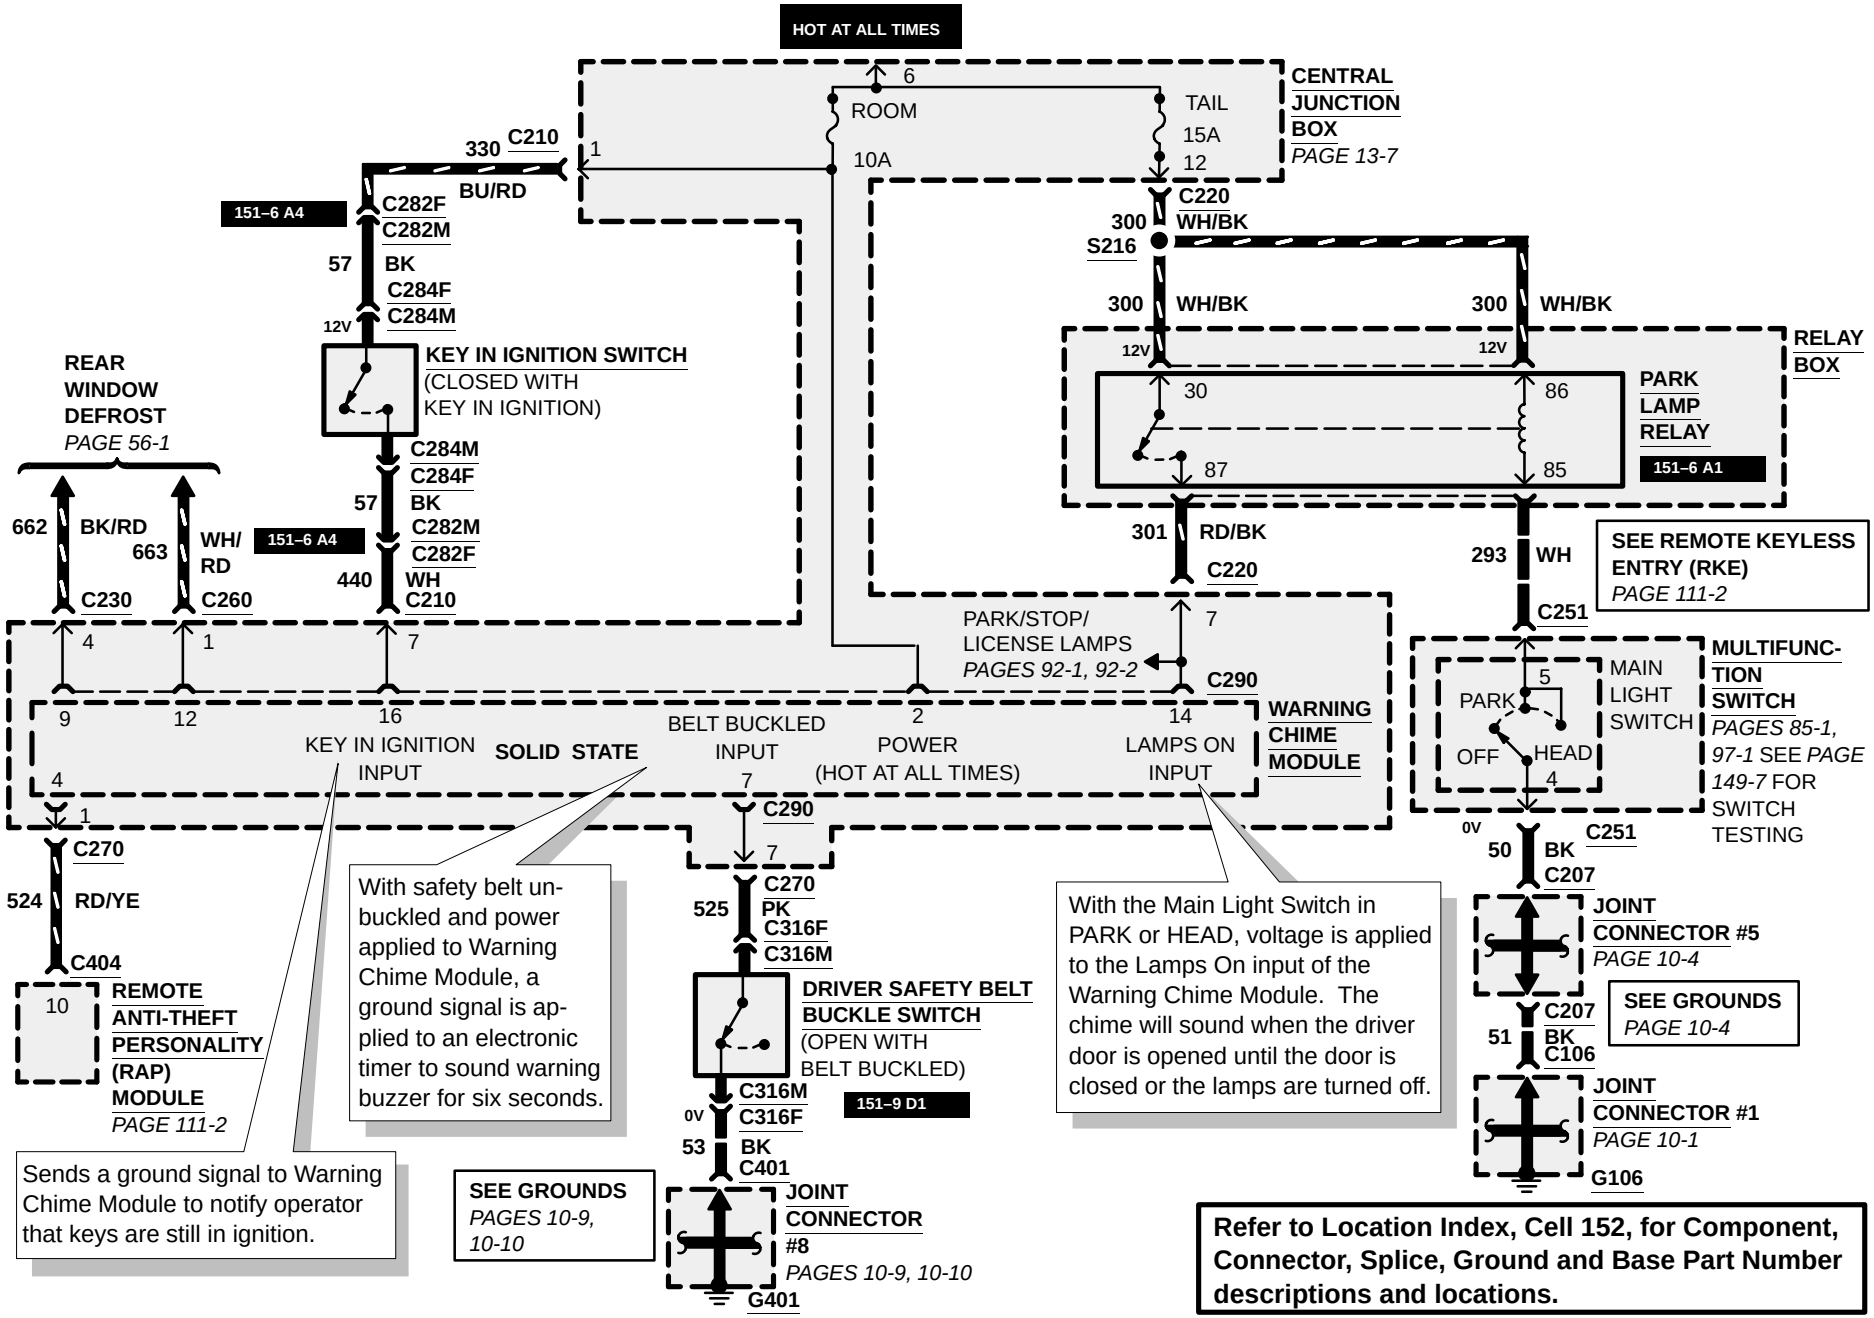
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGE 13-7
ROOM
TAIL
15A
10A
330 C210
BU/RD
151–6 A4
C282F
C282M
57 BK
C284F
C284M
12V
KEY IN IGNITION SWITCH
(CLOSED WITH KEY IN IGNITION)
REAR WINDOW DEFROST
PAGE 56-1
662 BK/RD
663 WH/RD
C230
C260
C284M
C284F
57 BK
C282M
C282F
440 WH
C210
151–6 A4
300 C220
WH/BK
S216
300 WH/BK
300 WH/BK
12V
12V
RELAY BOX
PARK LAMP RELAY
151–6 A1
30
86
87
85
301 RD/BK
C220
293 WH
C251
SEE REMOTE KEYLESS ENTRY (RKE)
PAGE 111-2
PARK/STOP/ LICENSE LAMPS
PAGES 92-1, 92-2
C290
MULTIFUNCTION SWITCH
PAGES 85-1, 97-1 SEE PAGE 149-7 FOR SWITCH TESTING
PARK
OFF
HEAD
MAIN LIGHT SWITCH
WARNING CHIME MODULE
SOLID STATE
KEY IN IGNITION INPUT
BELT BUCKLED INPUT
POWER (HOT AT ALL TIMES)
LAMPS ON INPUT
C270
524 RD/YE
C404
REMOTE ANTI-THEFT PERSONALITY (RAP) MODULE
PAGE 111-2
C290
C270
525 PK
C316F
C316M
DRIVER SAFETY BELT BUCKLE SWITCH
(OPEN WITH BELT BUCKLED)
C316M
C316F
0V
53 BK
C401
151–9 D1
JOINT CONNECTOR #8
PAGES 10-9, 10-10
G401
0V
50 BK
C251
C207
JOINT CONNECTOR #5
PAGE 10-4
C207
51 BK
C106
JOINT CONNECTOR #1
PAGE 10-1
G106
SEE GROUNDS
PAGE 10-4
SEE GROUNDS
PAGES 10-9, 10-10
With safety belt unbuckled and power applied to Warning Chime Module, a ground signal is applied to an electronic timer to sound warning buzzer for six seconds.
Sends a ground signal to Warning Chime Module to notify operator that keys are still in ignition.
With the Main Light Switch in PARK or HEAD, voltage is applied to the Lamps On input of the Warning Chime Module. The chime will sound when the driver door is opened until the door is closed or the lamps are turned off.
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.